

CALIBRATING THE HYGROSTAT

1. Remove the housing's cover
2. Measure or assess relative humidity near by the hair elements
3. Adjust the control knob to measured or assessed reading
4. Adjust the calibration nut to position where the micro switch clicks when the control knob is turned from the setpoint back and forth
5. Adjust the control knob to wanted setpoint
6. Attach the housing's cover back to place

Hygostat must be cleaned properly after every drying season.

