
CONNECTING THE COOLING HOUR CLOCK

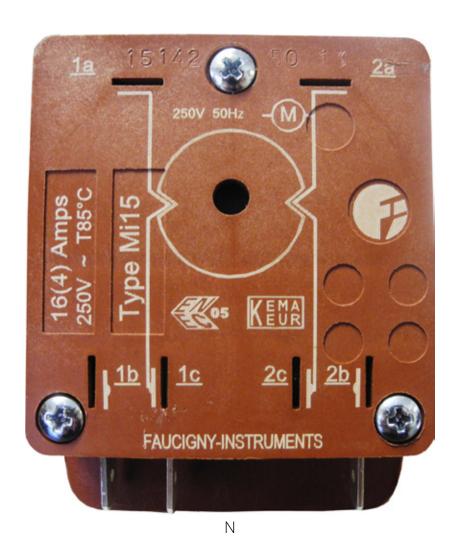

- 1a = FROM THE SWITCH AS IN THE AUTO POSITION
- 1b = RUNNING INFORMATION (fan + elevator)
- 2a = FROM THE OUTLET THERMOSTAT (the engine running information)
- 2b = COOLING'S AUXILIARY RELAY / LOCKING
- N = ZERO