

ASSEMBLY MANUAL SILO SG275T60

MANSG275T60IN

This manual has been prepared to help you to use and assemble your silo and accessories correctly. We recommend that you follow them closely to avoid risks incurred from faulty assembly or from using the equipment incorrectly. Failure to follow the instructions can lead to significant personal injury or even death. **Please use caution to ensure your safety.**

This product **should be inspected** as soon as it is received. The client is responsible for ensuring that all the quantities are correct and the material is in perfect condition. Any damage or discrepancy between the quantities listed on the Packing List should be described in your claims report to the shipping company. Our responsibility for damage or missing items in the product ends as soon as the client has signed the correct receipt for it. In any case, it is important to retain all papers and documentation associated with the silo and/or its components.

Until assembly time, the product **should be stored** in a protected location with the lowest humidity possible and protected from direct contact with the floor. Never leave the material out in the weather.

The **guarantee** supplied with the equipment you have purchased is only valid when assembled, used, and maintained correctly.

As manufacturers, our primary concern is the safety of our customers, their employees and livestock. Remember, safety is everyone's responsibility, and that is why it is important for you as proprietor and operator to know and understand the risks and precautions that should be used when operating this equipment. It is equally important that everyone who works or operates in or near the silo area be informed about the risks.

Before Starting:

Decide where you are going to build your silo. Make sure that it is a safe location and above all, use extreme caution if there is the possibility that electric lines might have contact with your silo. Review all the tools that you will need to use during the assembly, and test them to make sure that their security measures are in place and that they are functioning correctly.

During Assembly:

All personnel involved in the assembly and construction of the silo should always wear personal protective equipment. This includes wearing gloves, protective footwear with steel toecaps, helmet, ear protectors, protective glasses and if necessary, respirator masks. Ground all electrical devices.

Keep in mind that many of the components of your silo are extremely heavy. It is important to use correct lifting techniques that prevent muscle injuries when lifting and moving these pieces. Avoid excessive overloads.

Despite all the care taken during manufacturing, it is not always possible to avoid all the corners and edges that can cause you significant injury. To avoid injury, always handle the pieces with safety gloves and use extreme care.

Make sure that there is no moving component that could take you by surprise during the assembly.

When assembling the silo on its side, it could roll at any time and potentially trap an assembler. For this reason, the silo should always be correctly anchored to the ground.

When effecting any operation in the upper parts of the silo, it is important to do so only with tools that have suspension systems to keep them from falling.

Flag any areas where there is risk of possible danger.

During operation:

Always have telephones on hand ready to contact emergency services.

Make sure that all the safety systems are in perfect working condition and placed correctly. Keep the silo and its surroundings clean, avoiding any accumulation of decomposing feed and any type of scrap.

Maintain the construction in good condition. Always replace any pieces in poor condition and never use any material that has not been supplied by the silo manufacturer, as this could result in problems using the material that have not been anticipated by our calculations.

Do not undertake any modification without authorization, as this could affect the operation, safety, or the lifetime of the equipment.

To avoid possible electric shock, it is very important to maintain all the electric protective mechanisms of the devices installed on the site. Make sure that all the electric systems are properly grounded.

You should be alert to any danger signals while you are still in the work zone of the site.

When making any repair or maintenance procedure on the silo, all electrical devices should be disconnected, and their circuits should be locked so that no accidental start-ups can take place. If your silo comes with a door in the cylinder, never attempt to open it when the silo is loaded.

When making repairs or effecting maintenance procedures on the inside of the silo, it must be completely empty. Bear in mind that entering a loaded silo represents a real danger of serious injury including death.

In case it is necessary to go into the silo, **the following conditions must be in place:**









1. The electric power supply has been disconnected and appropriate measures have been taken to prevent an accidental connection.
2. The centre of the silo has been secured.
3. A harness and safety cord are in place appropriately attached.
4. Breathing equipment is available.
5. During the whole time that an operator is inside the silo there should be another on the outside.









If your silo comes equipped with a ladder, it may be used in two different configurations. One with the ladder in fixed position that can only be climbed when there is some protection that prevents access to the silo zone. The other option is to use the hand ladder, which can always be climbed, but has no protection to prevent access to the silo zone. In whichever case, **extreme caution should be used when ascending the silo:**


1. the maximum load for the ladder is 200 kg.
2. Never climb the silo if you observe any damage or incorrect installation of the ladder.
3. Keep the scored surface of the ladder rungs clean and free of any encrusted material.
4. Always remember: ascending a silo is not without risks. For this reason, when you ascend the silo you should wear adequate anti-slip footwear, gloves, and a safety harness.
5. When ascending or descending the silo, always look at the ladder and make sure that you have a good grip.
6. Never ascend the silo if your physical condition is not adequate for the task (fatigue, sleepiness, illness are among the effects of medicines, alcohol, and drugs.)
7. The hand ladder is exclusively to access the fixed ladder of the silo. When using it position it at the most vertical angle possible and never use it in the horizontal position as a gateway.
8. To access the roof, be sure to step only on the ladder rungs. Never step on any of the sectors of the roof.

To assemble the silo the following tools will be needed:


1. Adjustable Wrench
2. Ratchet with extension and set of nozzles
3. Set of fixed wrenches no. 13, 17, and 19.
4. Flat point screw removers
5. 2 35/40 cm pincers (S525).
6. Hammer
7. Drill (at least 450W power) with 14mm bit
8. Concrete drill with 24 mm bit
9. High-impact screw driver with no 13, 17, and 19 size heads

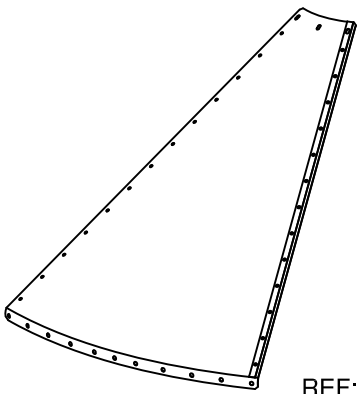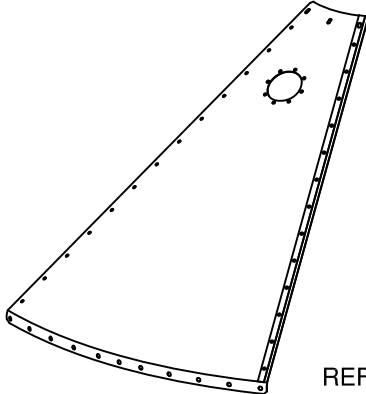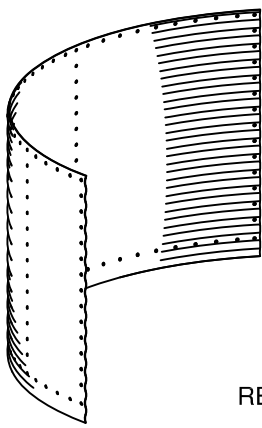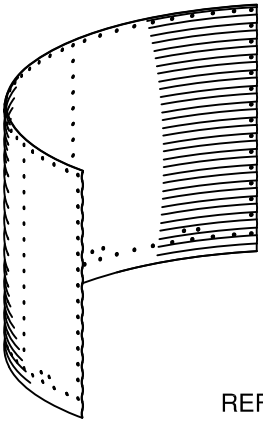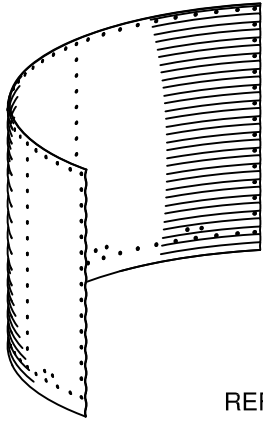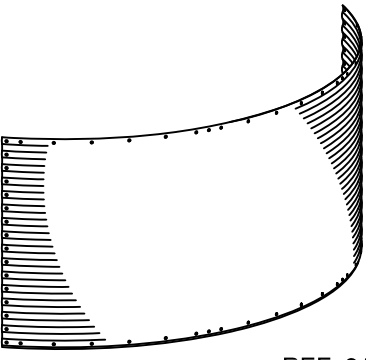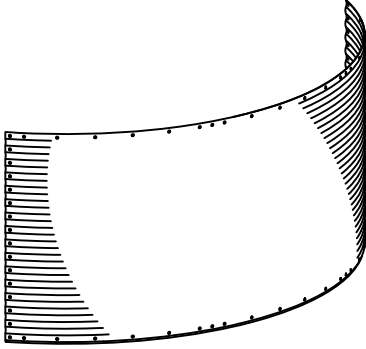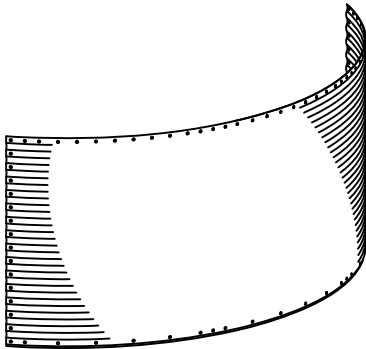 <p>Parts 1 REF: 31G100014A012</p>	 <p>Parts 2 REF: 31G100027A012</p>
 <p>Parts 3 REF: 31G100068A010</p>	 <p>Parts 4 REF: 31G100212A012</p>
 <p>Parts 5 REF: 31G100212A015</p>	 <p>Parts 6 REF: 31G100072A010</p>
 <p>Parts 7 REF: 31G100072A012</p>	 <p>Parts 8 REF: 31G100069A010</p>

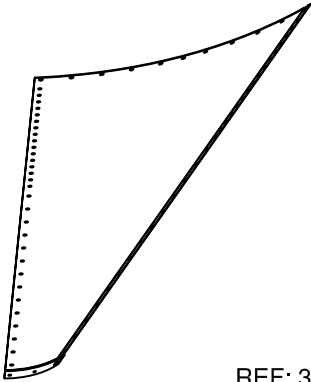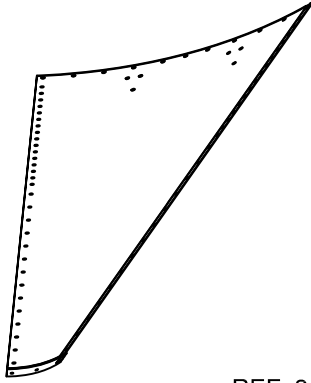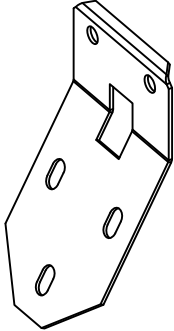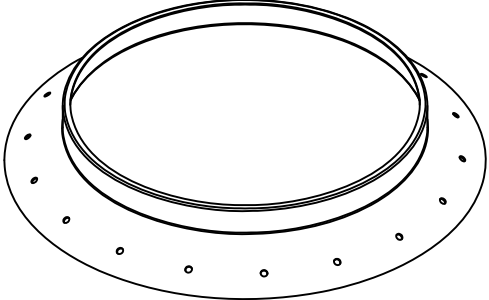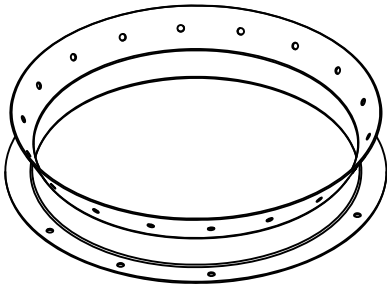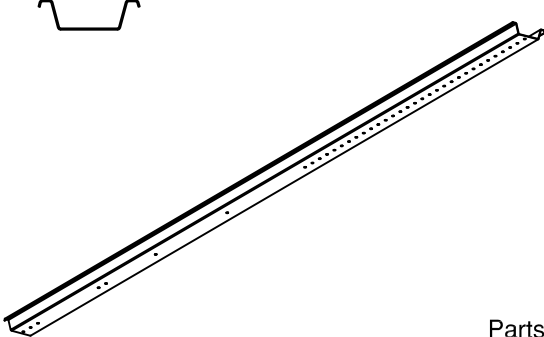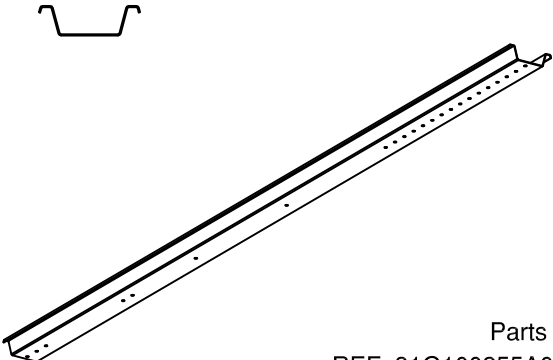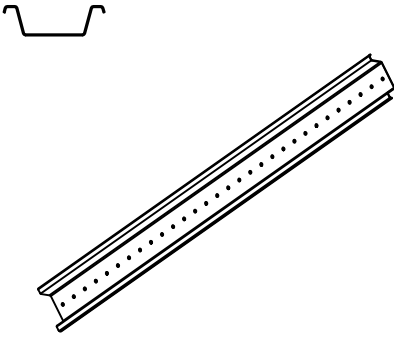
 <p>Parts 9 REF: 31G100015A012</p>	 <p>Parts 10 REF: 31G100160A015</p>
 <p>Parts 11 REF: 31G100179A030</p>	 <p>Parts 12 REF: 31G100075A020</p>
 <p>Parts 13 REF: 31G100076A030</p>	 <p>Parts 14 REF: 31G100285A030</p>
 <p>Parts 15 REF: 31G100255A030</p>	 <p>Parts 16 REF: 31G100259A030</p>

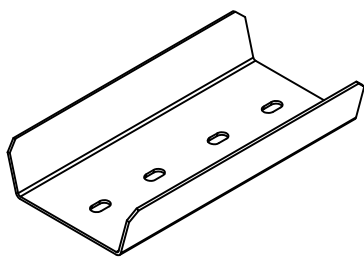


Parts 17
REF: 31G100159A030

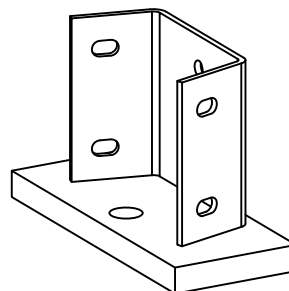


Parts 18
REF: 31G100130A000

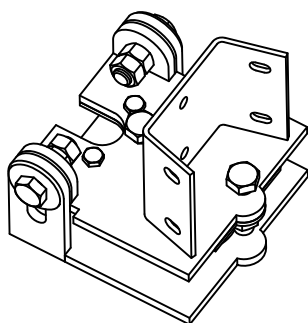


Parts 19
REF: ASGPESAJE

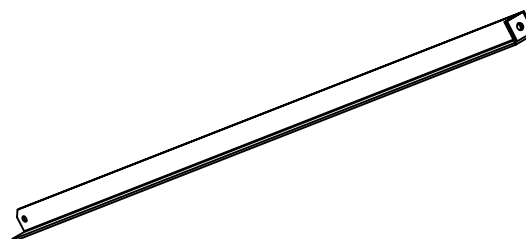


Parts 20
REF: 31G100261A030

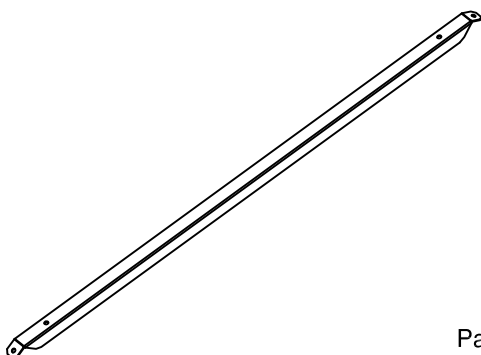


Parts 21
REF: 31G100034A030

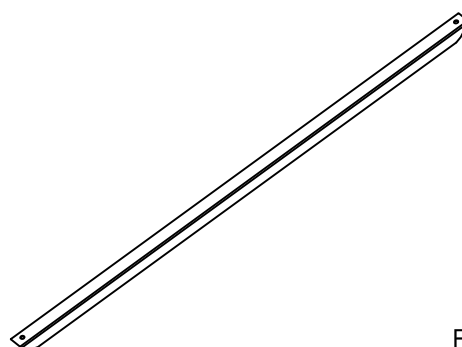


Parts 22
REF: 31G100034A030

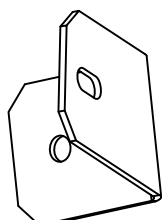


Parts 23
REF: 31G100123A030

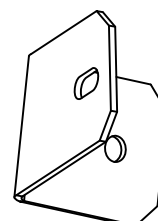


Parts 24
REF: 31G100124A030

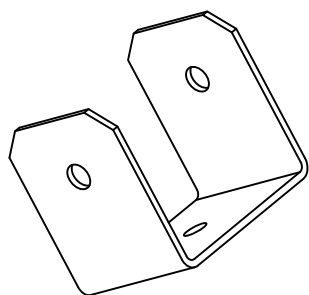


Parts 25
REF: 31G100126A030

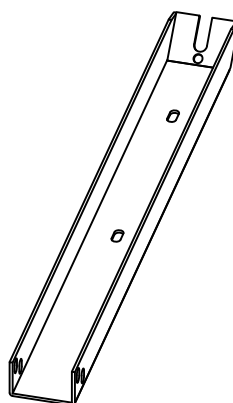


Parts 26
REF: 31G100128A030

 









Parts 27
REF: 31G100298A030

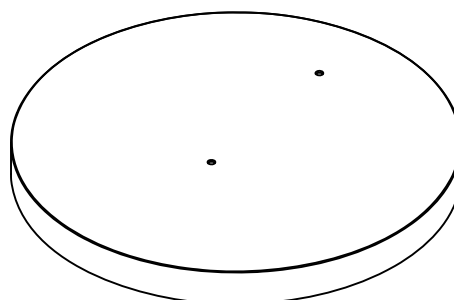


Parts 28
REF: 31G100125A020

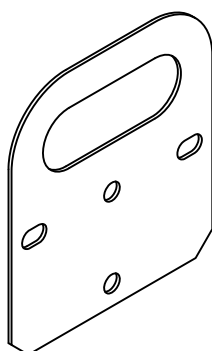


Parts 29
REF: 31G100074A050

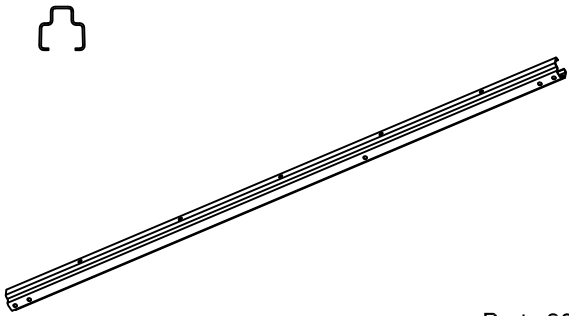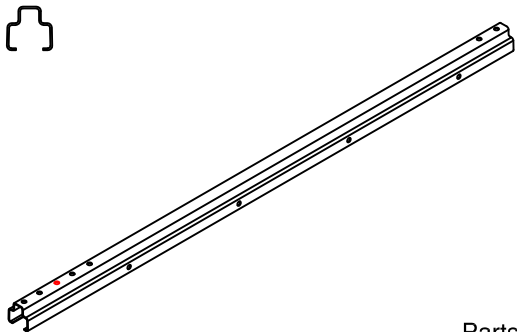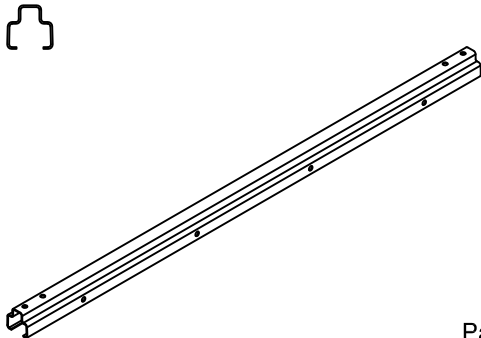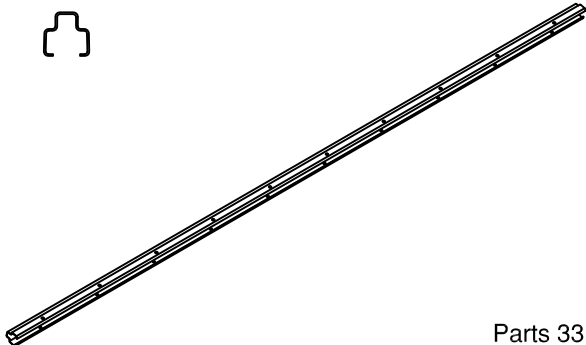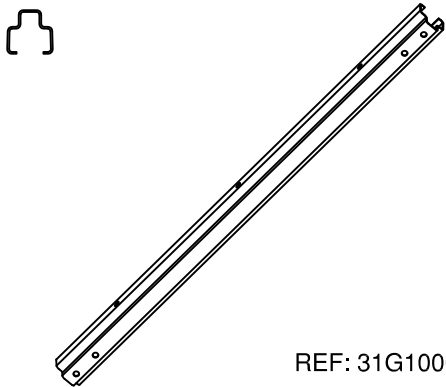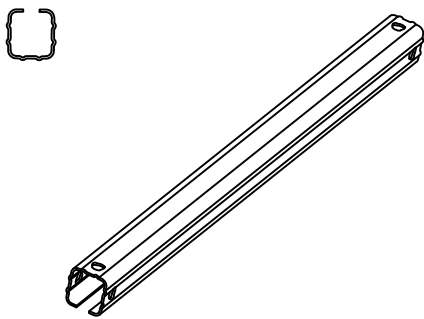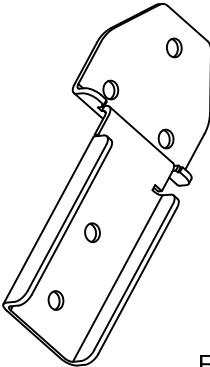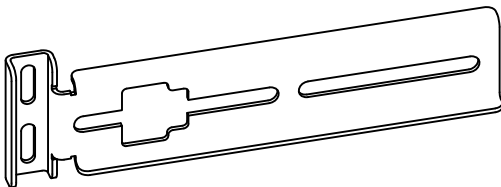
 <p>Parts 30 REF: 31G100262A020</p>	 <p>Parts 31 REF: 31G100001A015</p>
 <p>Parts 32 REF: 31G100000A015</p>	 <p>Parts 33 REF: 31G100277A020</p>
 <p>Parts 34 REF: 31G100003A015</p>	 <p>Parts 35 REF: 31G100009A015</p>
 <p>Parts 36 REF: 31G100100A000</p>	 <p>Parts 37 REF: 31G100094A030</p>

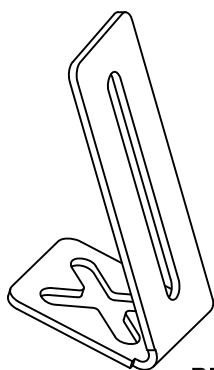


Parts 38
REF: 31G100092A030

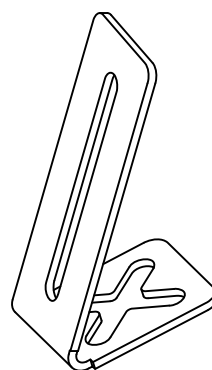


Parts 39
REF: 31G100093A030

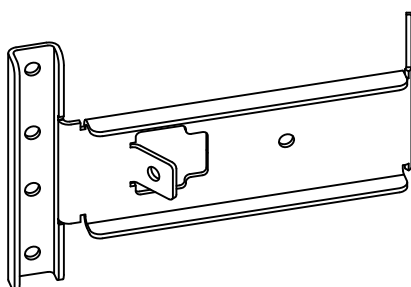


Parts 40
REF: 31G100047A030

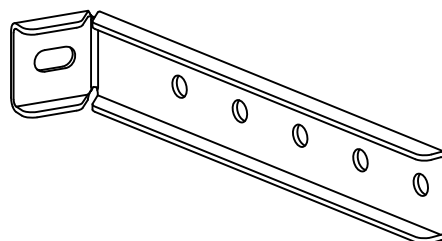


Parts 41
REF: 31G100095A030

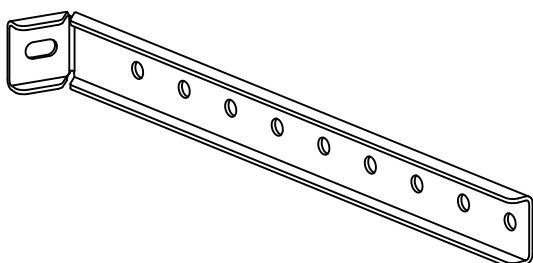


Parts 42
REF: 31G100264A030

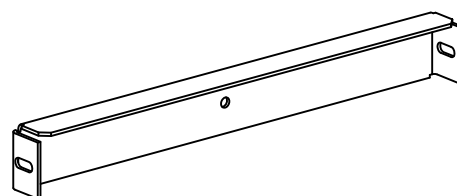



Parts 43
REF: 31G100044A030






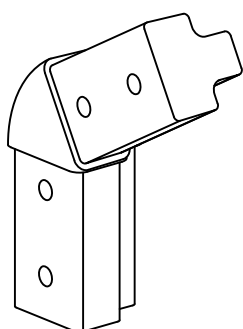










Parts 44
REF: 31G100074A050

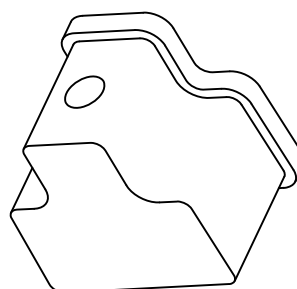


Parts 45
REF: 31G100099A000

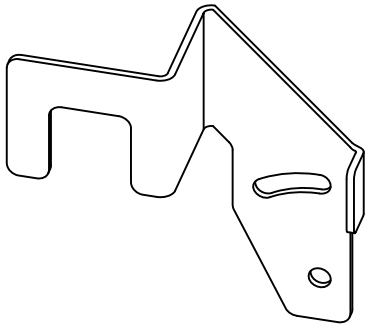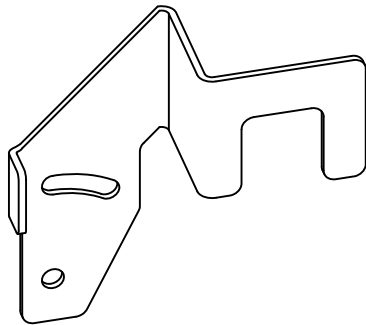
 <p>Parts 46 REF: 31G100155A030</p>	 <p>Parts 47 REF: 31G100156A030</p>
--	---

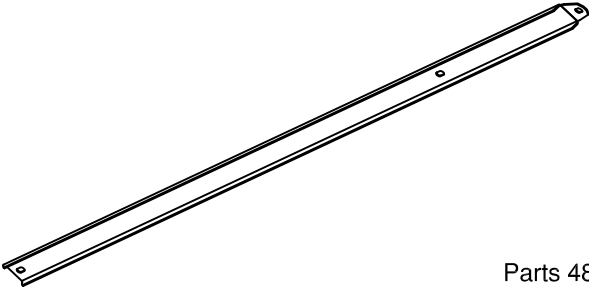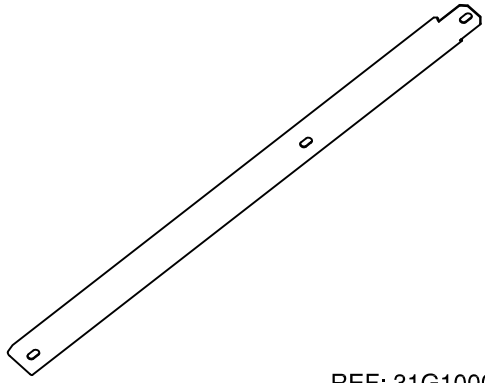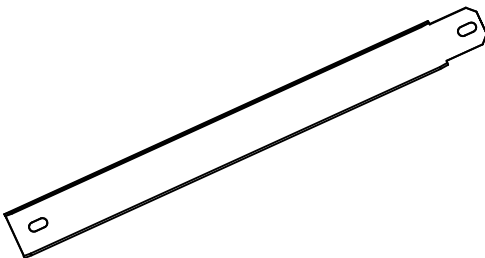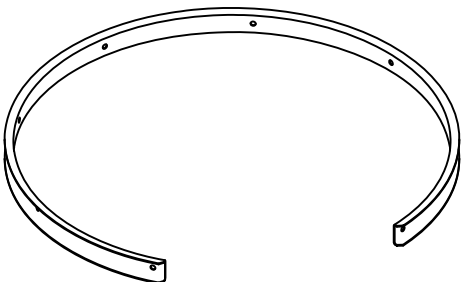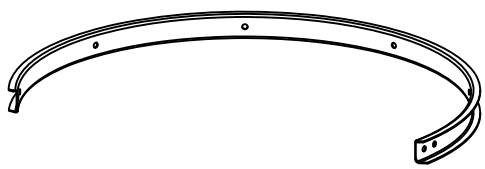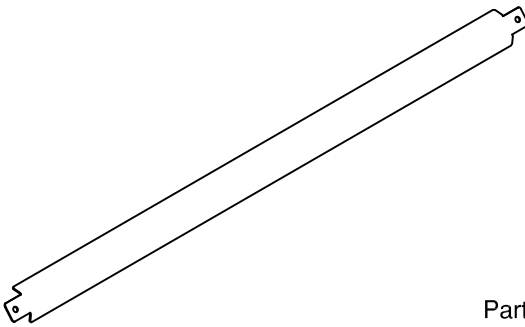 <p>Parts 48 REF: 31G1000096A020</p>	 <p>Parts 49 REF: 31G100097A020</p>
 <p>Parts 50 REF: 31G100145A020</p>	 <p>Parts 51 REF: 31G100050A020</p>
 <p>Parts 52 REF: 31G100049A020</p>	 <p>Parts 53 REF: 31G100048A020</p>

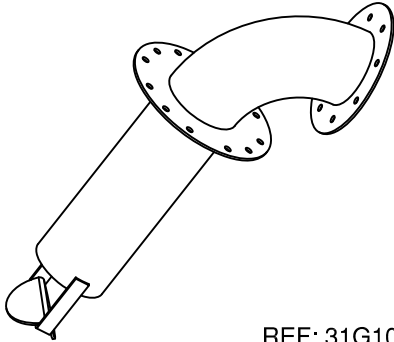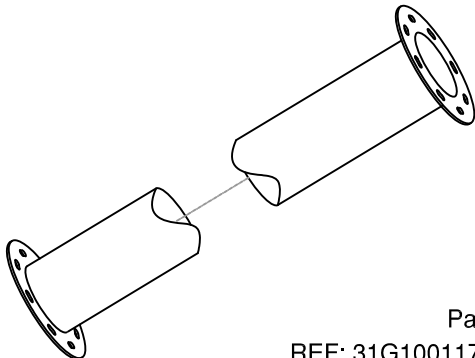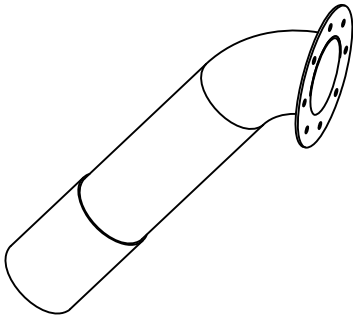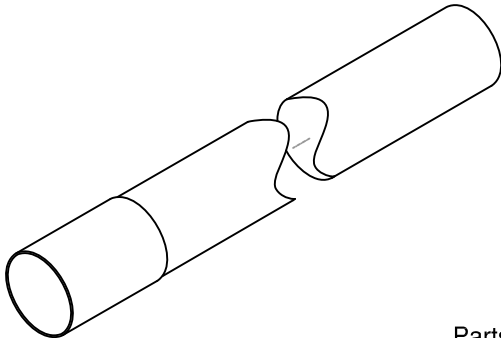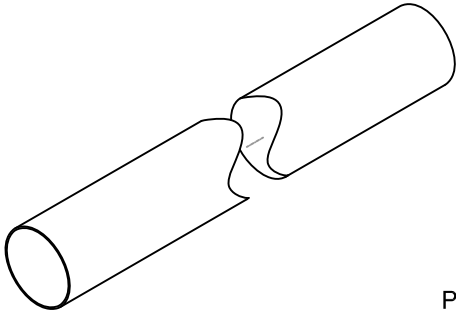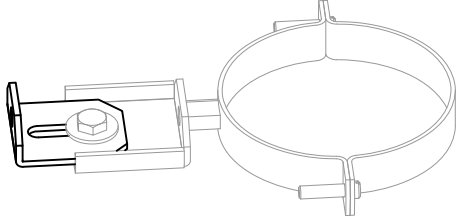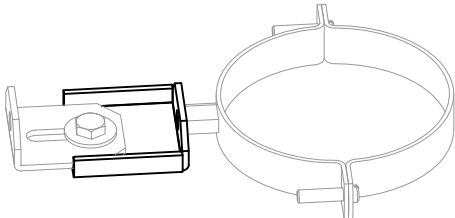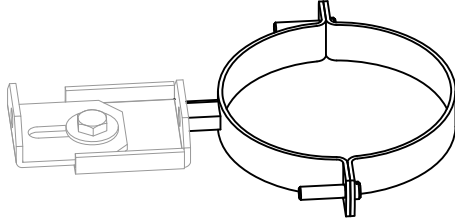
 <p>Parts 54 REF: 31G100110A000</p>	 <p>Parts 55 REF: 31G100117A000</p>
 <p>Parts 56 REF: 31G100112A000</p>	 <p>Parts 57 REF: 31G100225A000</p>
 <p>Parts 58 REF: 31G100075A000</p>	 <p>Parts 59 REF: 31G100116A030</p>
 <p>Parts 60 REF: 31G100115A030</p>	 <p>Parts 61 REF: 300ABRE100</p>

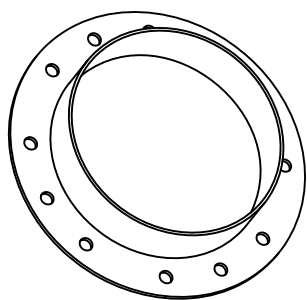


Parts 62
REF: 31G100114A000

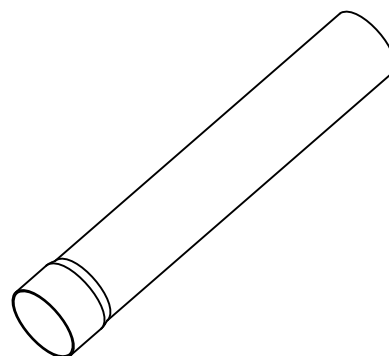


Parts 63
REF: 305031601000

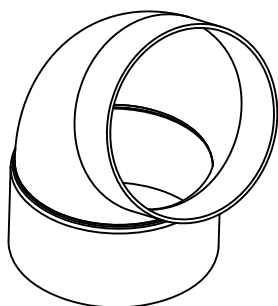


Parts 64
REF: 304901600875

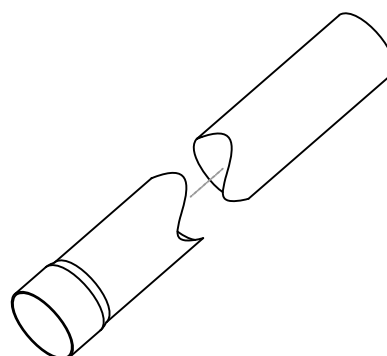


Parts 65
REF: 305031605000

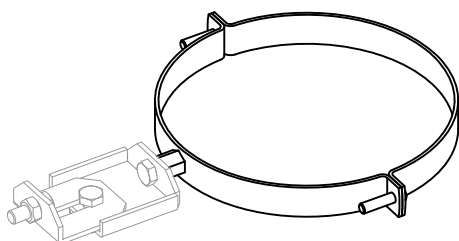









Parts 66
REF: 300ABRE160

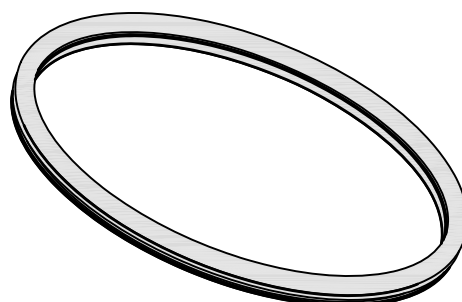


Parts 67
REF: 3000067143 (NEU)

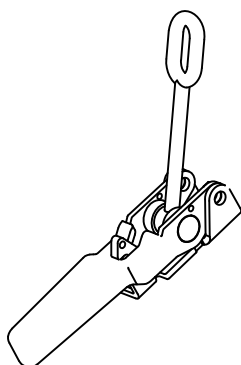


Parts 68
REF: 3000067144 (NEU)

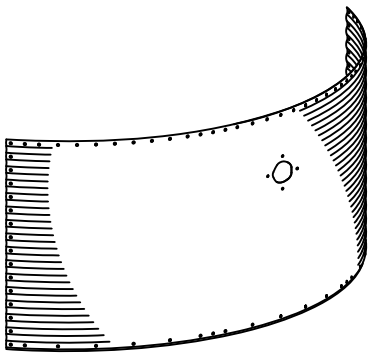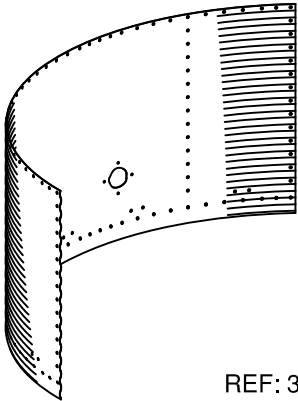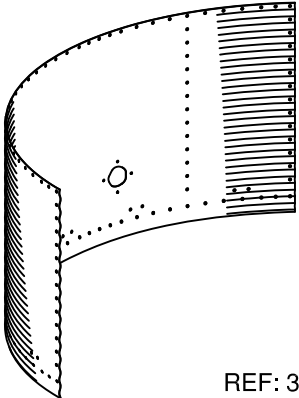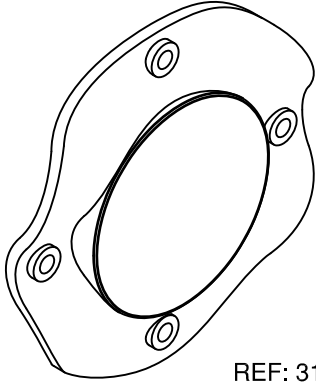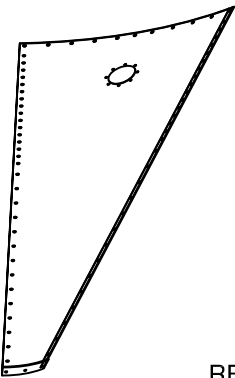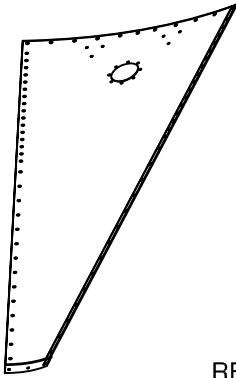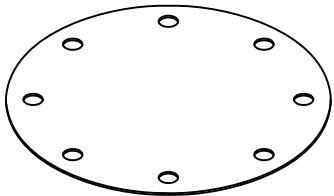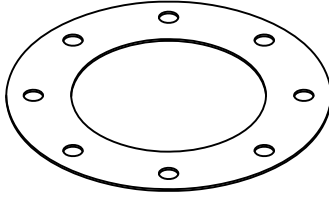
 <p>Parts 69 REF: 31G100069A010</p>	 <p>Parts 70 REF: 31G100212A012</p>
 <p>Parts 71 REF: 31G100212A015</p>	 <p>Parts 72 REF: 31G100101A000</p>
 <p>Parts 73 REF: 31G100136A012</p>	 <p>Parts 74 REF: 31G100161A015</p>
 <p>Parts 75 REF: 31G100139A000</p>	 <p>Parts 76 REF: 31G100138A010</p>

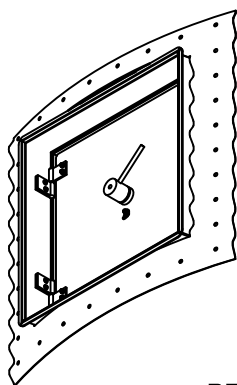


Parts 77
REF: 31G100061A010

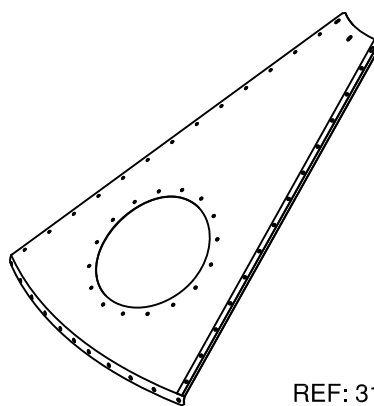


Parts 78
REF: 31G100230A012

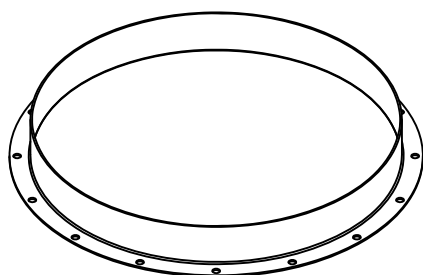


Parts 79
REF: 120.715A

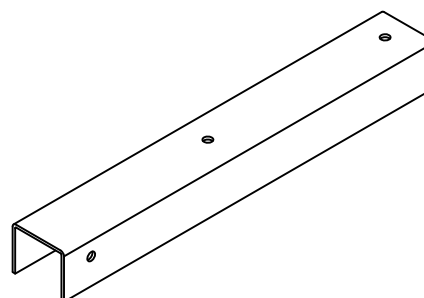


Parts 80
REF: 120.779

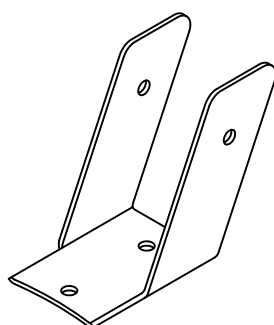


Parts 81
REF: 120.780

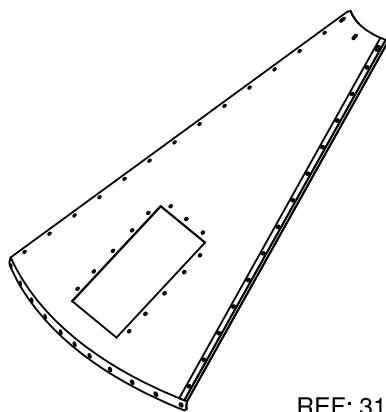


Parts 82
REF: 31G100207A012

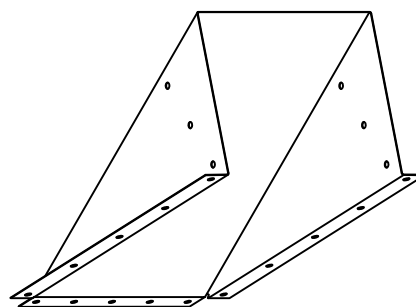


Parts 83
REF: 111.505

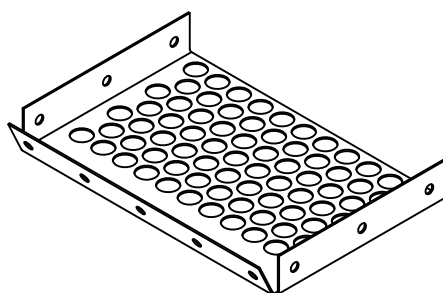







Parts 84
REF: 110.074

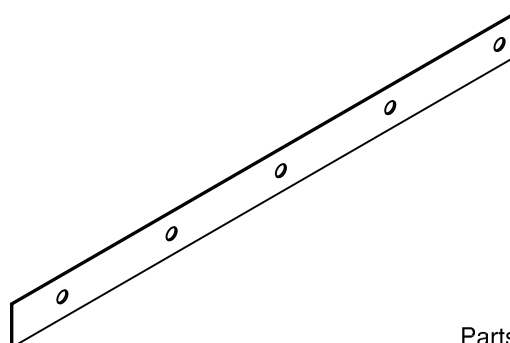


Parts 85
REF: 111.506

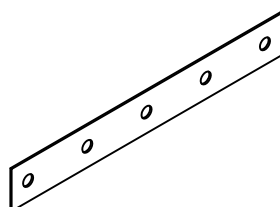


Parts 86
REF: 110.076

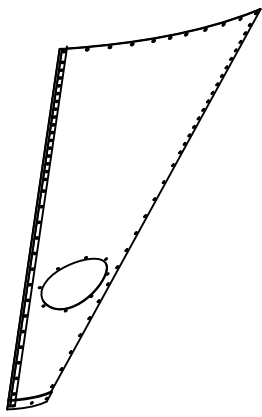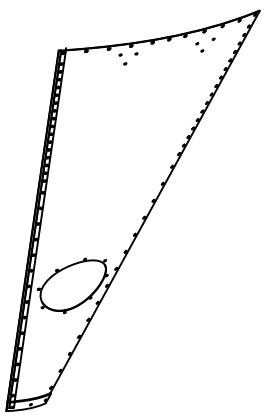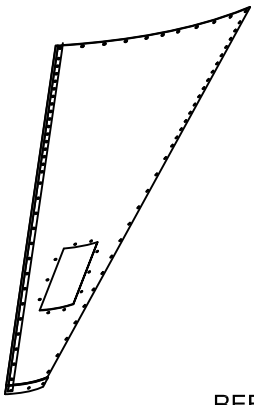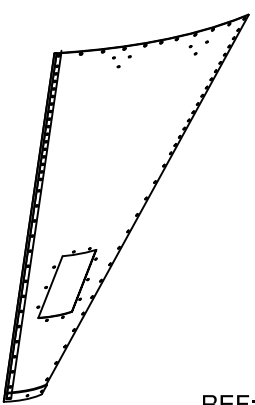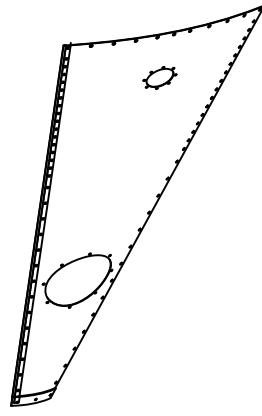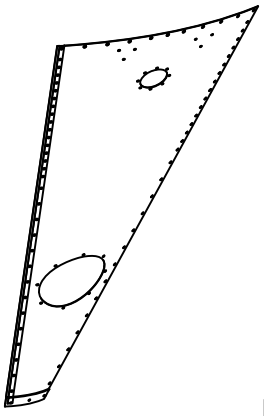 <p>Parts 87 REF: 31G100192A012</p>	 <p>Parts 88 REF: 31G100163A015</p>
 <p>Parts 89 REF: 31G100201A012</p>	 <p>Parts 90 REF: 31G100202A015</p>
 <p>Parts 91 REF: 31G100175A012</p>	 <p>Parts 92 REF: 31G100162A015</p>

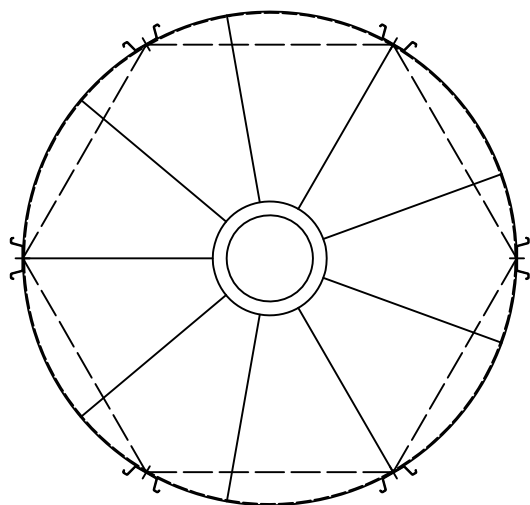


TOP VIEW SG275T60

RAISED FRONT VIEW SG275T60

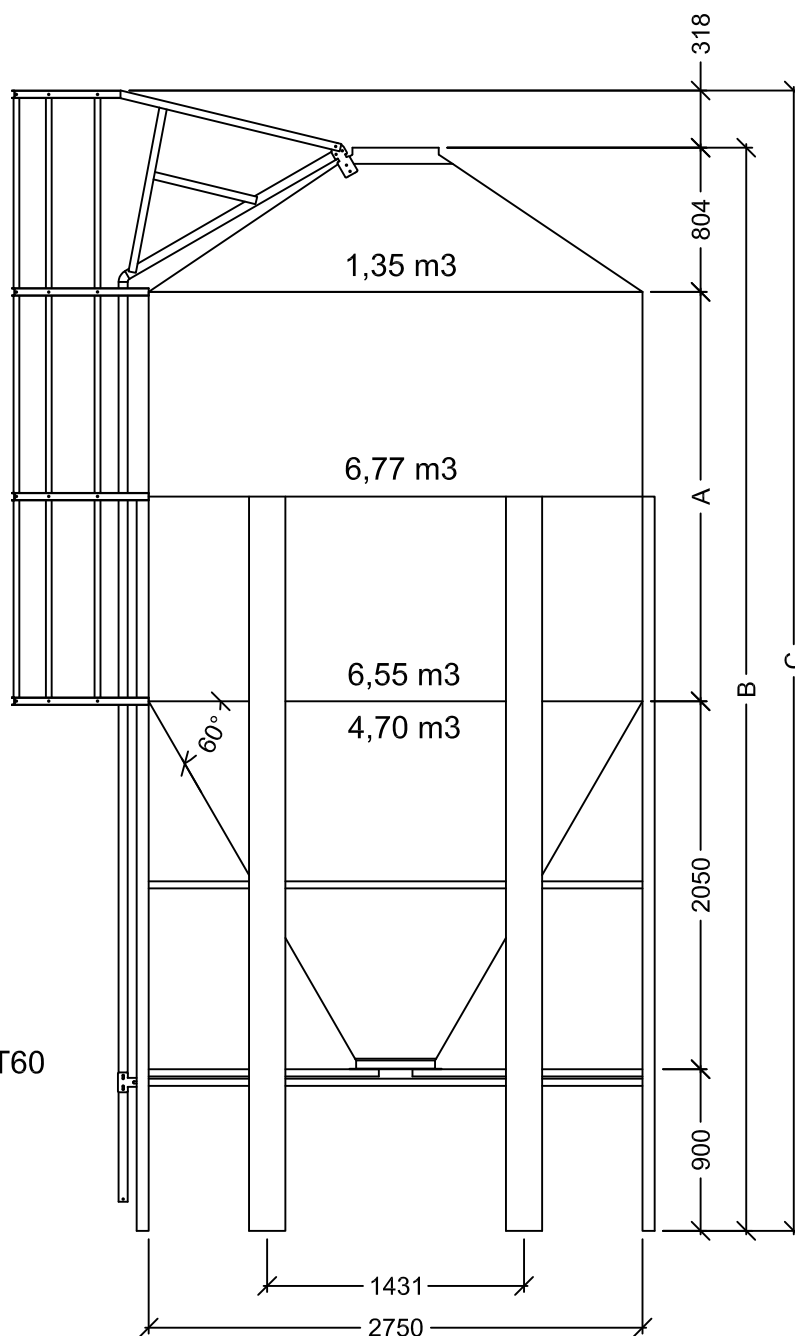


SILO SG275T60					
MODEL	CAPACITY (m3)	A (m)	B (m)	C (m)	WEIGHT (Kg)*
SG275T60/1	12,60 m3	1,140 m	4,893 m	5,212 m	678 Kg
SG275T60/2	19,37 m3	2,280 m	6,033 m	6,352 m	782 Kg
SG275T60/3	26,14 m3	3,420 m	7,173 m	7,492 m	903 Kg
SG275T60/4	32,91 m3	4,560 m	8,313 m	8,632 m	1037 Kg
SG275T60/5	39,68 m3	5,700 m	9,453 m	9,772 m	1233 Kg


*Maximum weight including ladder and safety cage

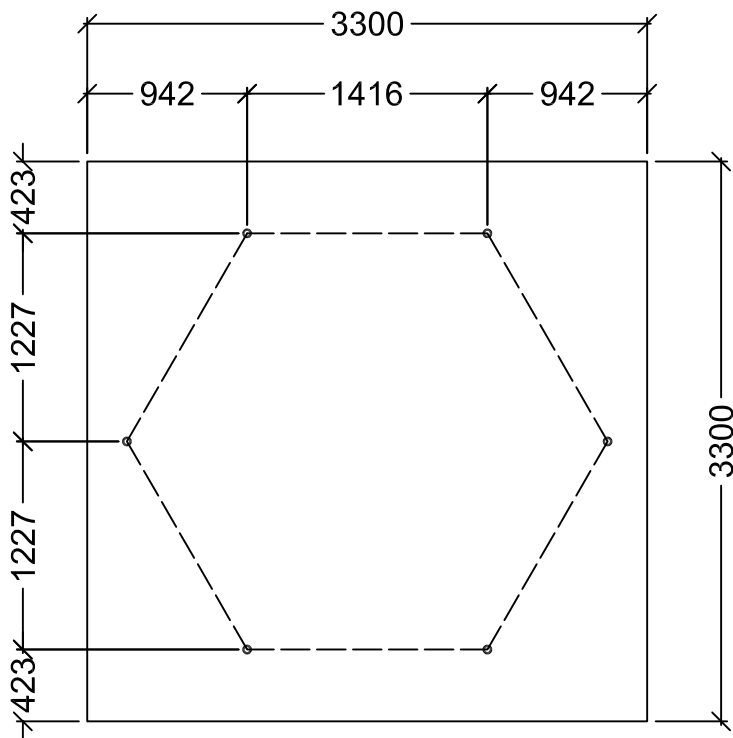

ANCHOR BOLTS DISTRIBUTION
IN FOUNDATION

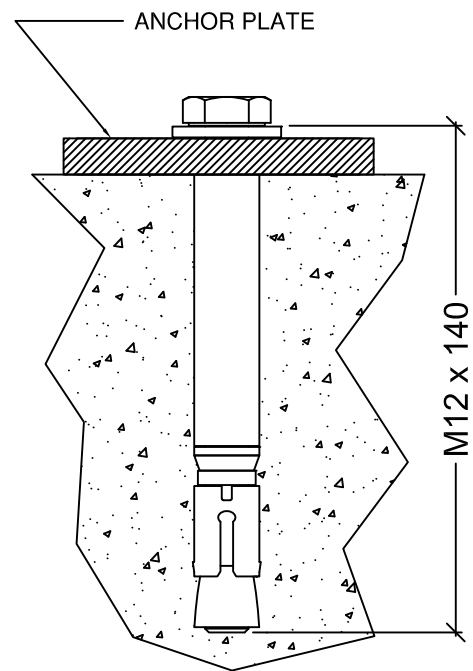

EXPANSION ANCHOR FOR
FASTENING TO CONCRETE

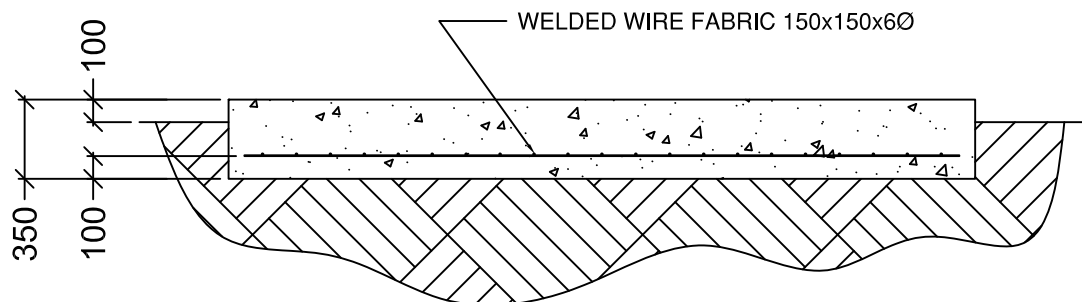


FOUNDATION CROSS SECTION


FOUNDATION

All instruction shall be considered as recommendations only because the installation may vary according to local conditions.

Foundation recommendations are based on a minimum **2 kg/cm²** ground resistance and on a concrete resistance of **250 kg/cm²** at 28 days.


The foundation site must be free of vegetation and debris and well drained.

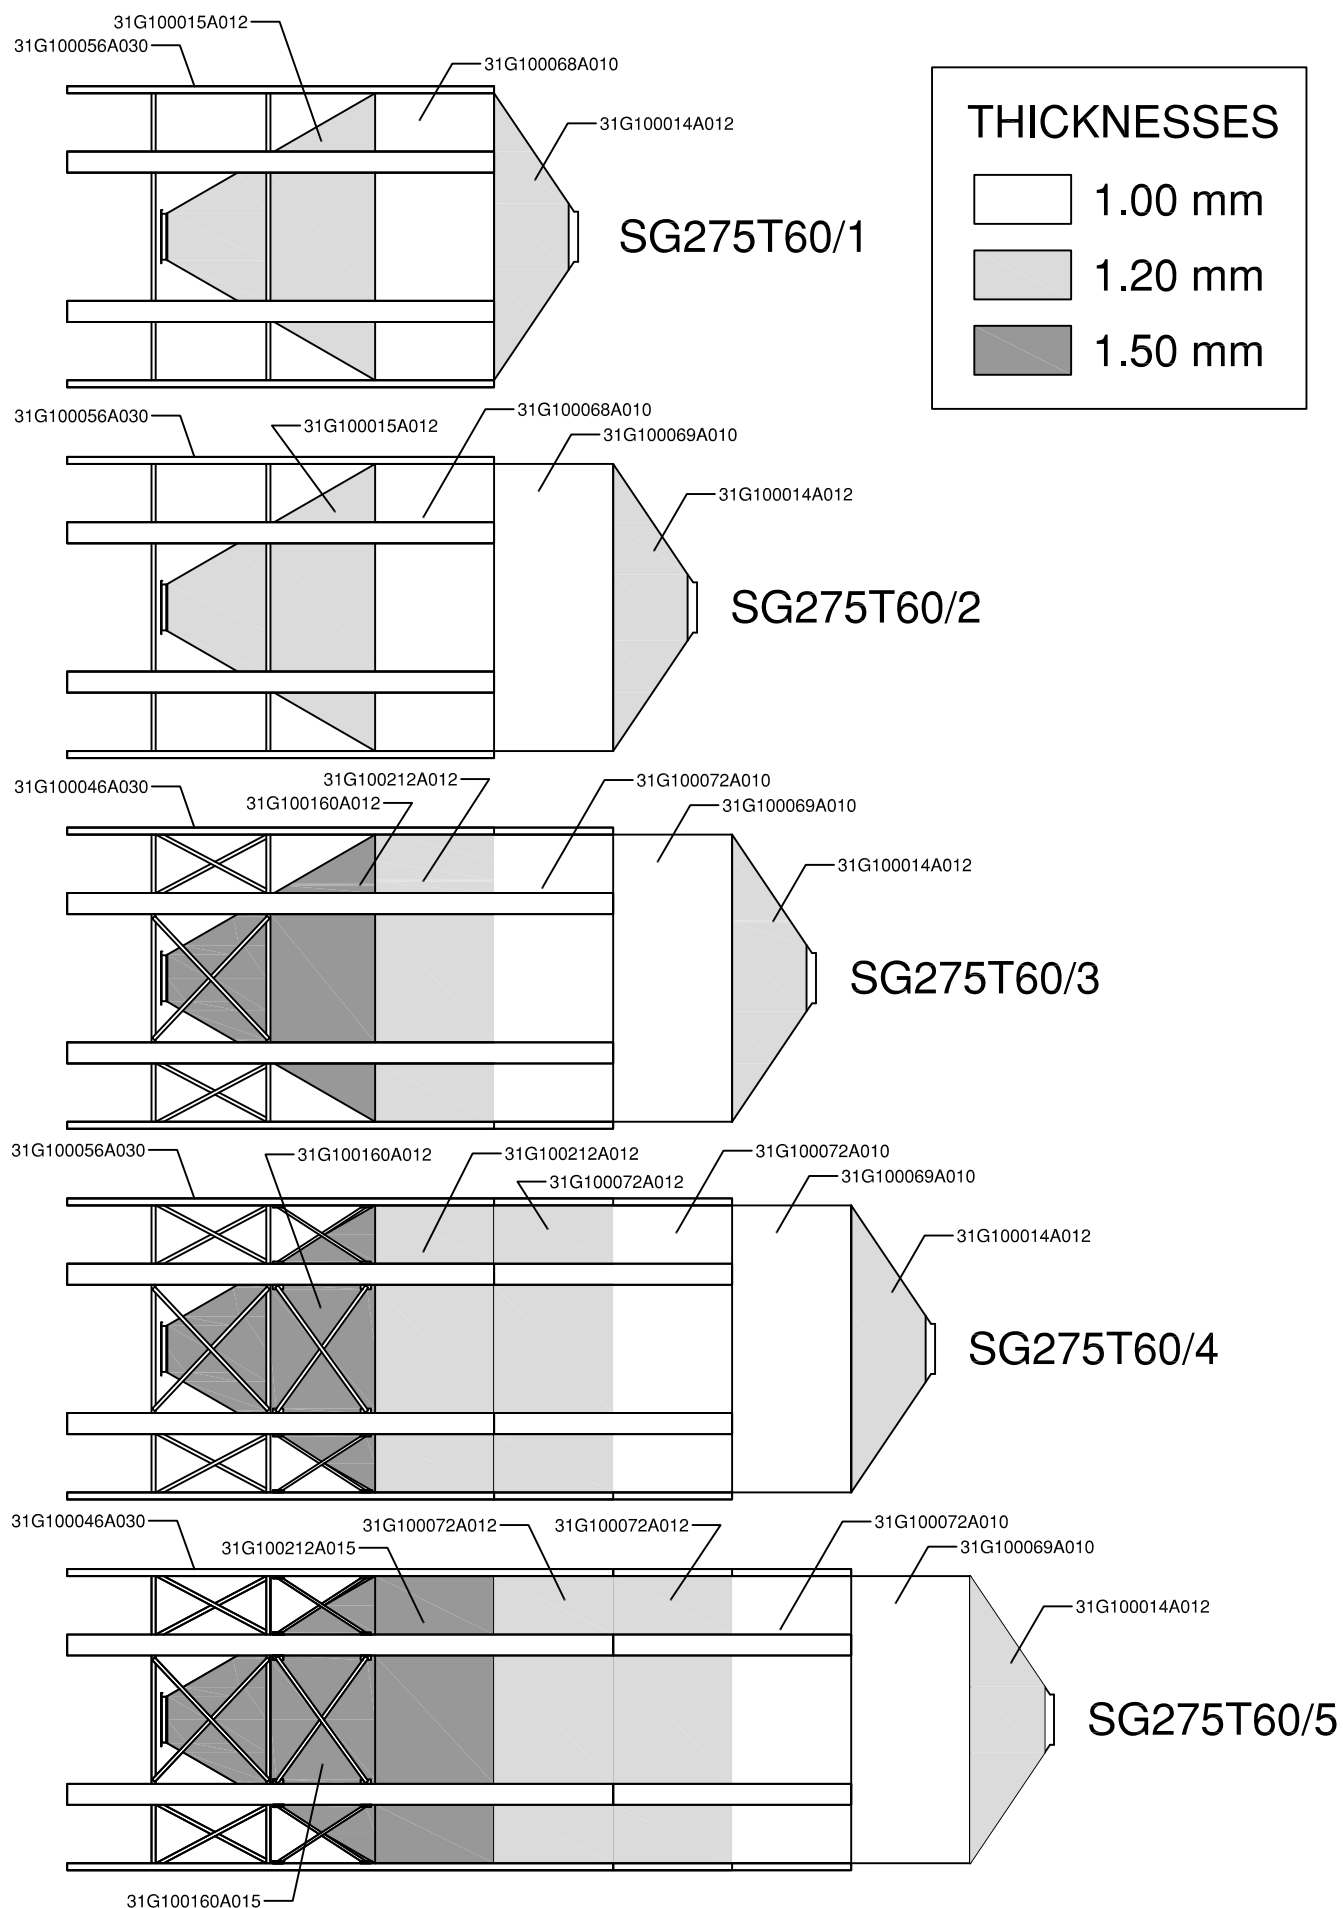

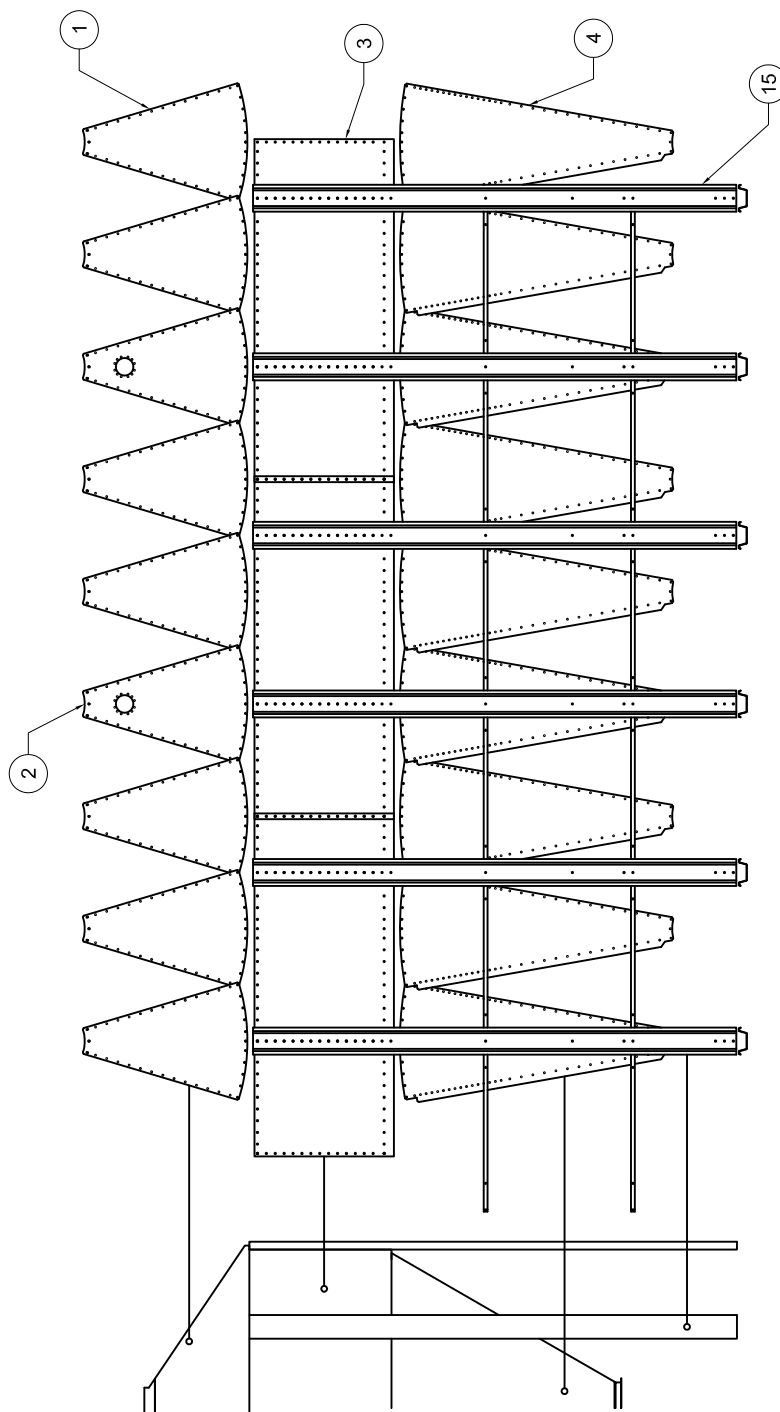


SG275T60/1

Care should be given to the positioning of the vertical sets at each level with respect to those of other levels, axes of hopper sectors, axes of roof sectors, and feet. Before beginning the assembly of a new level, be certain that is the correct position.

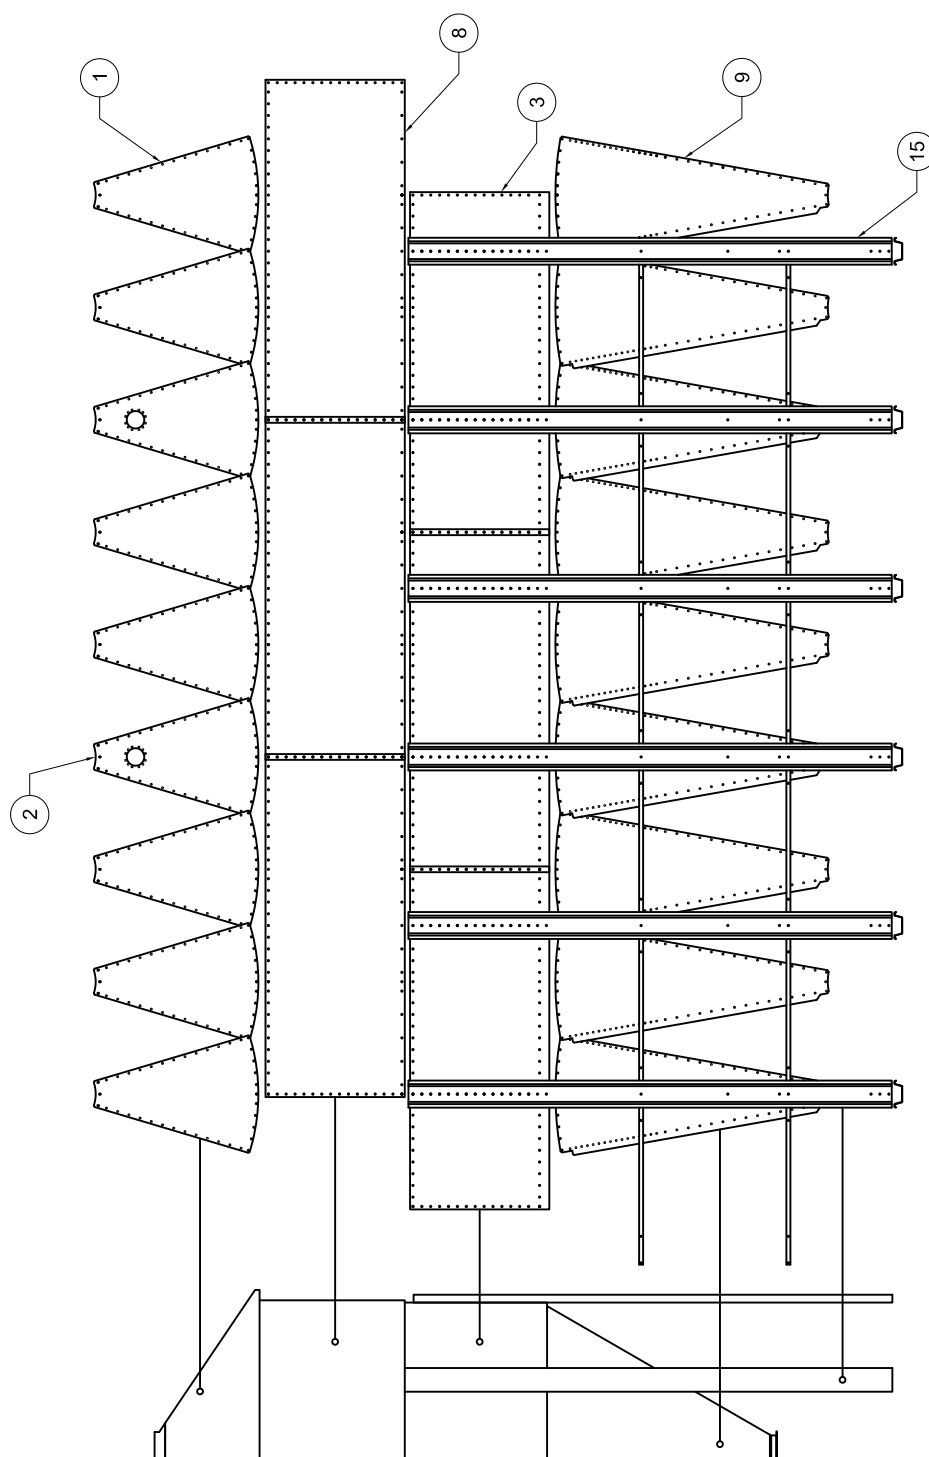


SG275T60/2

Care should be given to the positioning of the vertical sets at each level with respect to those of other levels, axes of hopper sectors, axes of roof sectors, and feet. Before beginning the assembly of a new level, be certain that is the correct position.

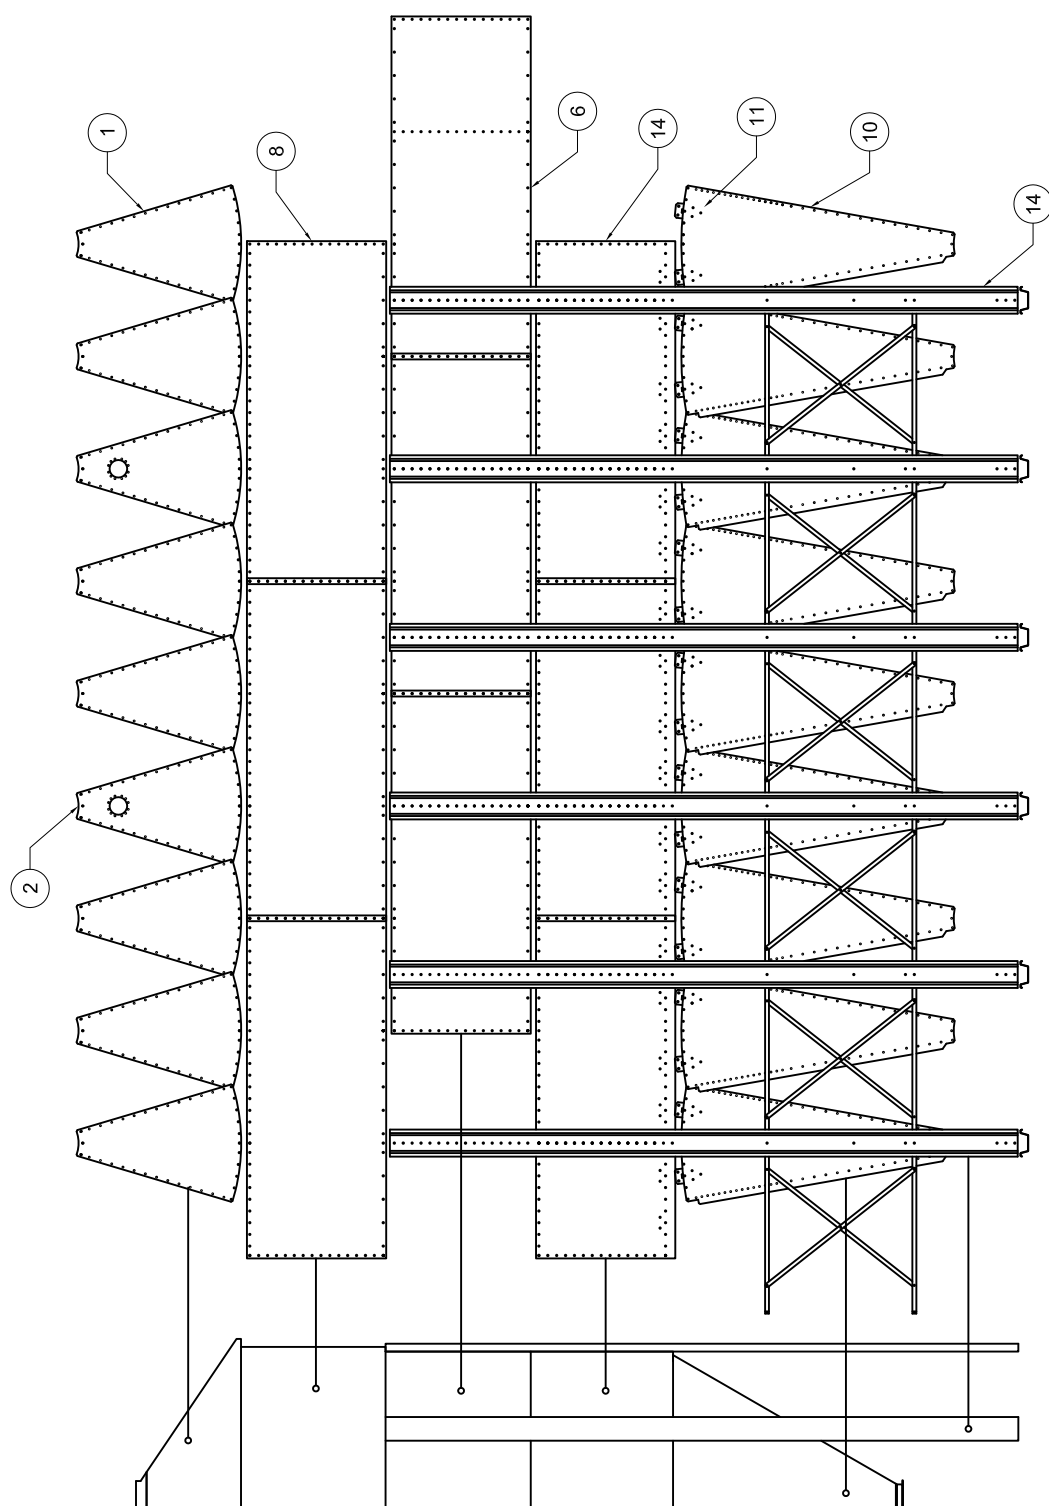


SG275T60/3

Care should be given to the positioning of the vertical sets at each level with respect to those of other levels, axes of hopper sectors, axes of roof sectors, and feet. Before beginning the assembly of a new level, be certain that is the correct position.

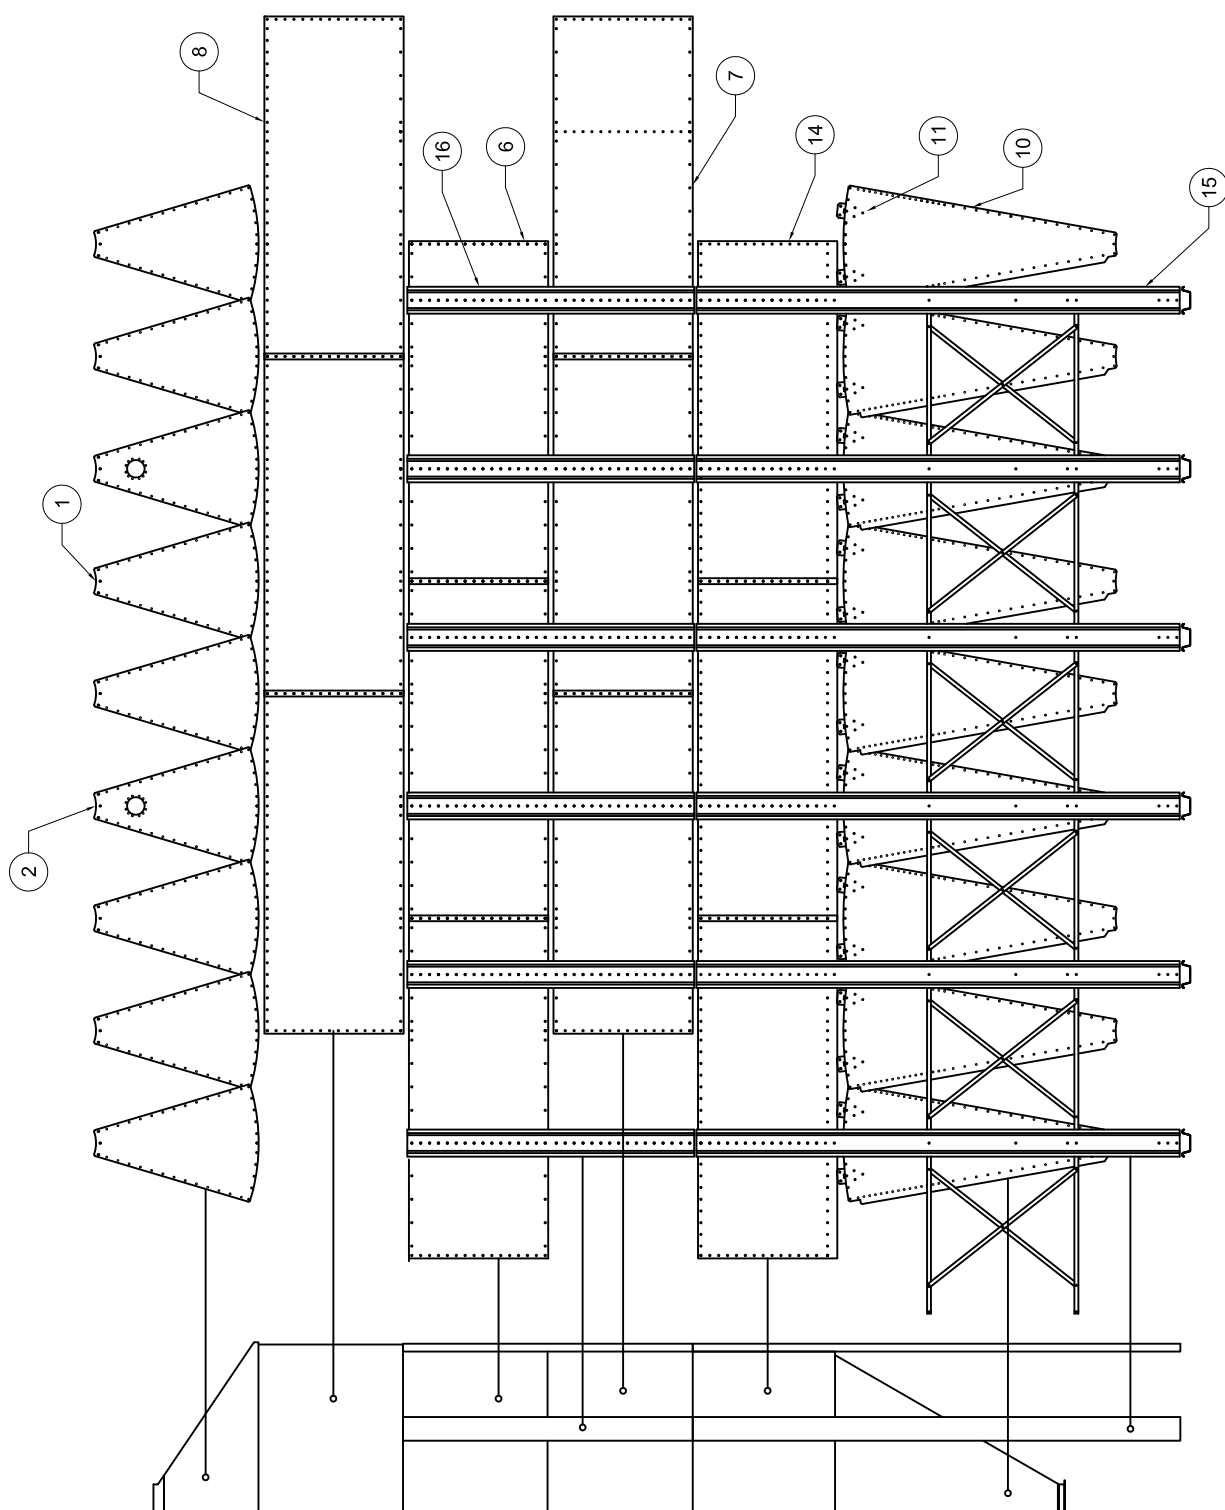

SG275T60/4

Care should be given to the positioning of the vertical sets at each level with respect to those of other levels, axes of hopper sectors, axes of roof sectors, and feet. Before beginning the assembly of a new level, be certain that is the correct position.

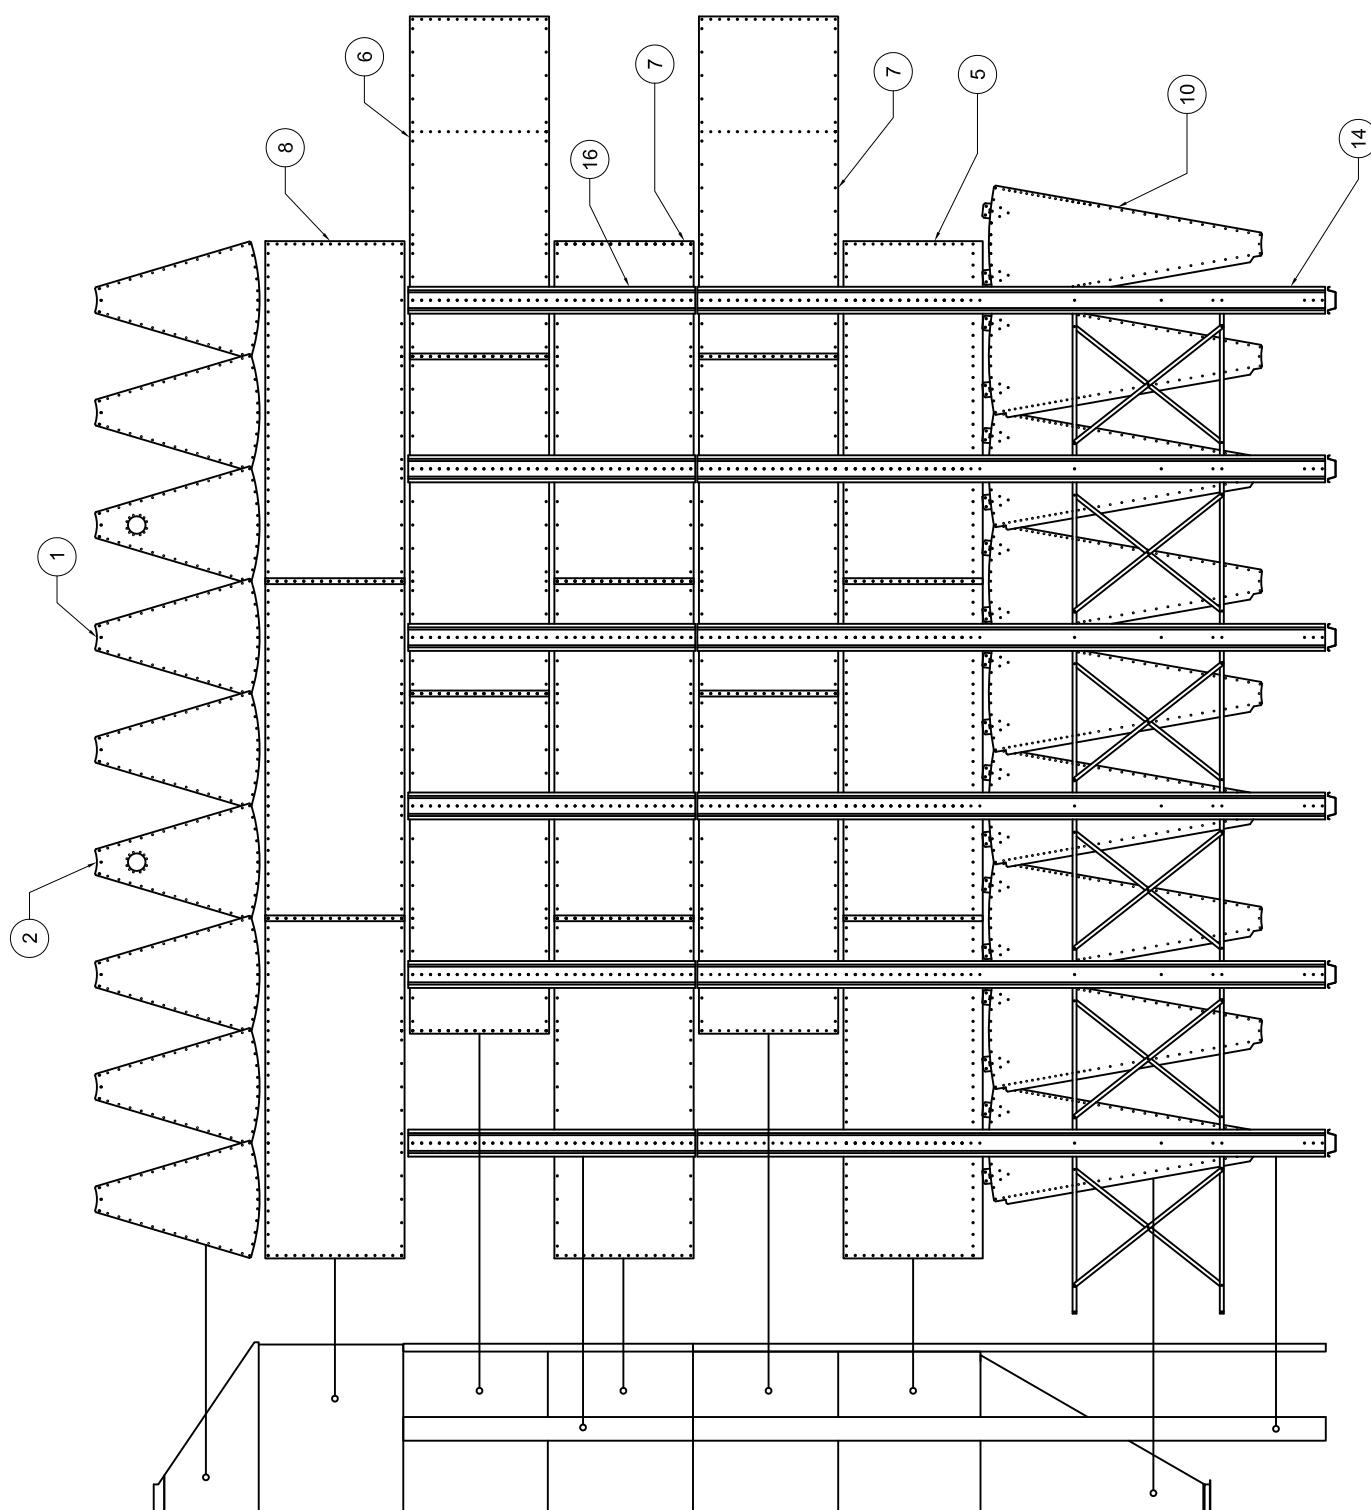


SG275T60/5

Care should be given to the positioning of the vertical sets at each level with respect to those of other levels, axes of hopper sectors, axes of roof sectors, and feet. Before beginning the assembly of a new level, be certain that is the correct position.


Join type 1

Round head screw M8x15 +
metal washer +
hexagonal nut M8

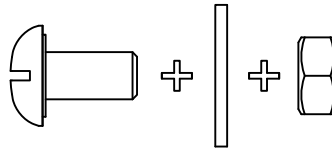


Join type 2

Hexagonal head screw M8x20 +
rubber washer +
metal washer +
hexagonal nut M8

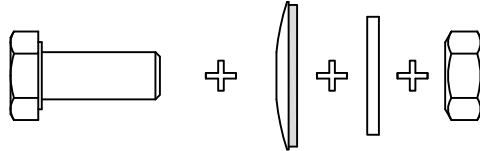


Join type 3

Hexagonal head screw M8x30 +
metal washer +
hexagonal nut M8

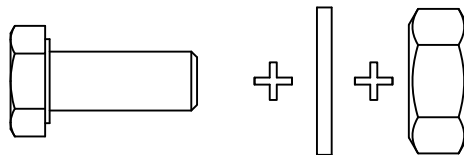


Join type 4

Hexagonal head screw M8x30 +
hexagonal nut M8 +
hexagonal nut M8

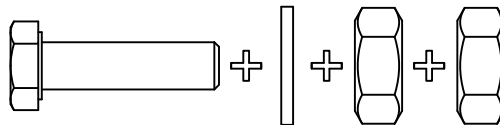


Join type 5

Hexagonal head screw M8x30 +
rubber washer +
metal washer +
hexagonal nut M8

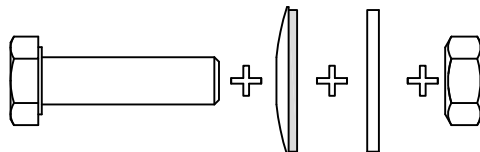


Join type 6

Hexagonal head screw M10x25 +
rubber washer +
metal washer +
hexagonal nut M10

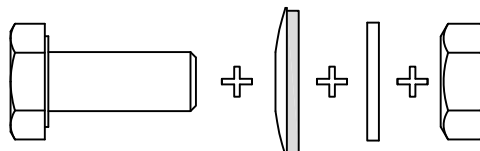

Join type 7

Hexagonal head screw M10x25 +
metal washer +
metal washer +
hexagonal nut M10

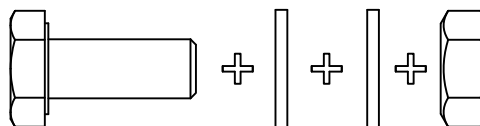


All bolts are to be tightened from the nut side only. Do not allow bolt heads to spin to avoid damages in rubber joints.


Drift punches can be used to align holes.

Before inserting the screws should be checked that in this position, both the type of joint as the direction in which you enter the screw is correct. Make sure all bolts are consistent with the pattern on the next page.

IMPORTANT: Tighten bolts with a torque wrench between 13Nm y 26Nm.

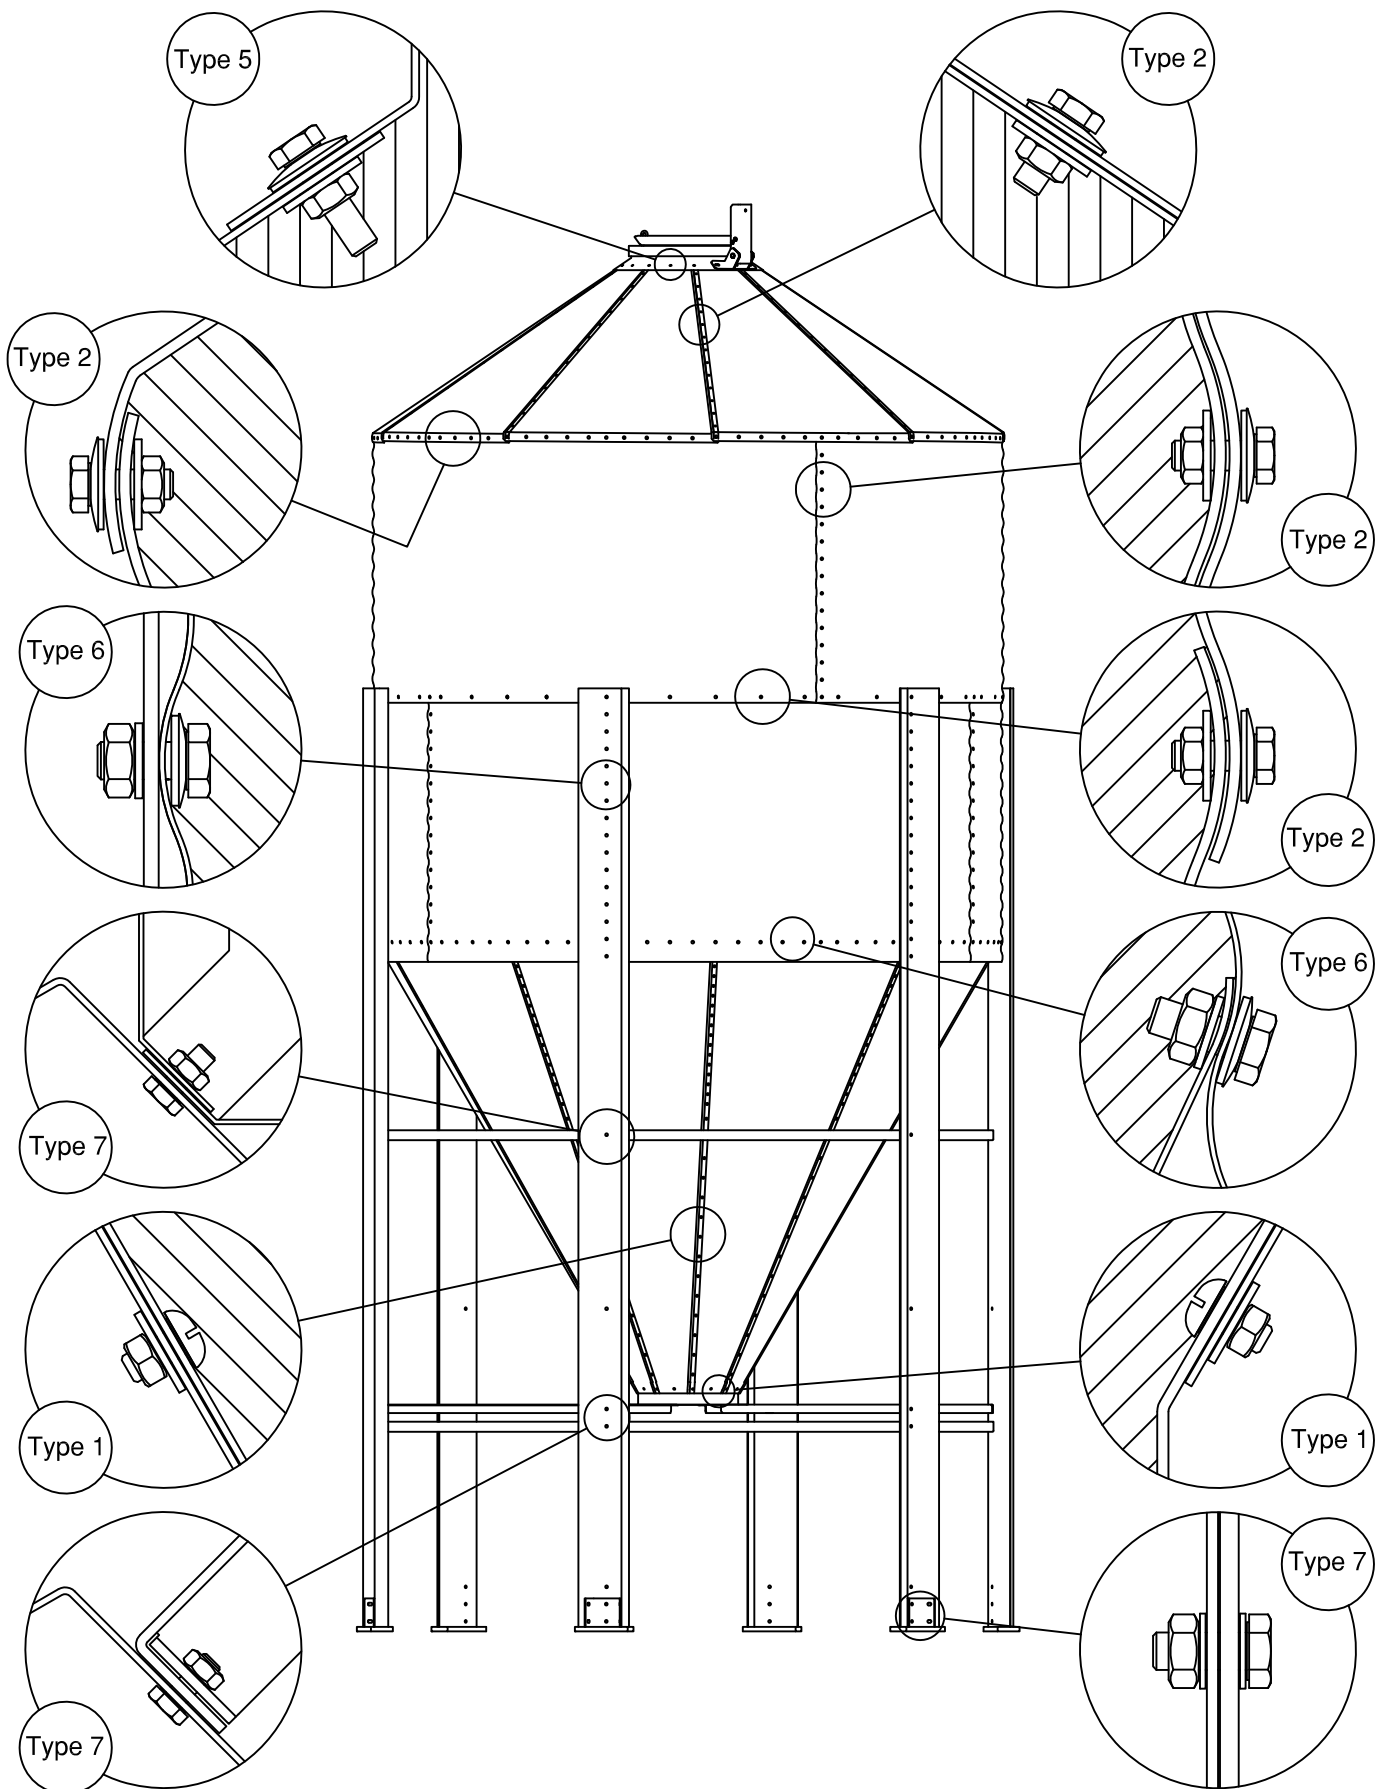


Types of joint shown by their different positions.
Bolts, nuts and washers specifications.

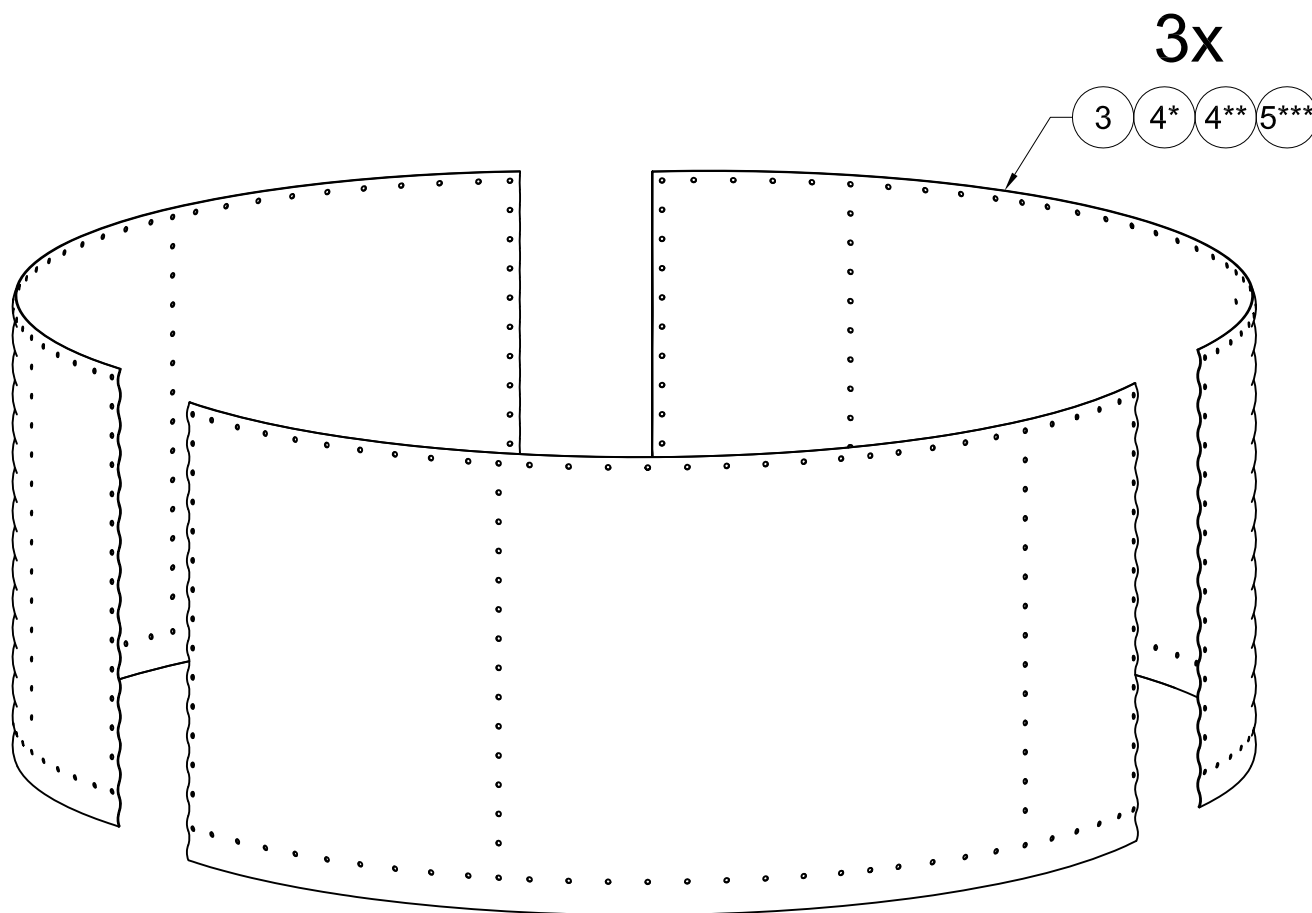

(*) = SG275T60/3, (**) = SG275T60/4, (***) = SG275T60/5


IMPORTANT: Overlap sidewall sheets on right position

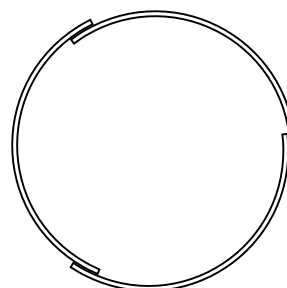


The order of correct assembly is: lower level, intermediate level, upper level. Always begin assembly with the bottom ring. Bottom-level plates can be easily distinguished from those of other levels because they have intermediate lines of screw holes to locate the feet of the silo. It is important to overlap the plates in the correct position, only as per instructions in the figure above.

During assembly of the first level, use two long screwdrivers to set the plates in relation to each other, and to make them easier to connect.

Zones where sealing strips are to be placed should be properly degreased to facilitate adhesion. Insert the screws in the right direction and follow the instructions on page 11 for correct tightening.


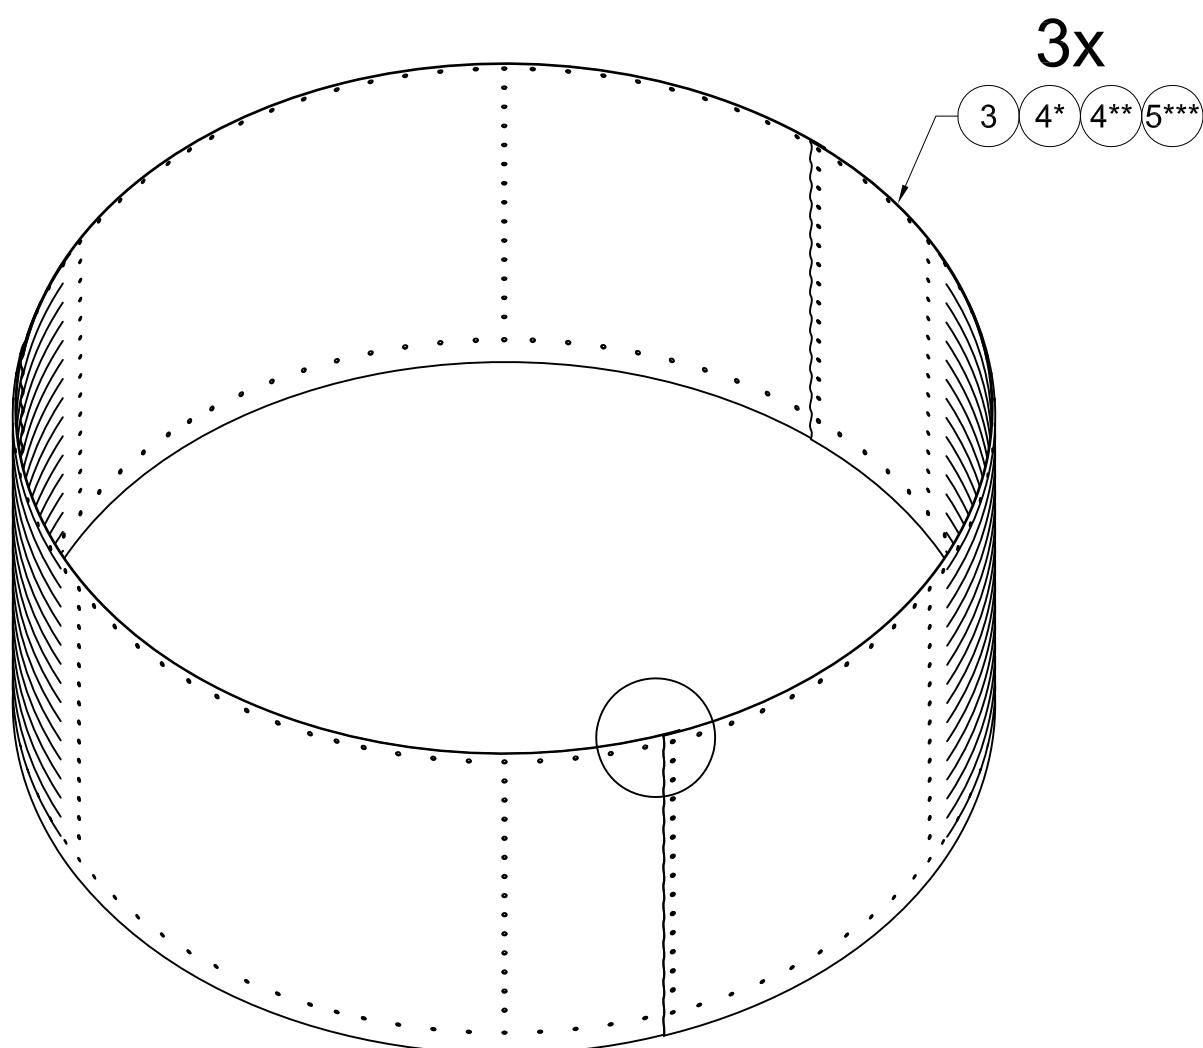



(*) = SG275T60/3, (**) = SG275T60/4, (***) = SG275T60/5

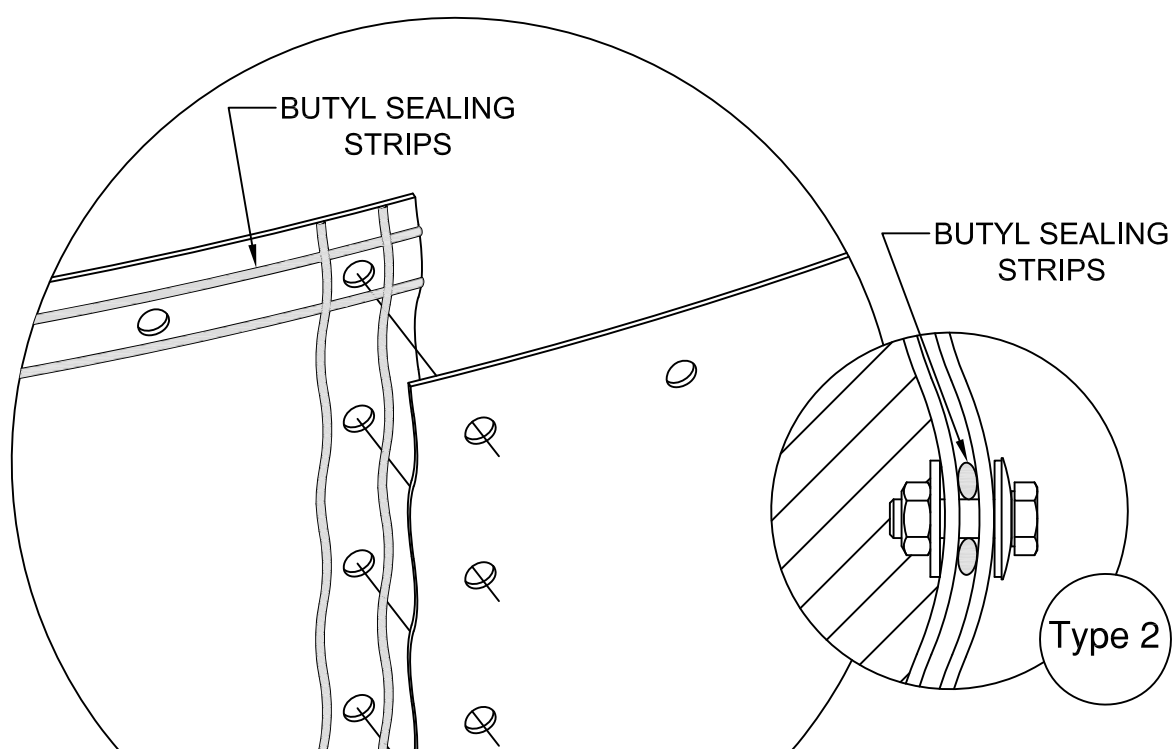


3x


8

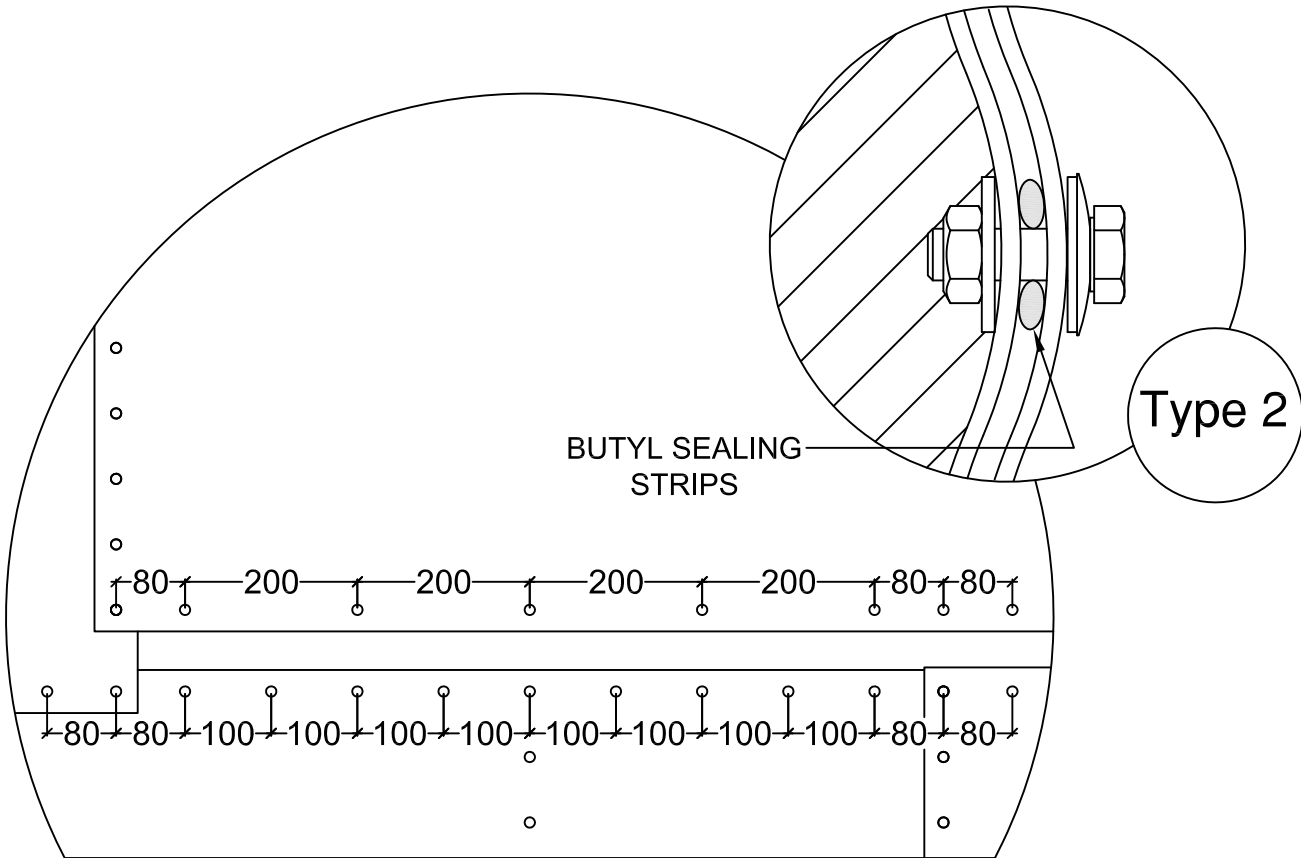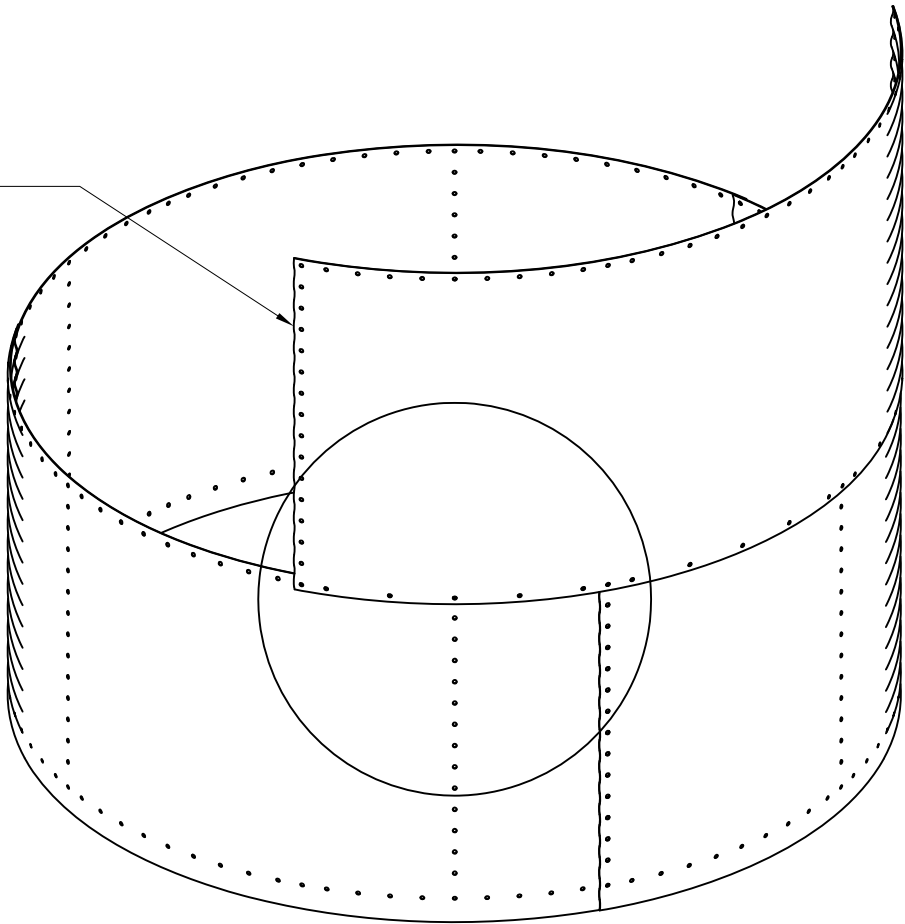

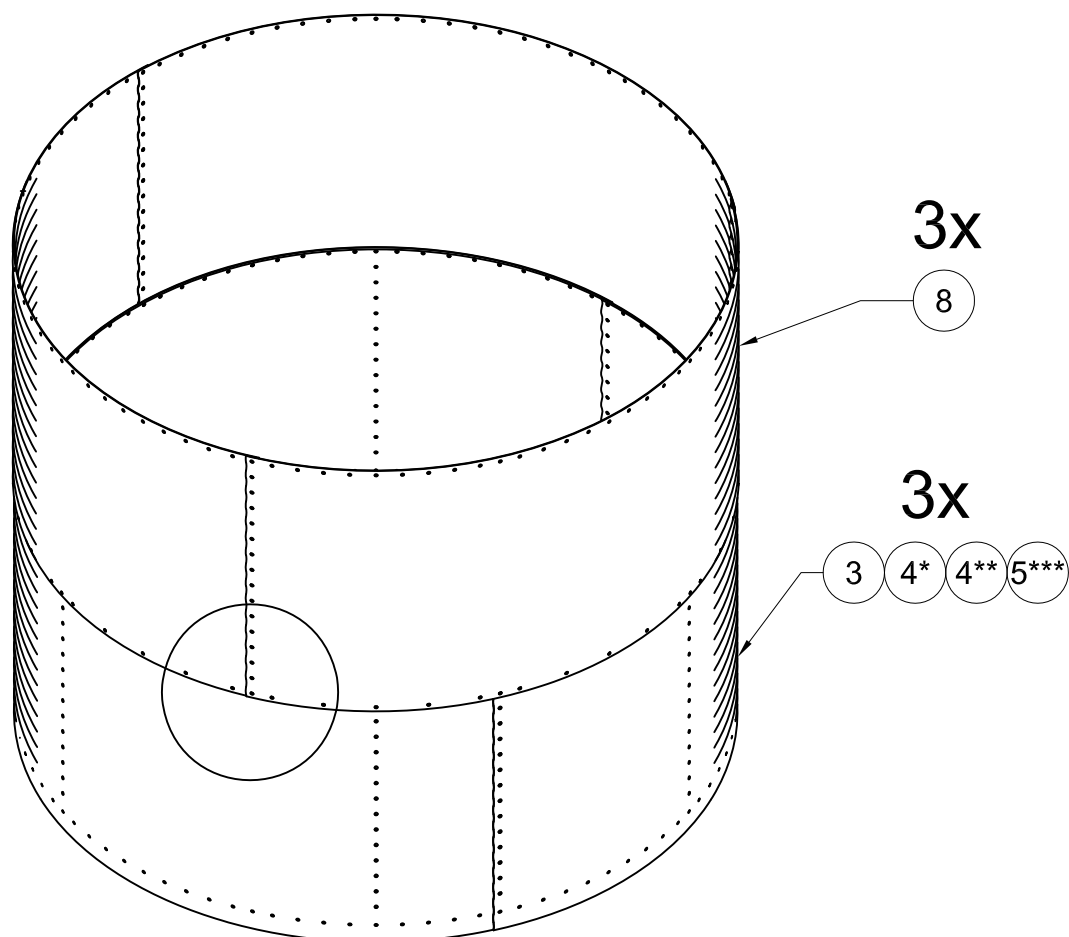


(*) = SG275T60/3, (**) = SG275T60/4, (***) = SG275T60/5


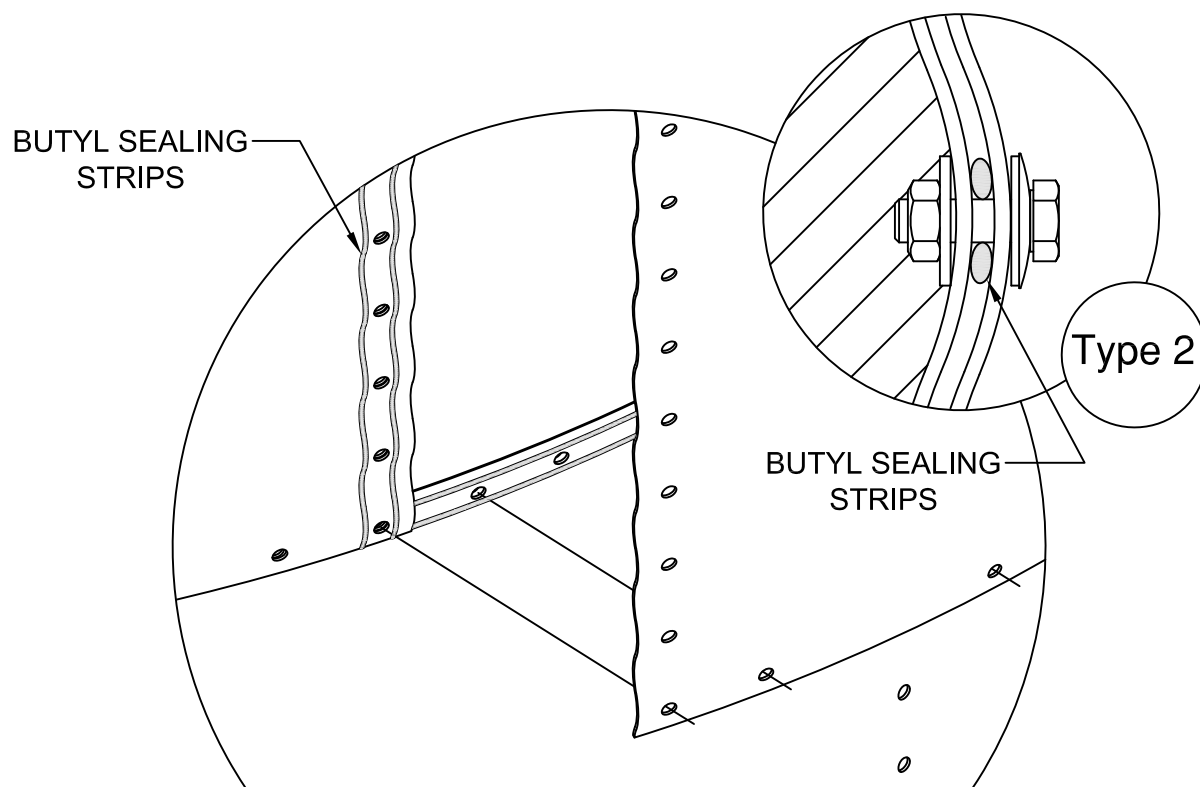


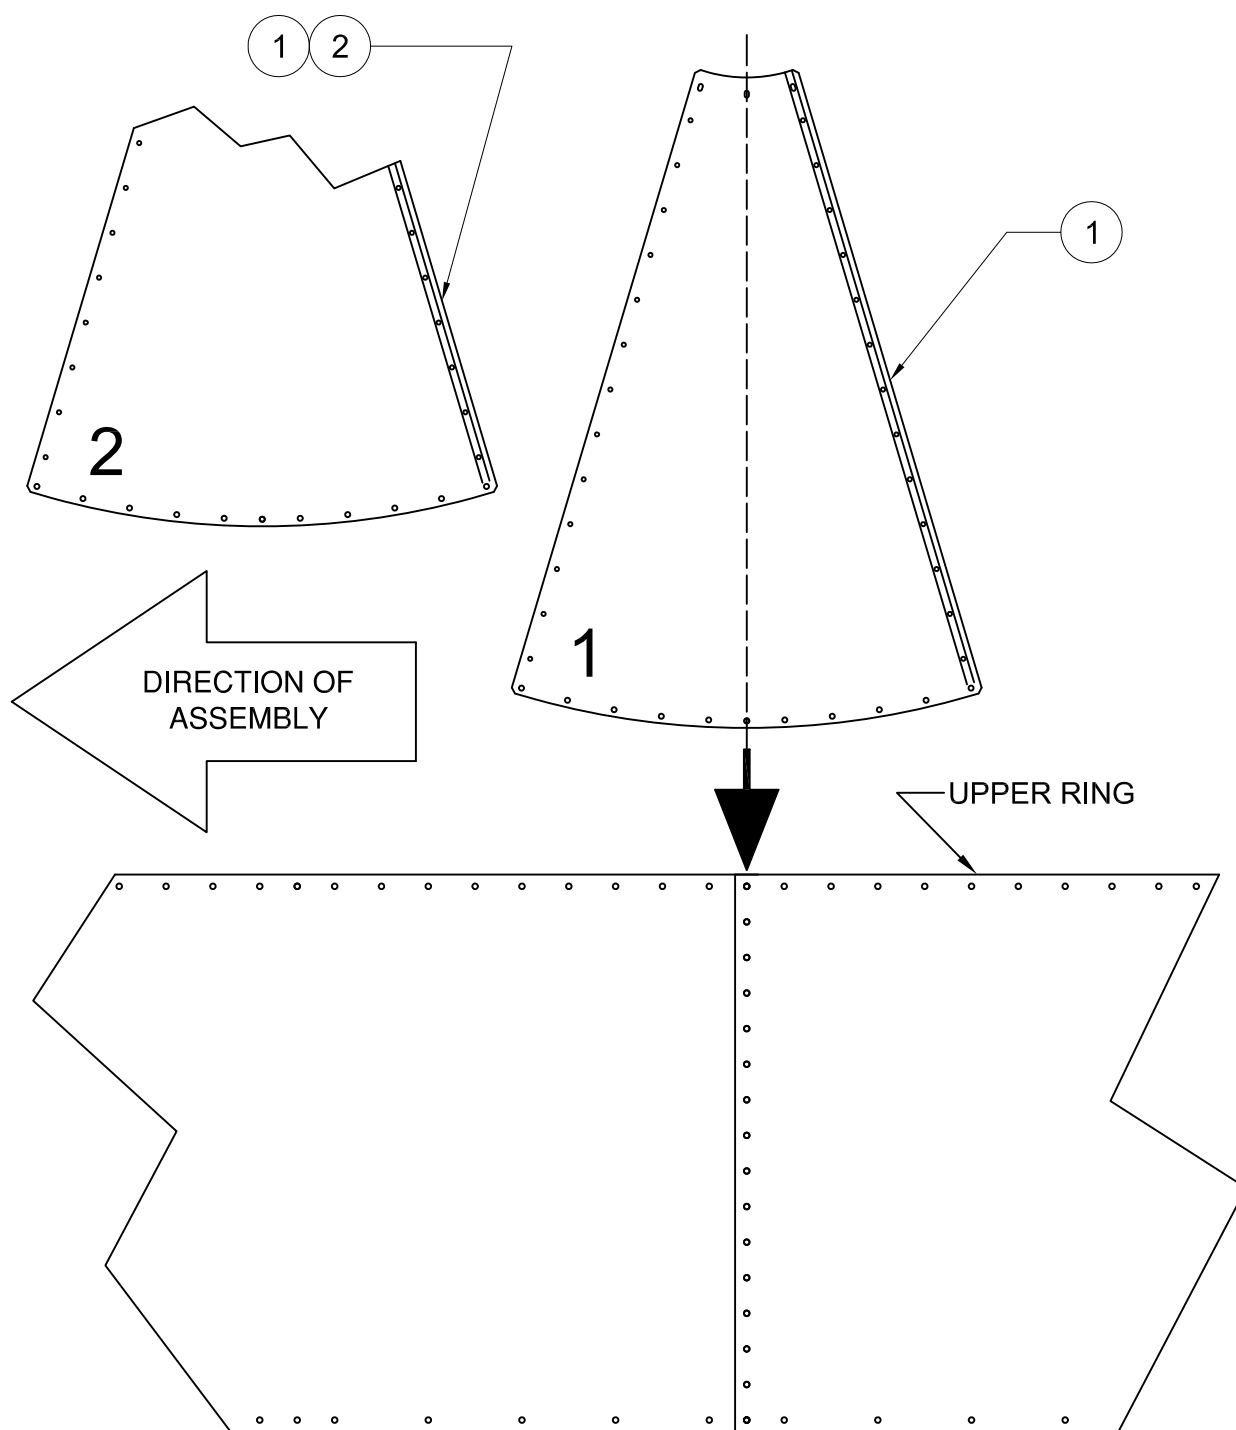


To begin the assembly of the roof, align the center of one roof sector with any one of the three vertical joints from the seal of the upper ring. It is important to overlap the sectors in the correct position, only and per the instructions in the figures included. In the case of enabling the pneumatic load, assembly should begin from the roof in the same way and always with a blind sector. Once positioned, that first sector should follow the general schematic (page 10). Zones where butyl sealing strips are to be placed should be properly degreased to ensure complete adhesion.


Insert the screws in the right direction and follow the instructions indicated on page 11 for correct tightening.

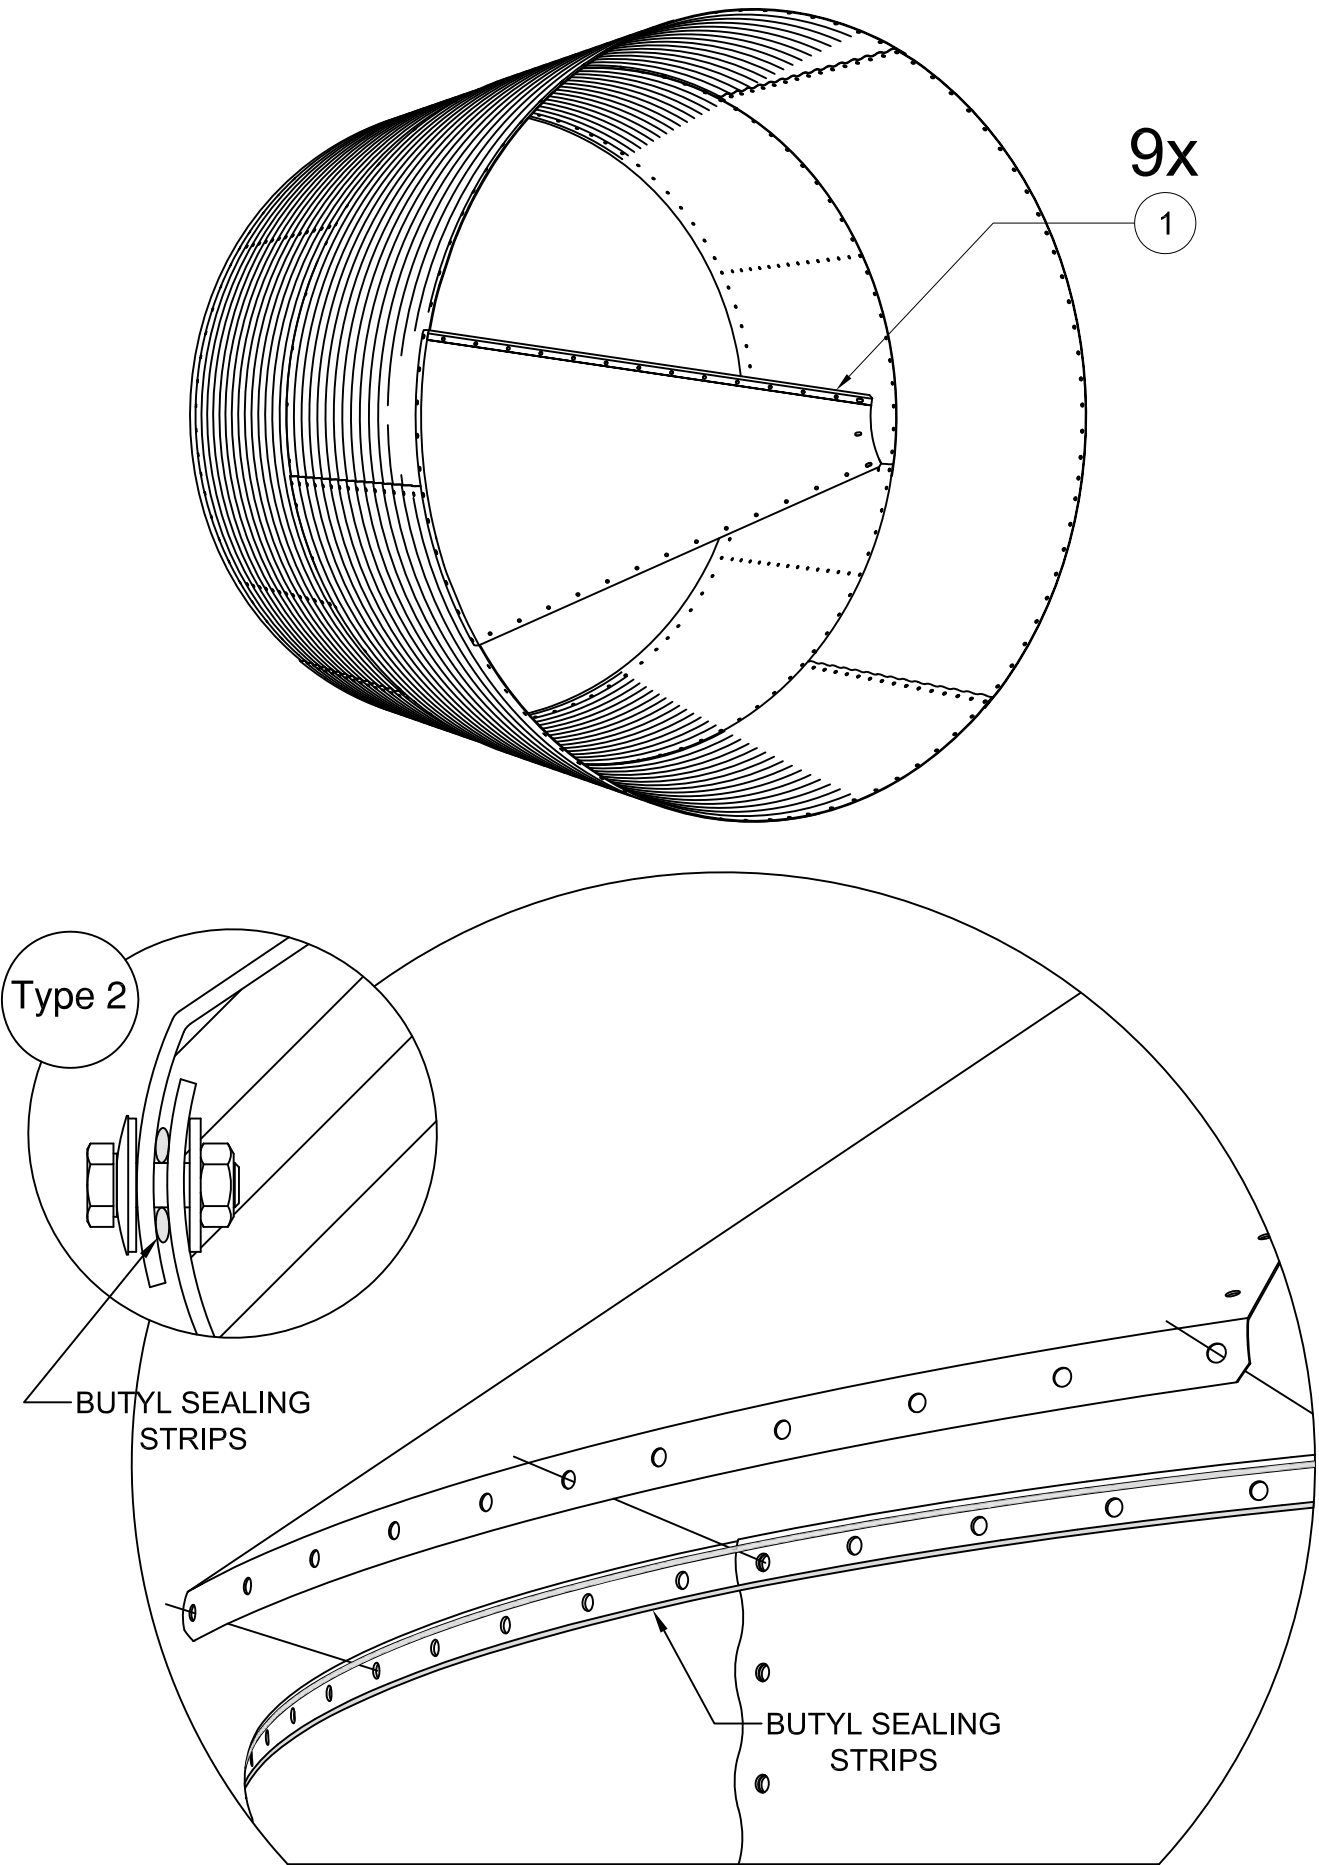


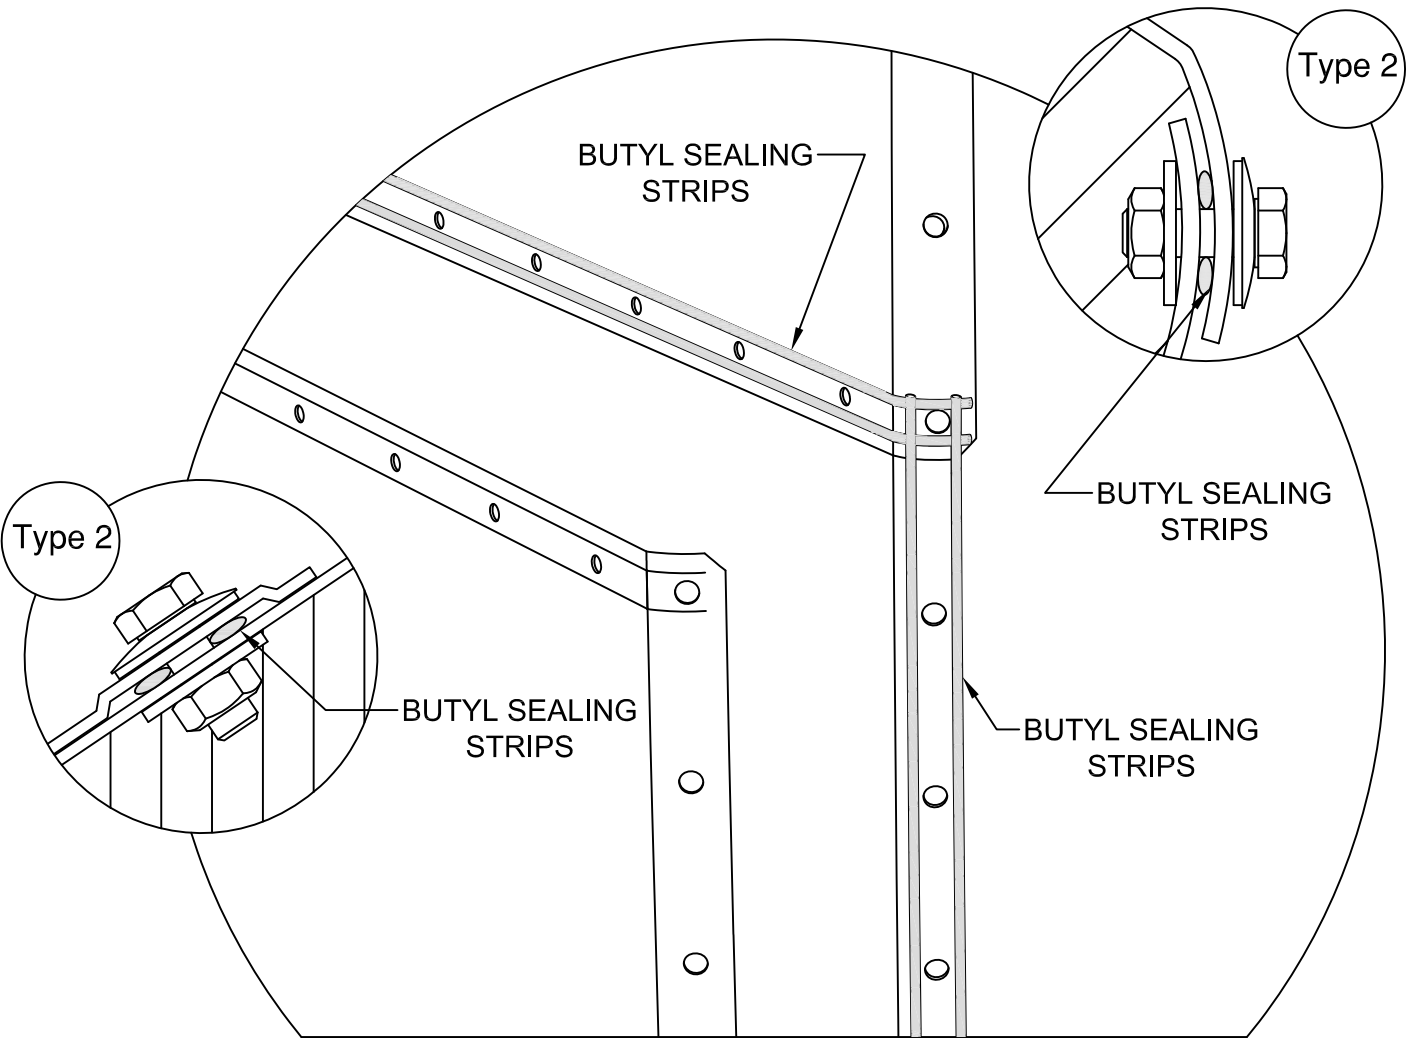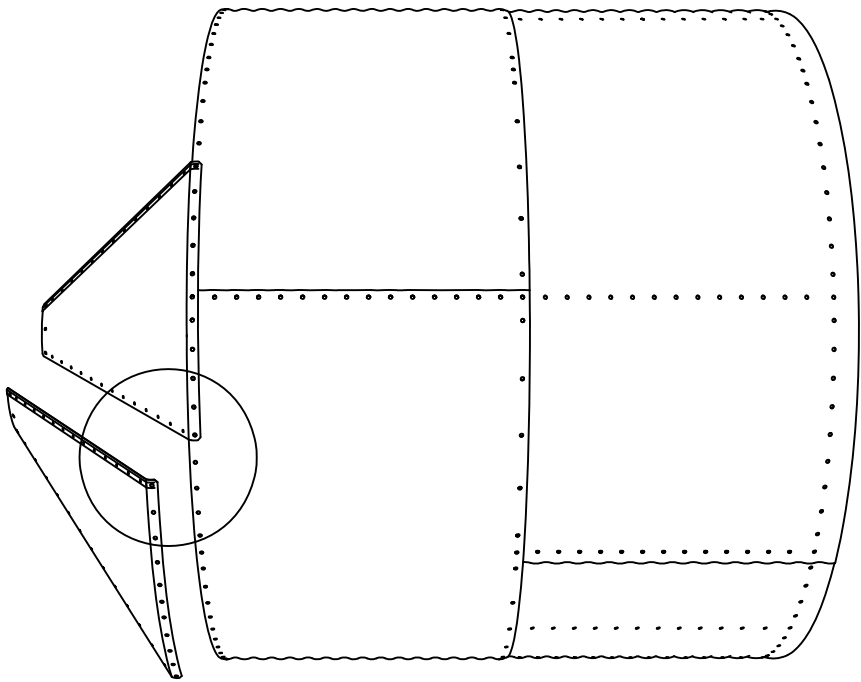

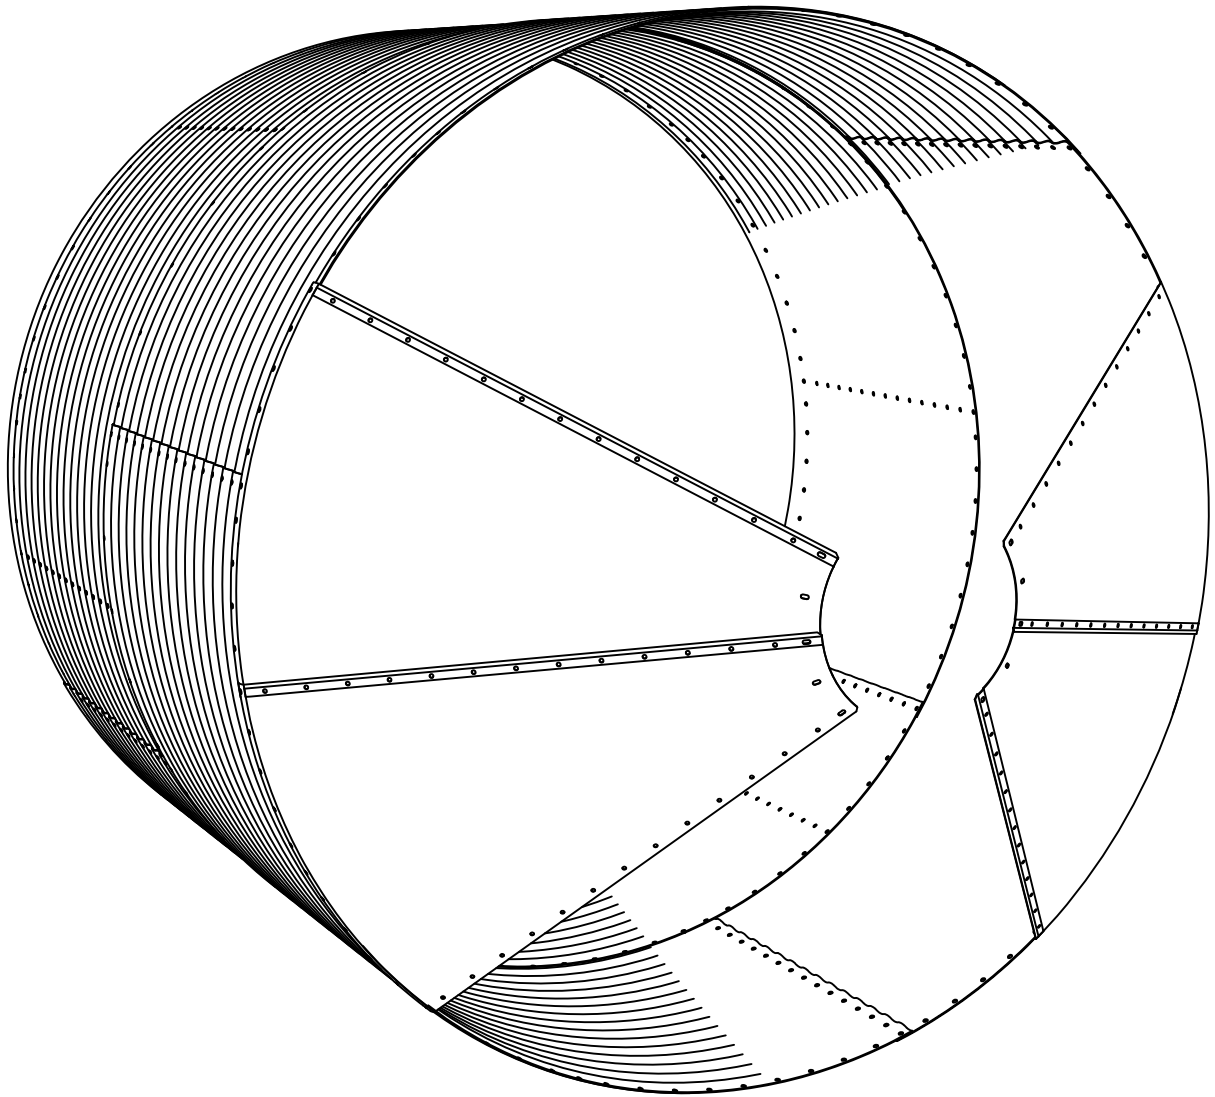

If the assembly is being done directly over the floor, we recommend that you assemble the roof and the hopper at the same time, in such a way that assembly can proceed without having to rotate the silo multiple times during assembly. Assemble the two sectors exactly and only as they are represented in the figures, then follow them with the two opposite sectors. Once the four sectors of the roof are assembled, assembly of the four corresponding sectors of the hopper can proceed when the silo is rotated 90 degrees.

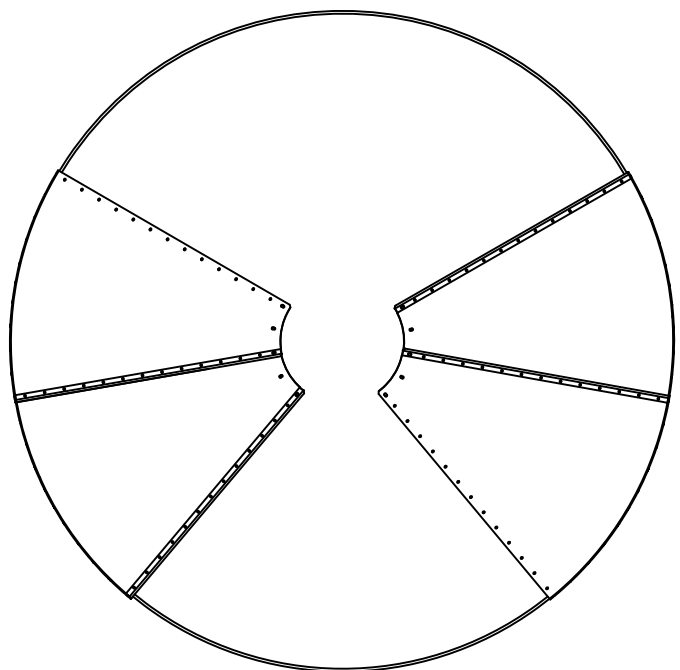


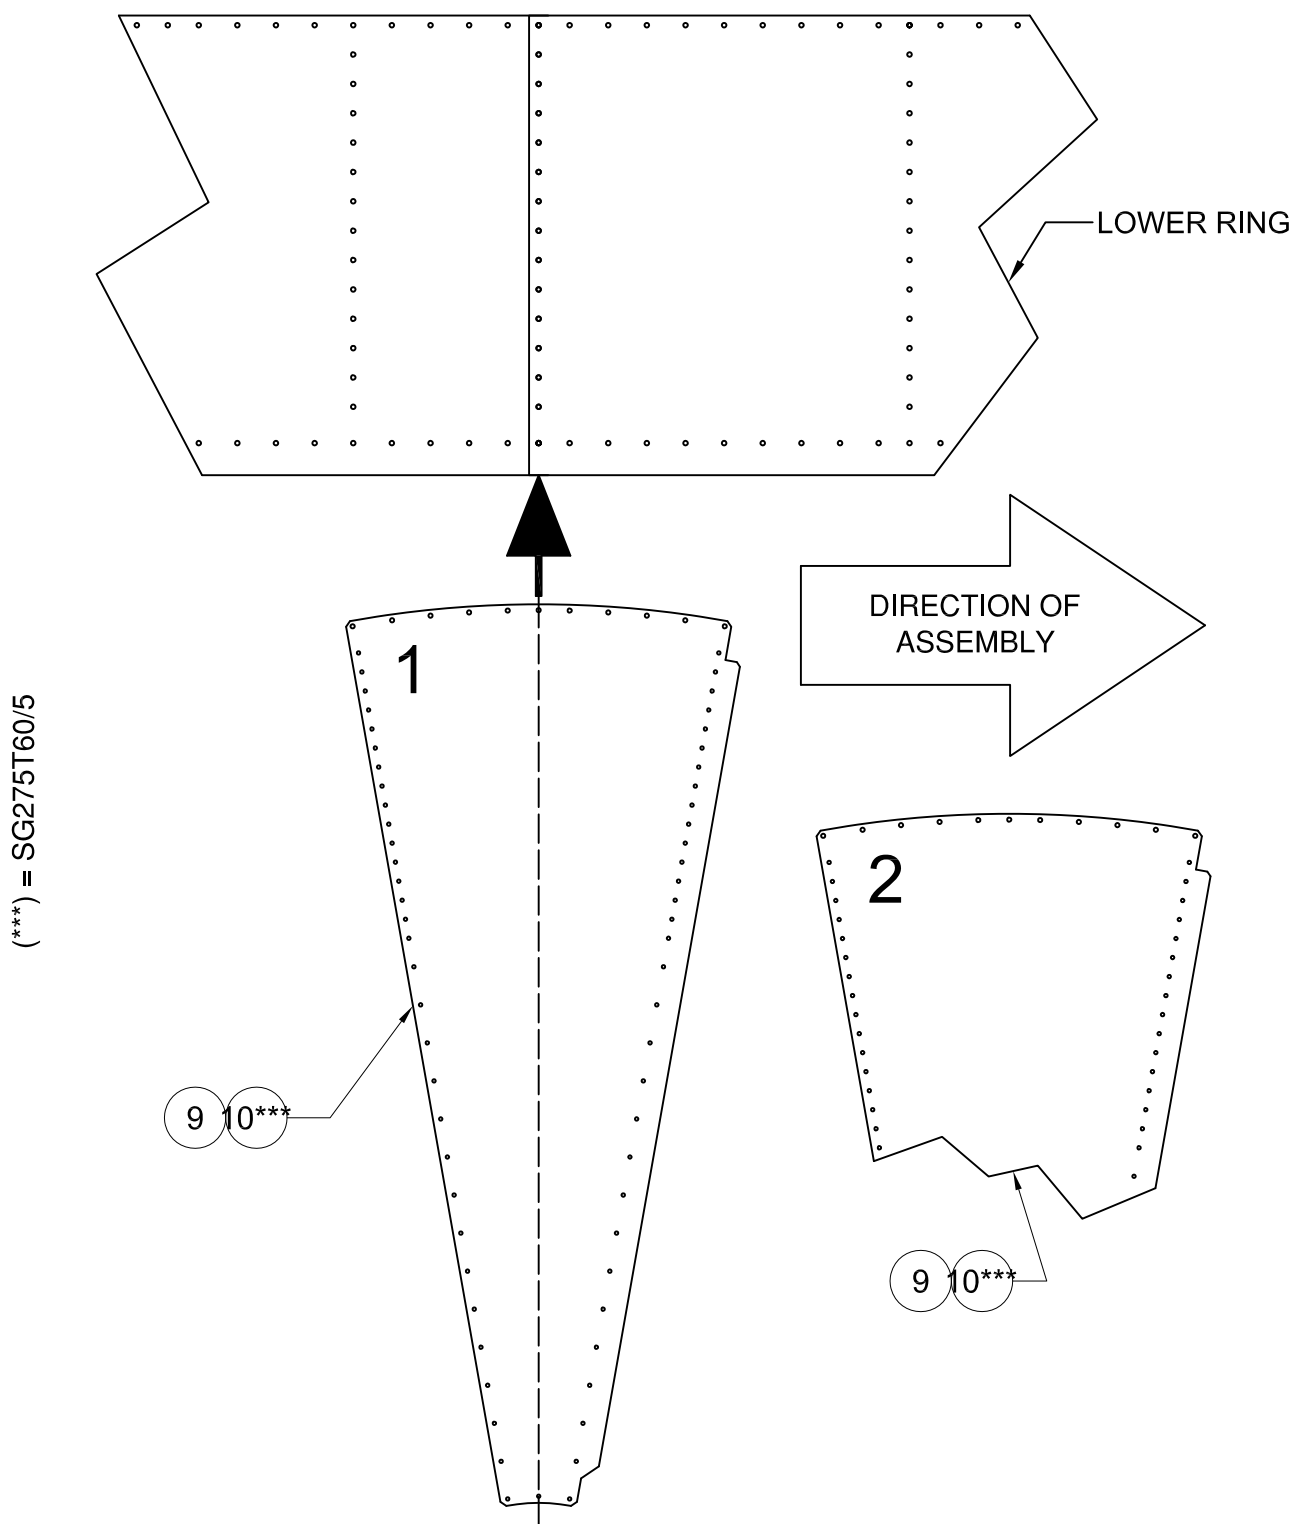

To begin assembly of the silo hopper, connect the center of one sector of the hopper to any one of the three vertical seams of joints in the lower ring. It is important to overlap the sectors in the correct position, only and exactly as it is shown in the adjoining figures.


Once in position, the first sector should follow the general schematic (page 10). Zones where butyl sealing strips are to be placed should be degreased properly to ensure good adhesion.

Insert the screws in the right direction, and follow the instructions indicated on page 11 to tighten them correctly.

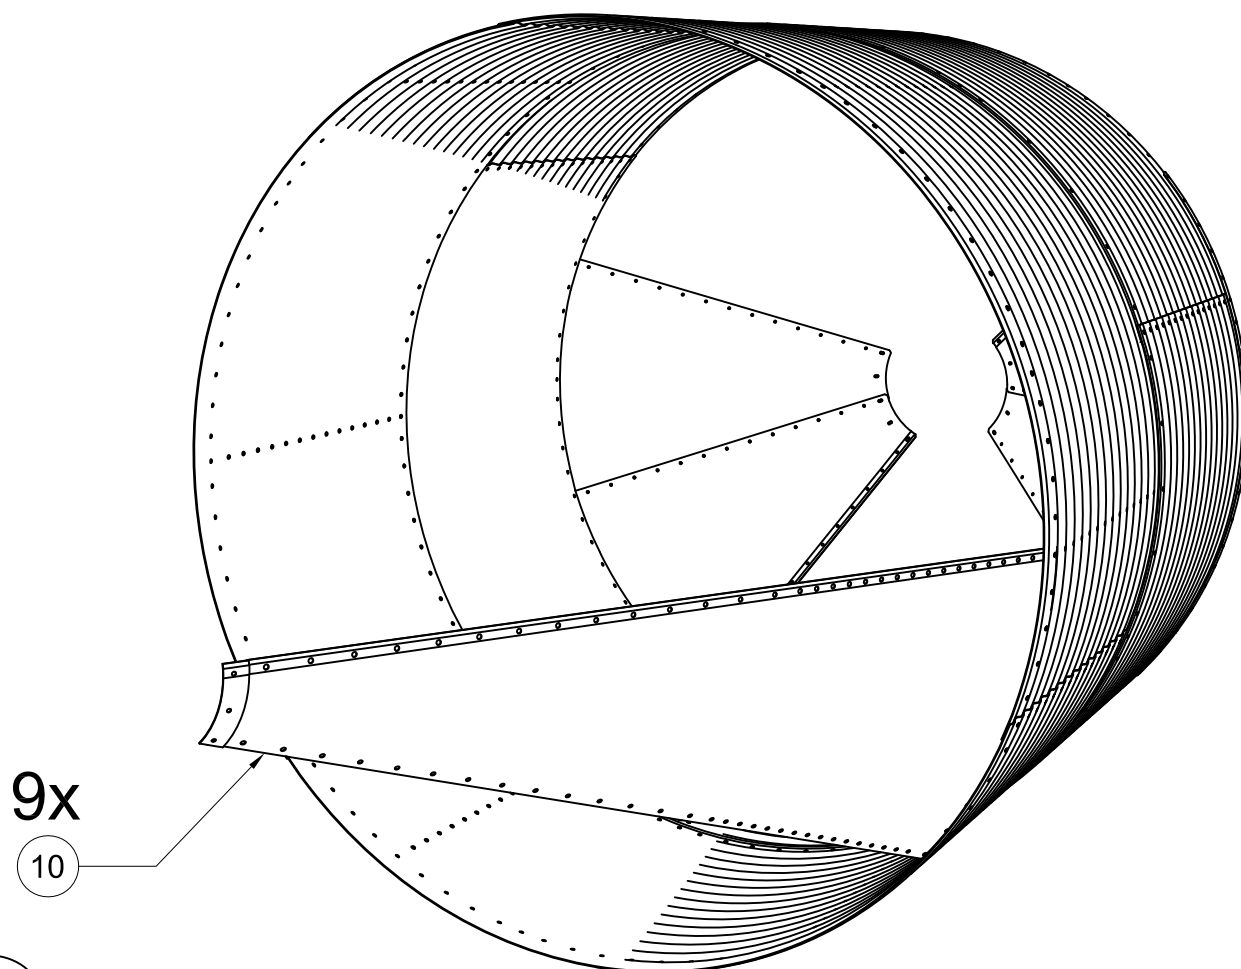

9x


10

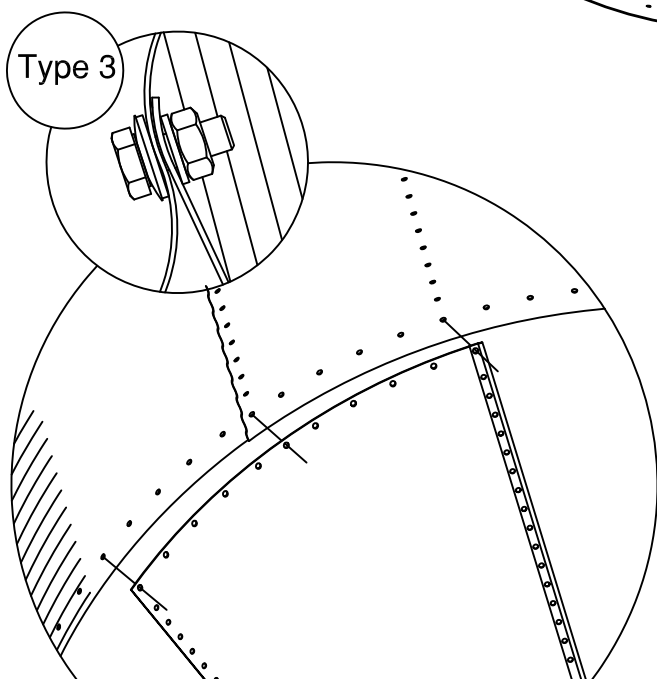


Type 3



INTERIOR VIEW


SG275T60/3
SG275T60/4
SG275T60/5

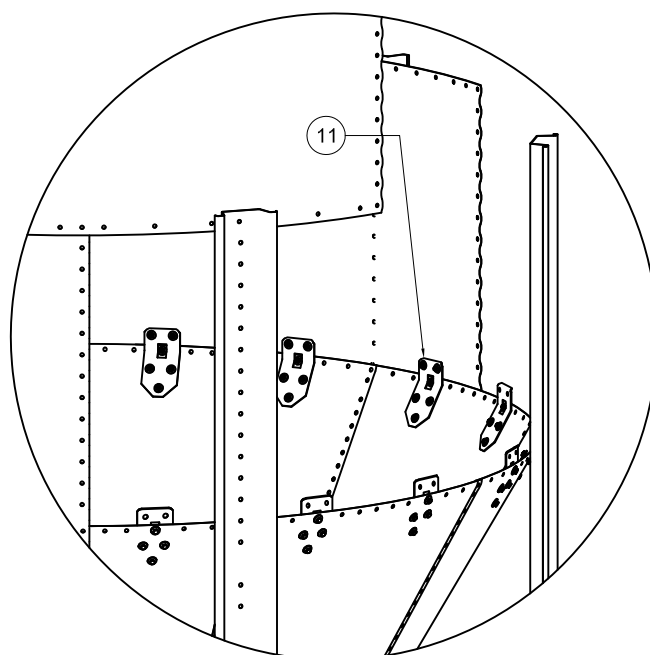

11

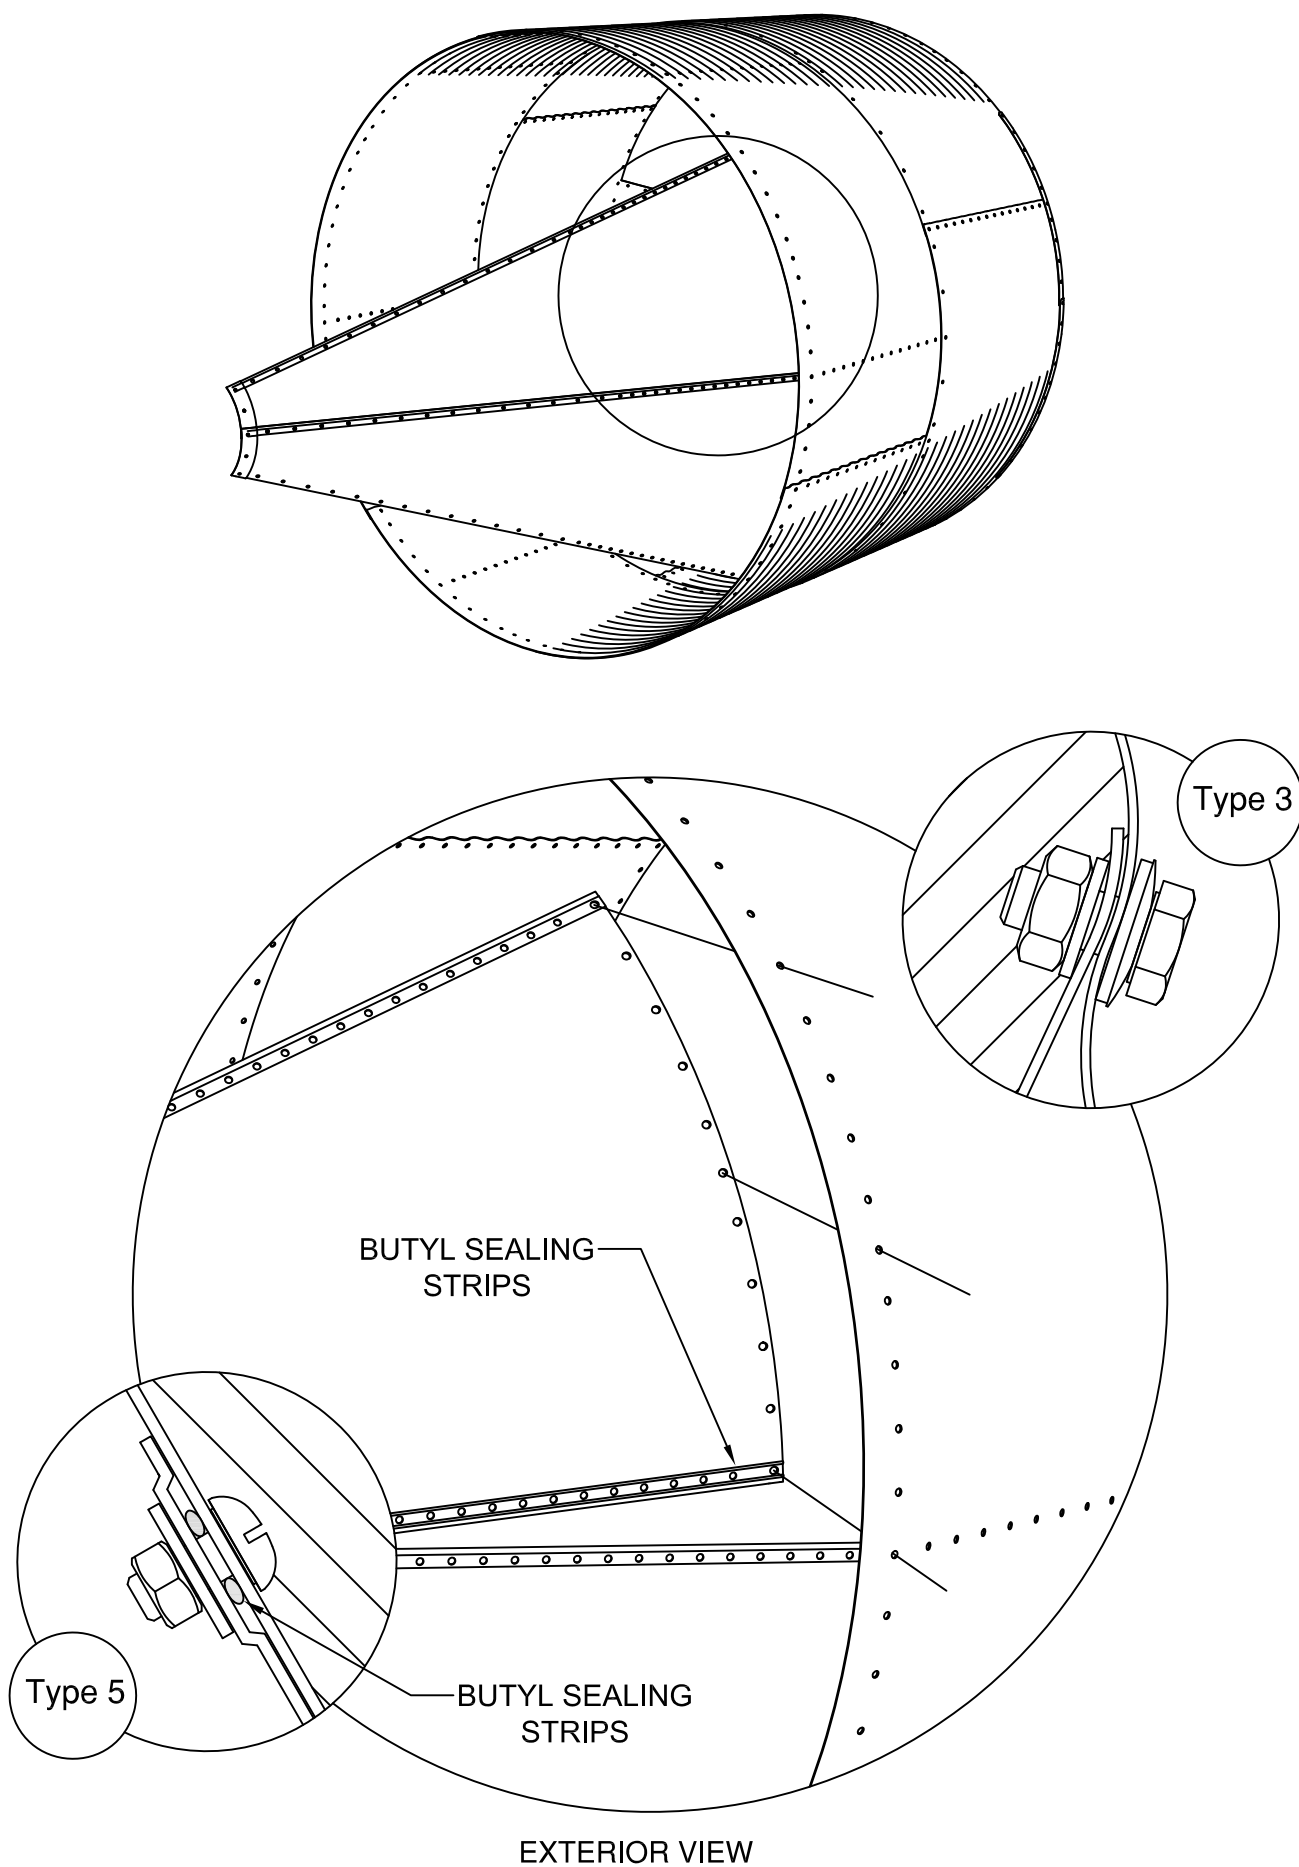

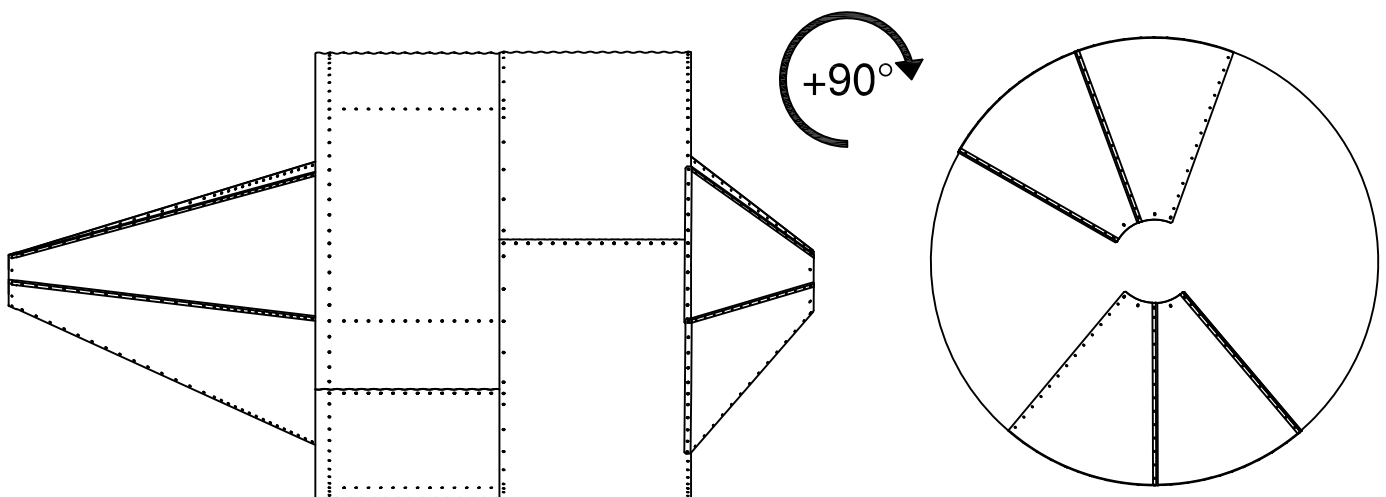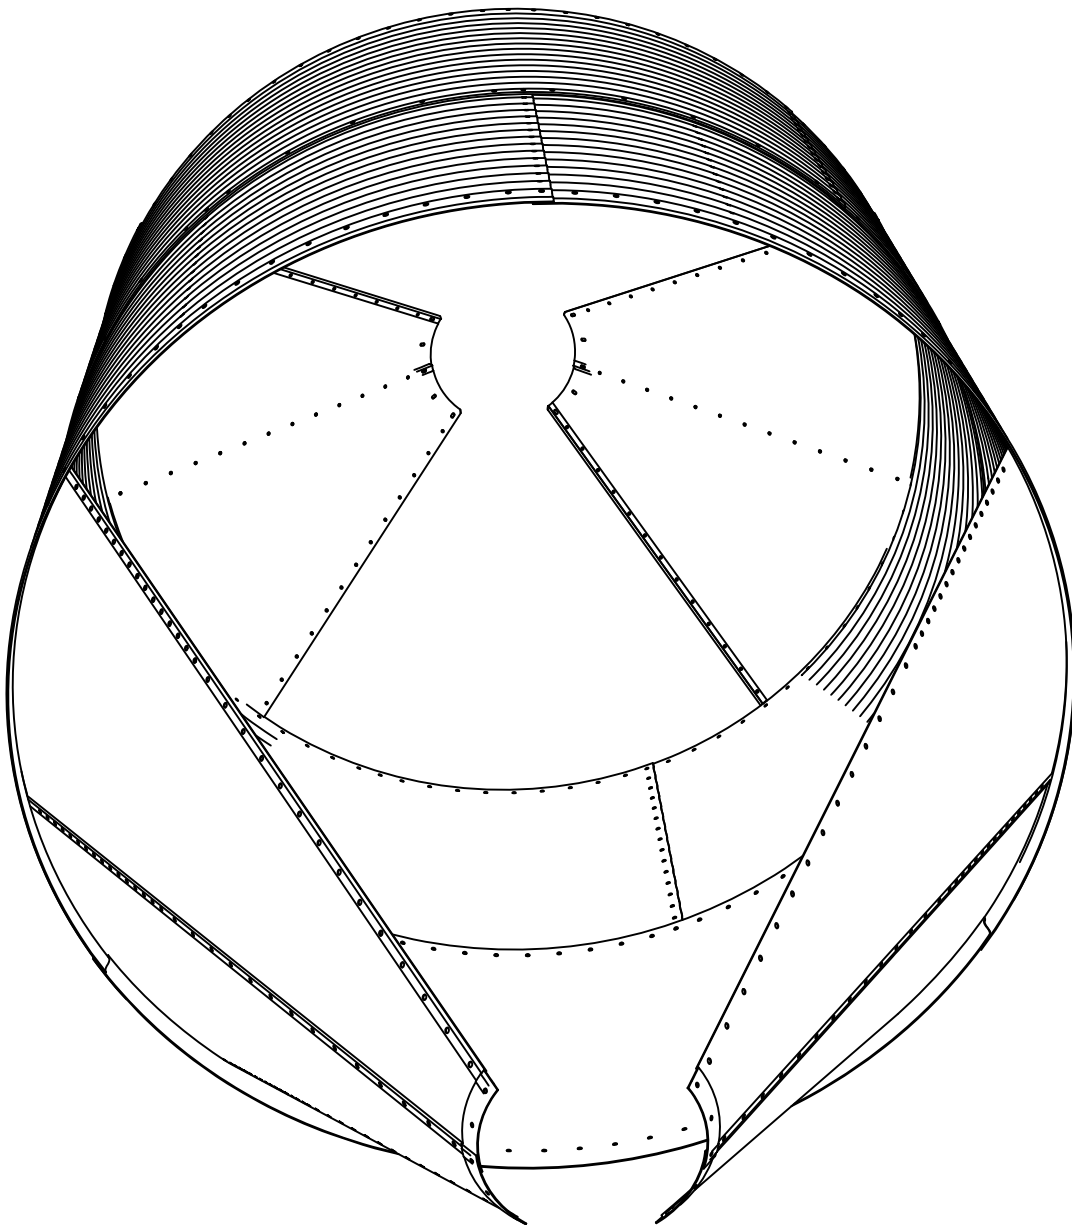

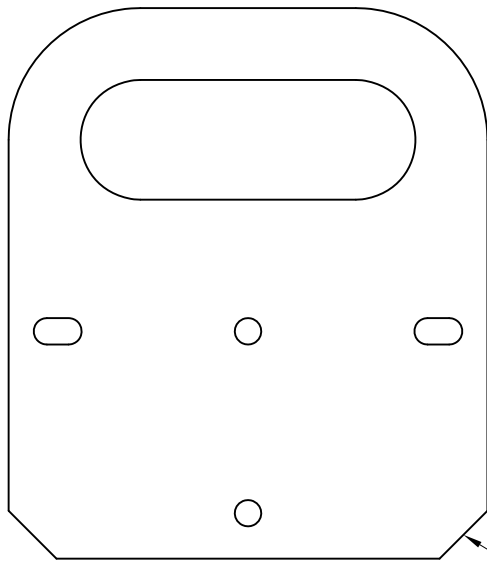



3x

29


If your silo includes a lifting kit, put the lift plates into position at this point in your assembly. For assembly, use a mechanical joint like the one in the figure below with the head of the screw on the inside of the silo.

The lifting plates should be equidistant from each other, in such a way that they will fit in each one of the vertical seams of the upper ring.

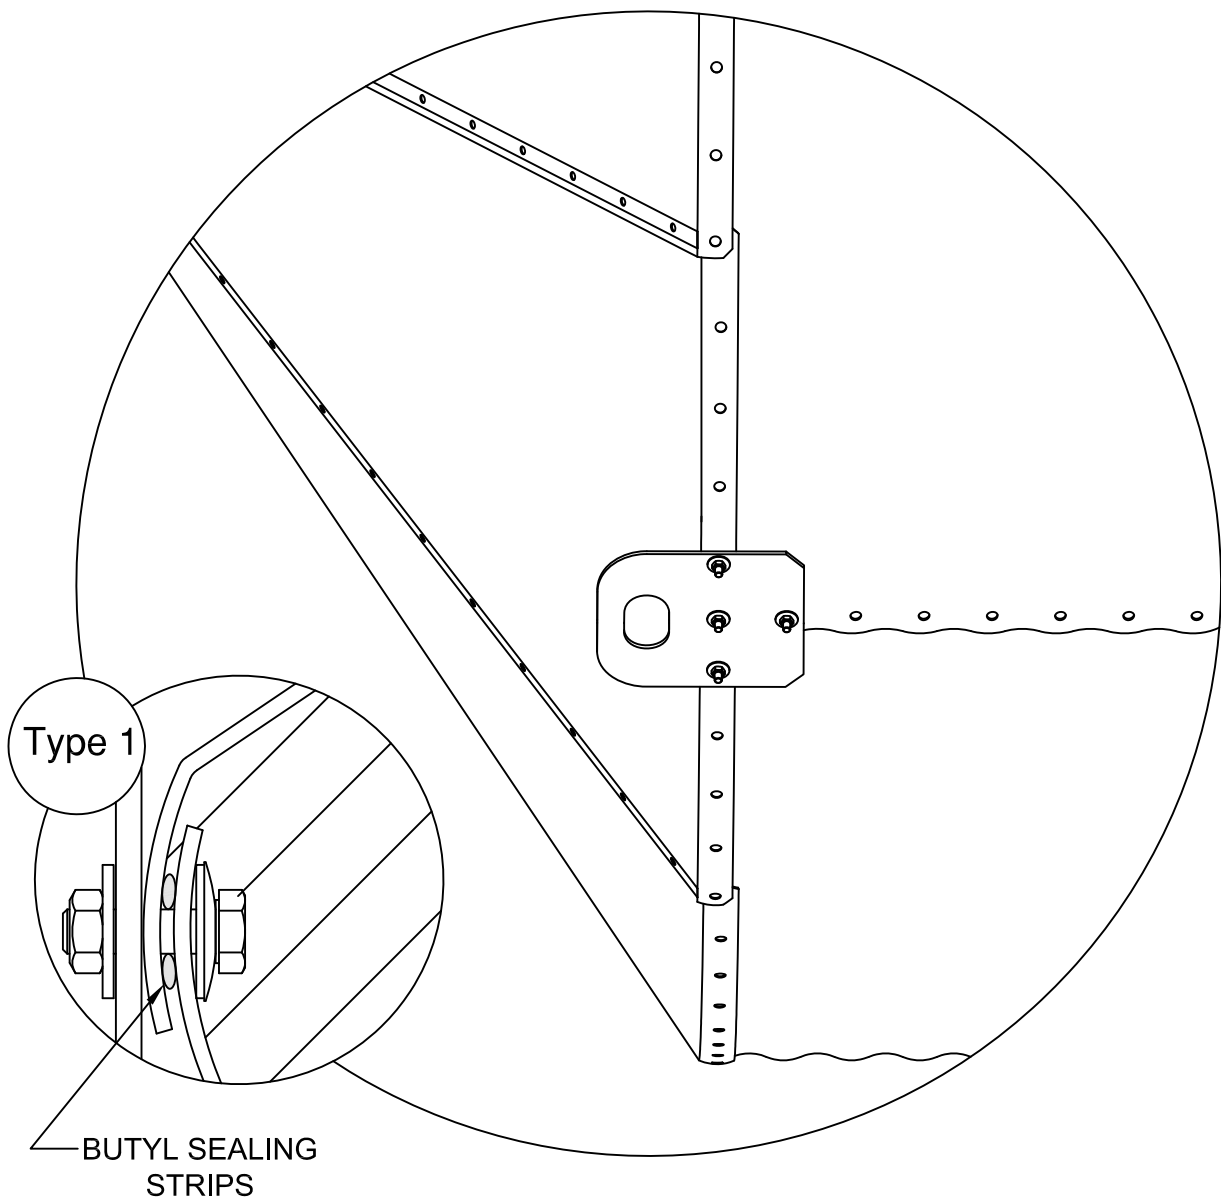

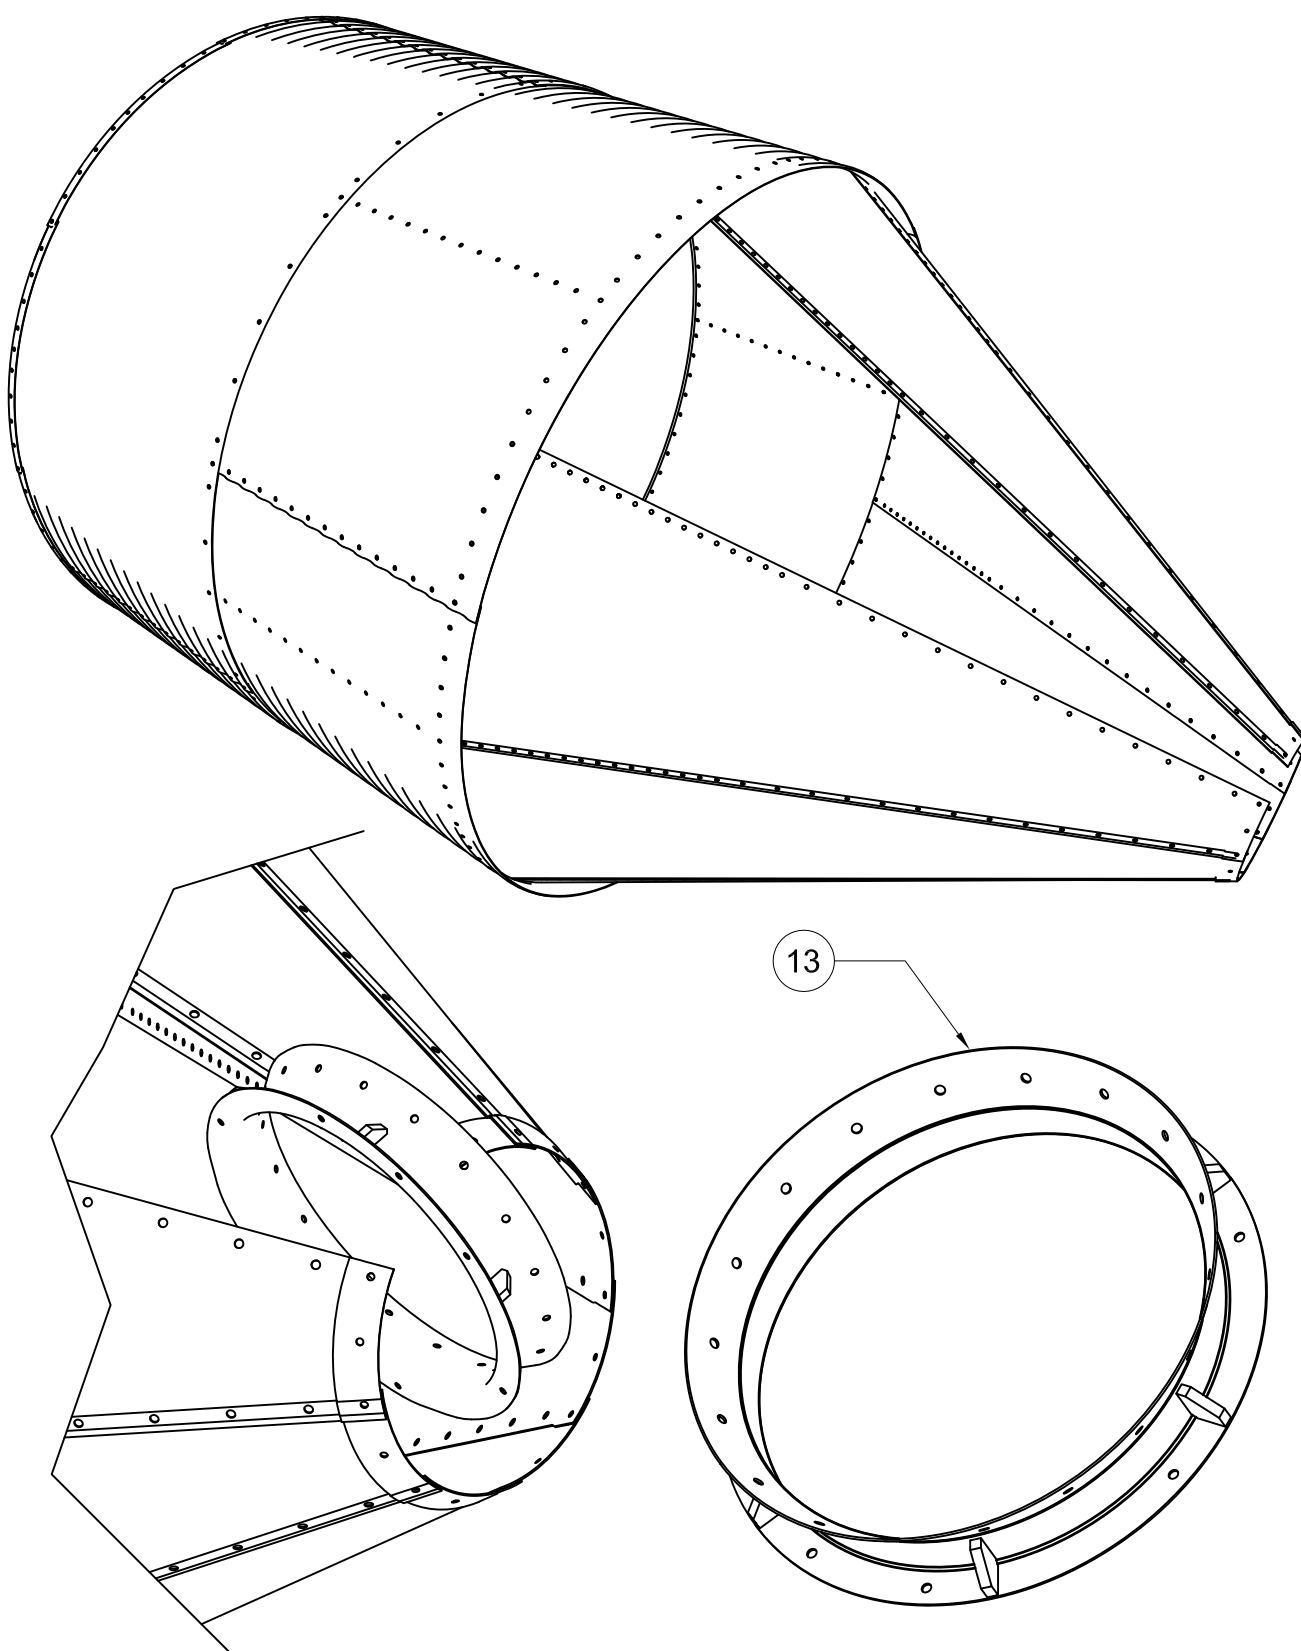

Complete the assembly of the silo roof. The silo hopper is not ready to be closed until it has been introduced through the ring of the outlet port. Once connected, the outlet port can begin to completely close the silo hopper. All areas where butyl sealing strip are to be placed should be properly degreased to ensure a good adhesion. Insert the screws in the right direction and follow the instructions indicated on page 11 for tightening them correctly.

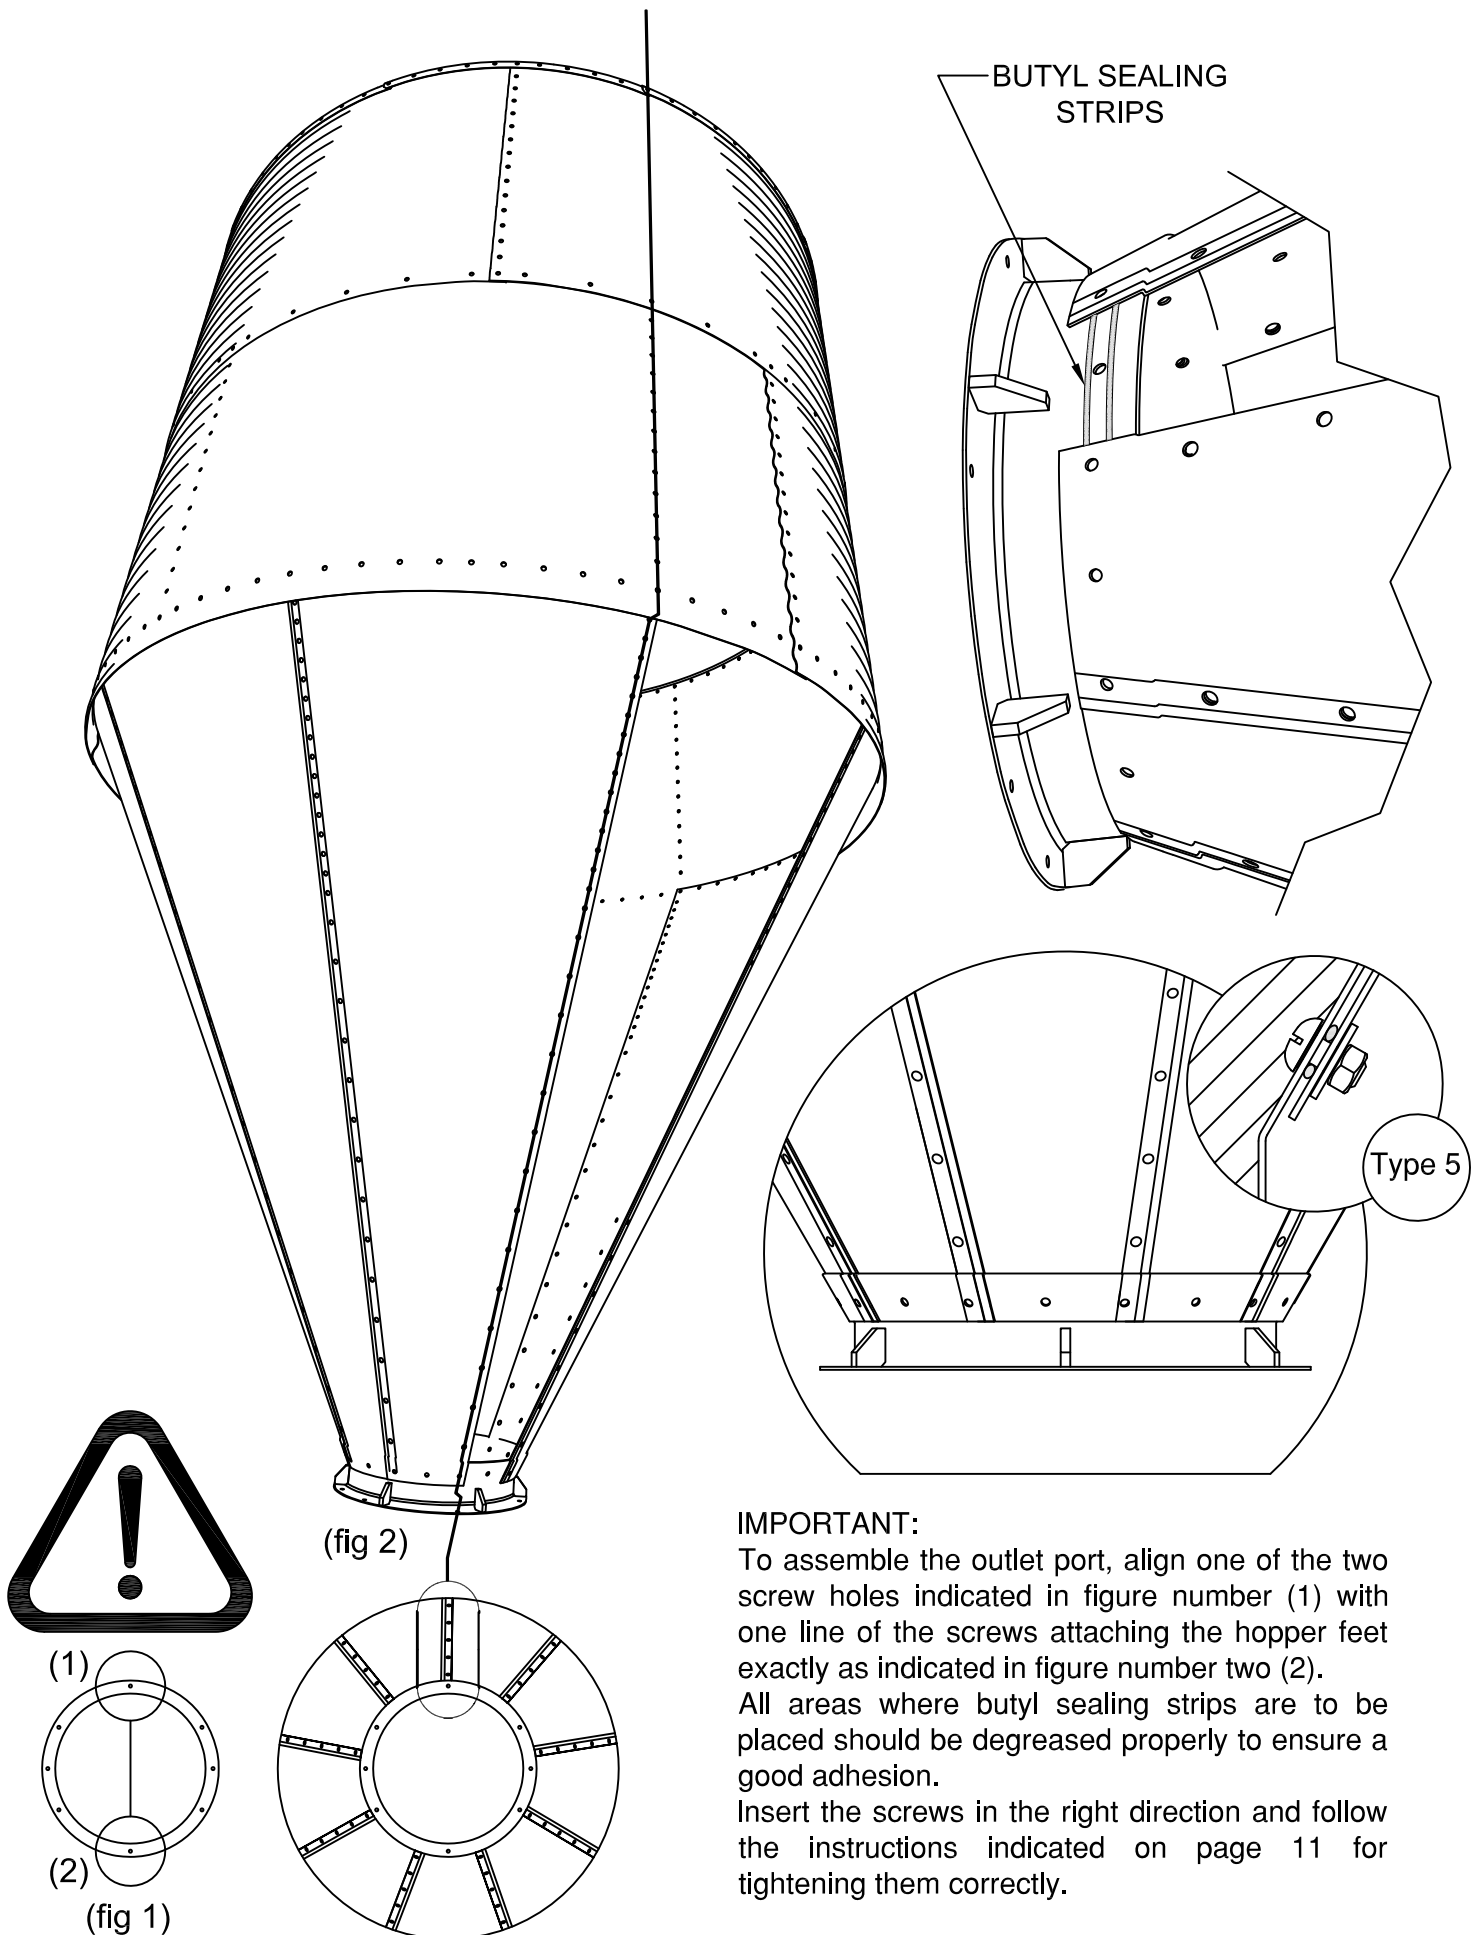


IMPORTANT:


To assemble the outlet port, align one of the two screw holes indicated in figure number (1) with one line of the screws attaching the hopper feet exactly as indicated in figure number two (2).





All areas where butyl sealing strips are to be placed should be degreased properly to ensure a good adhesion.


Insert the screws in the right direction and follow the instructions indicated on page 11 for tightening them correctly.

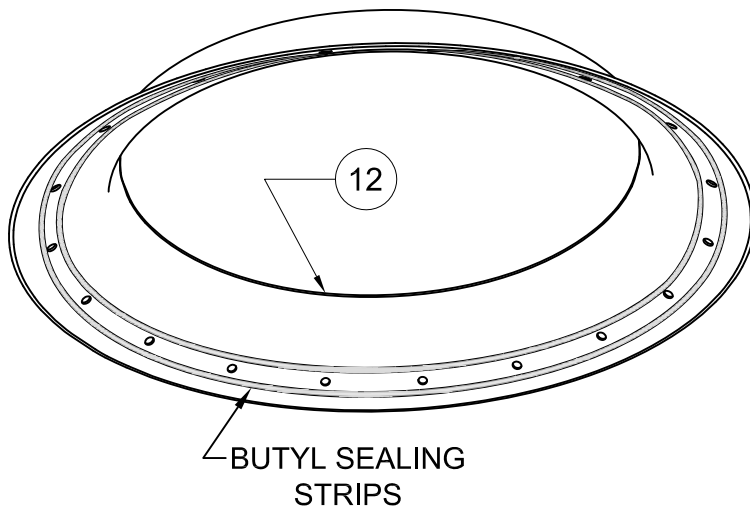



Complete the assembly of the silo body by assembling the loading door (31G100075A020). All areas where butyl sealing strips are to be placed should be properly degreased to ensure a good adhesion. Insert the screws in the right direction and follow the instructions indicated on page 11 for tightening them correctly.

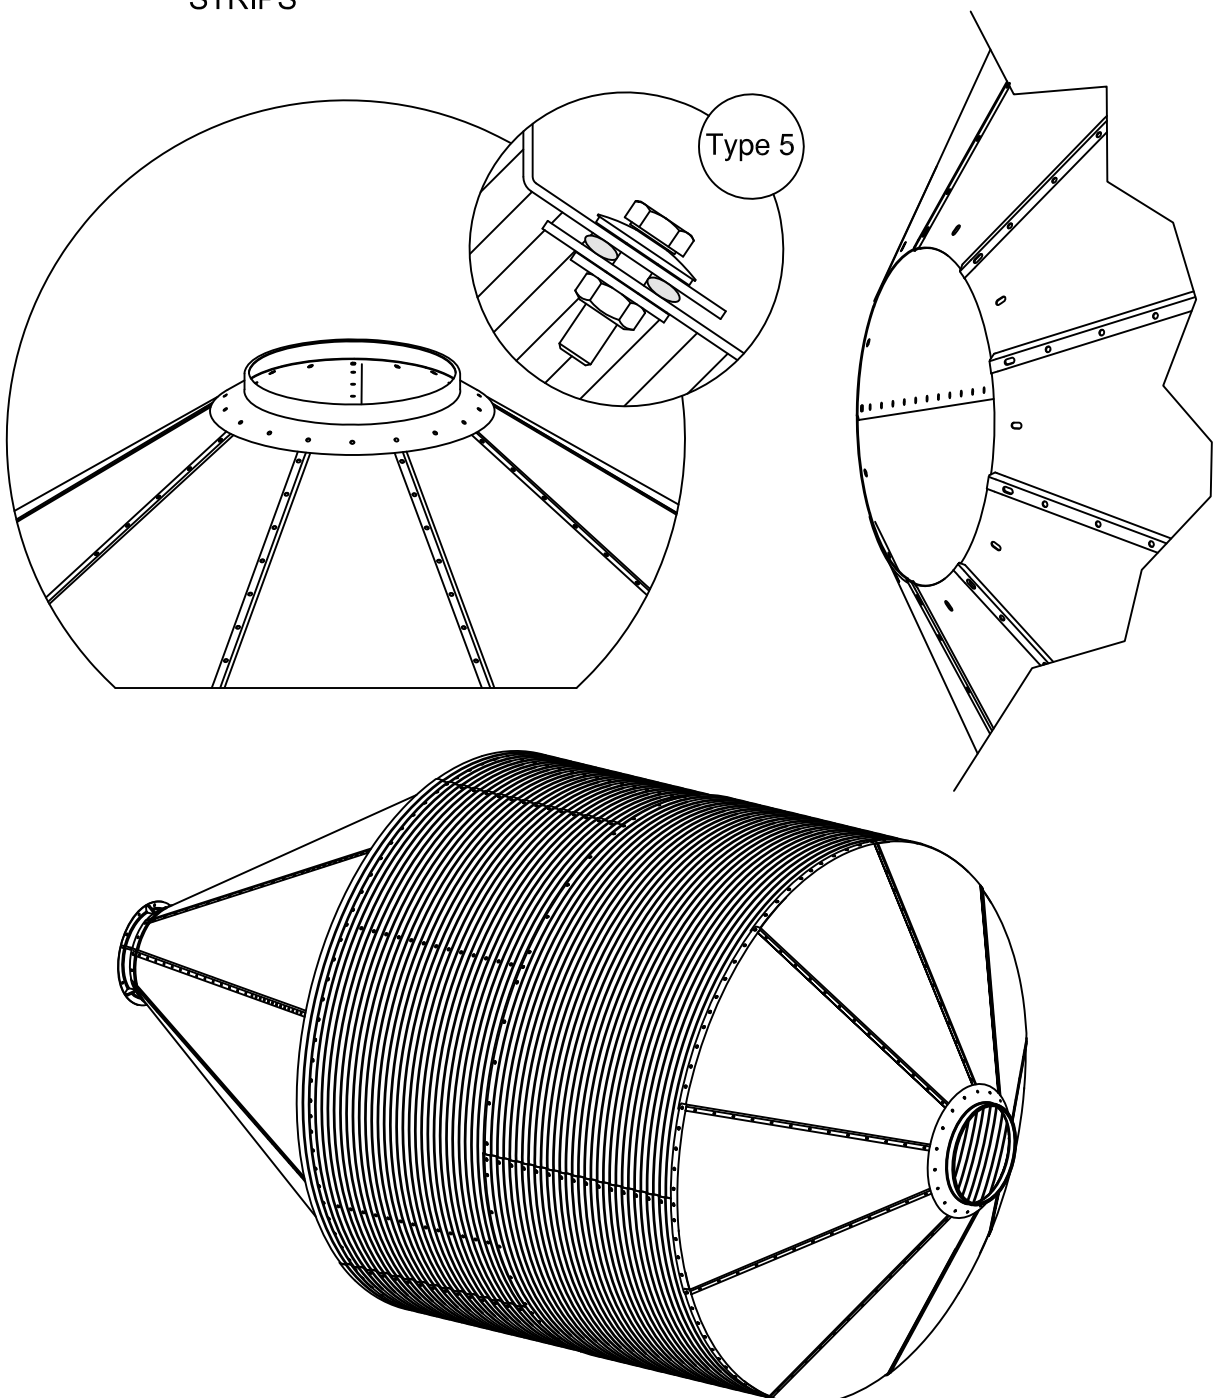


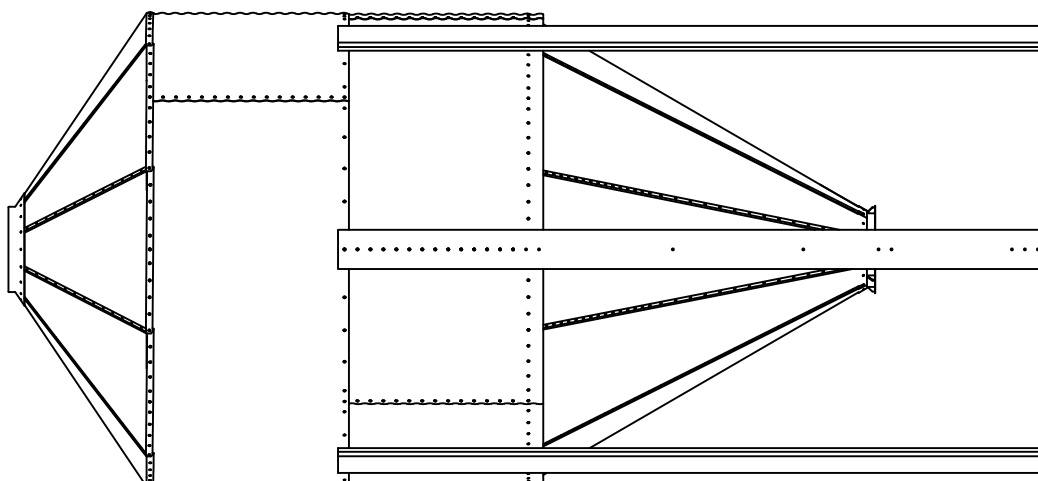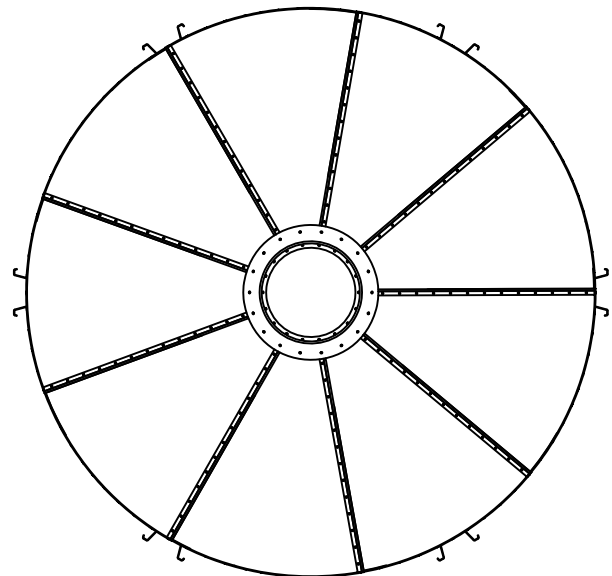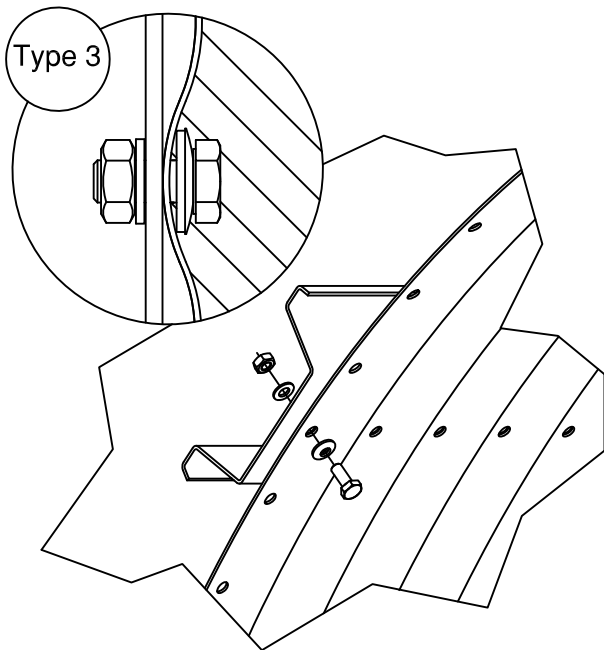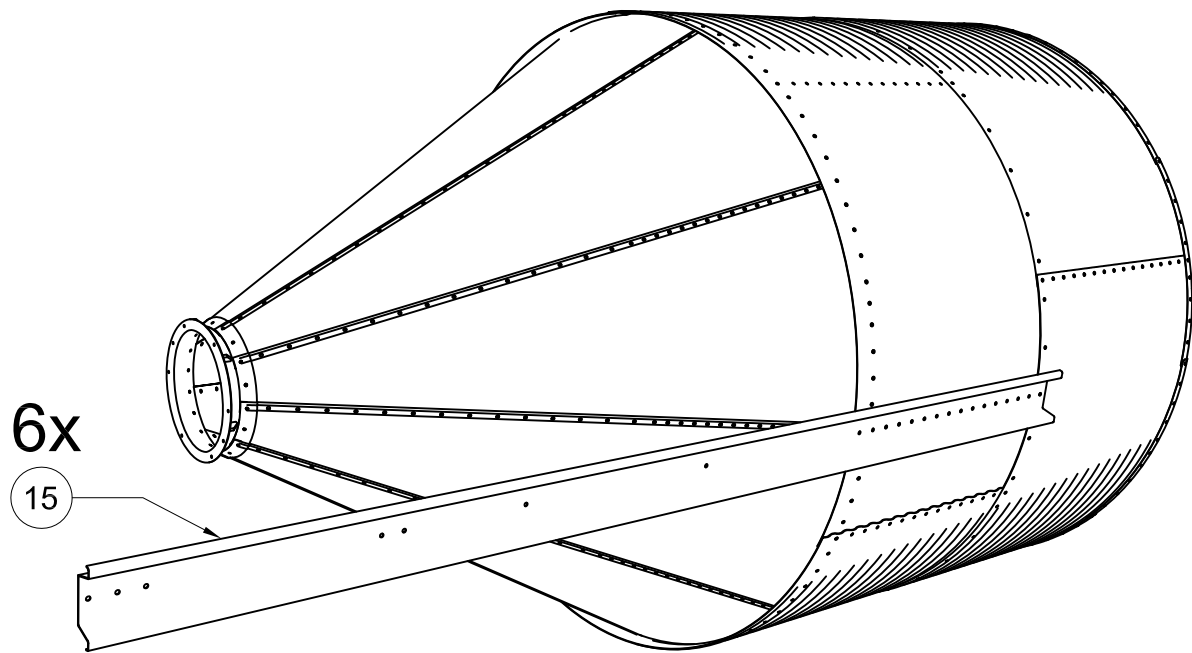

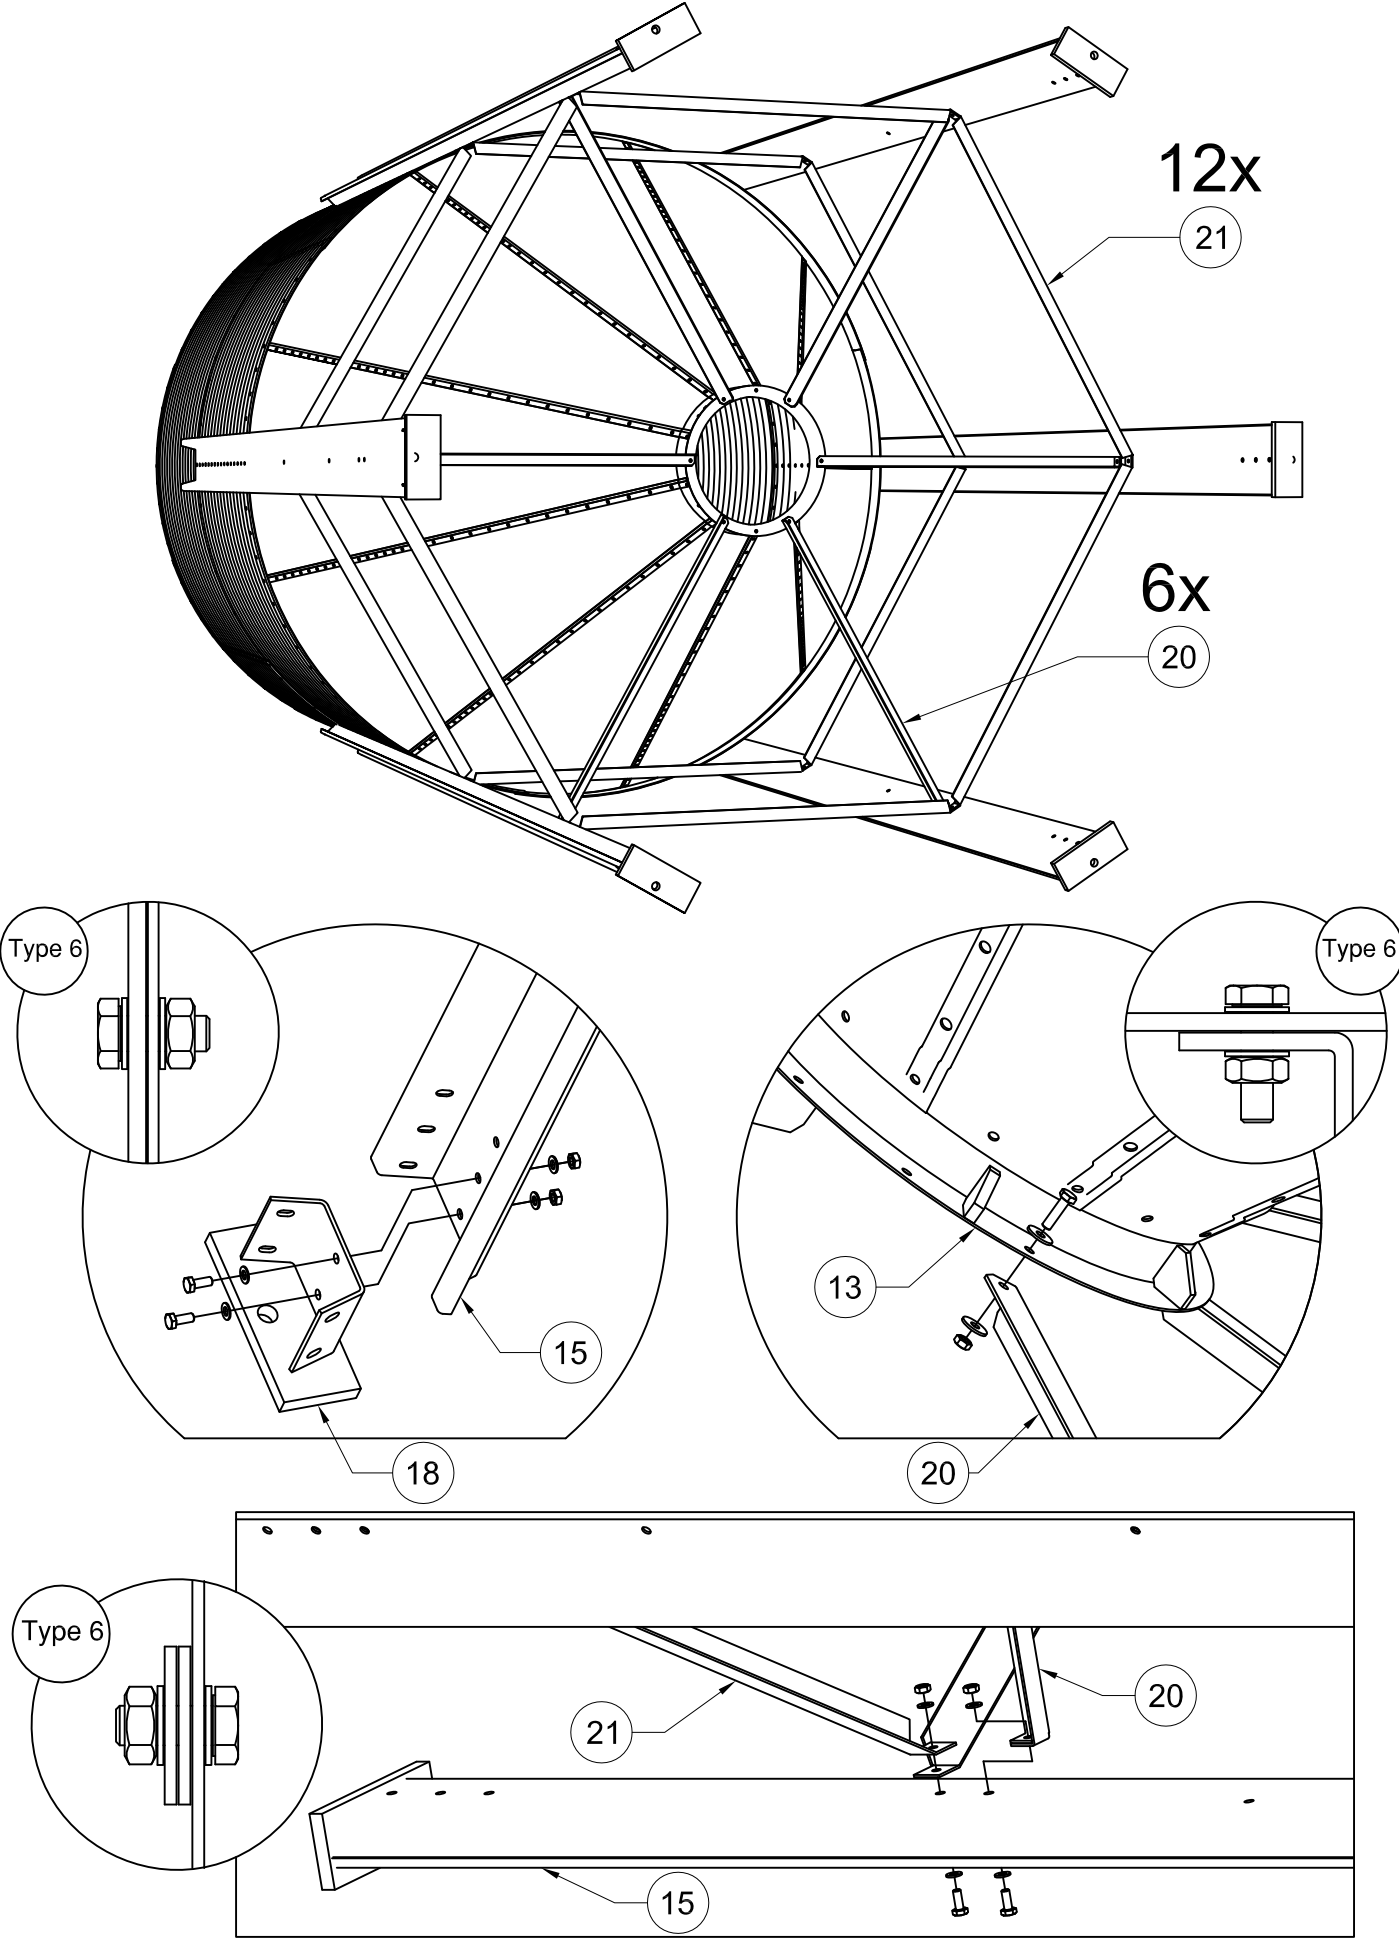

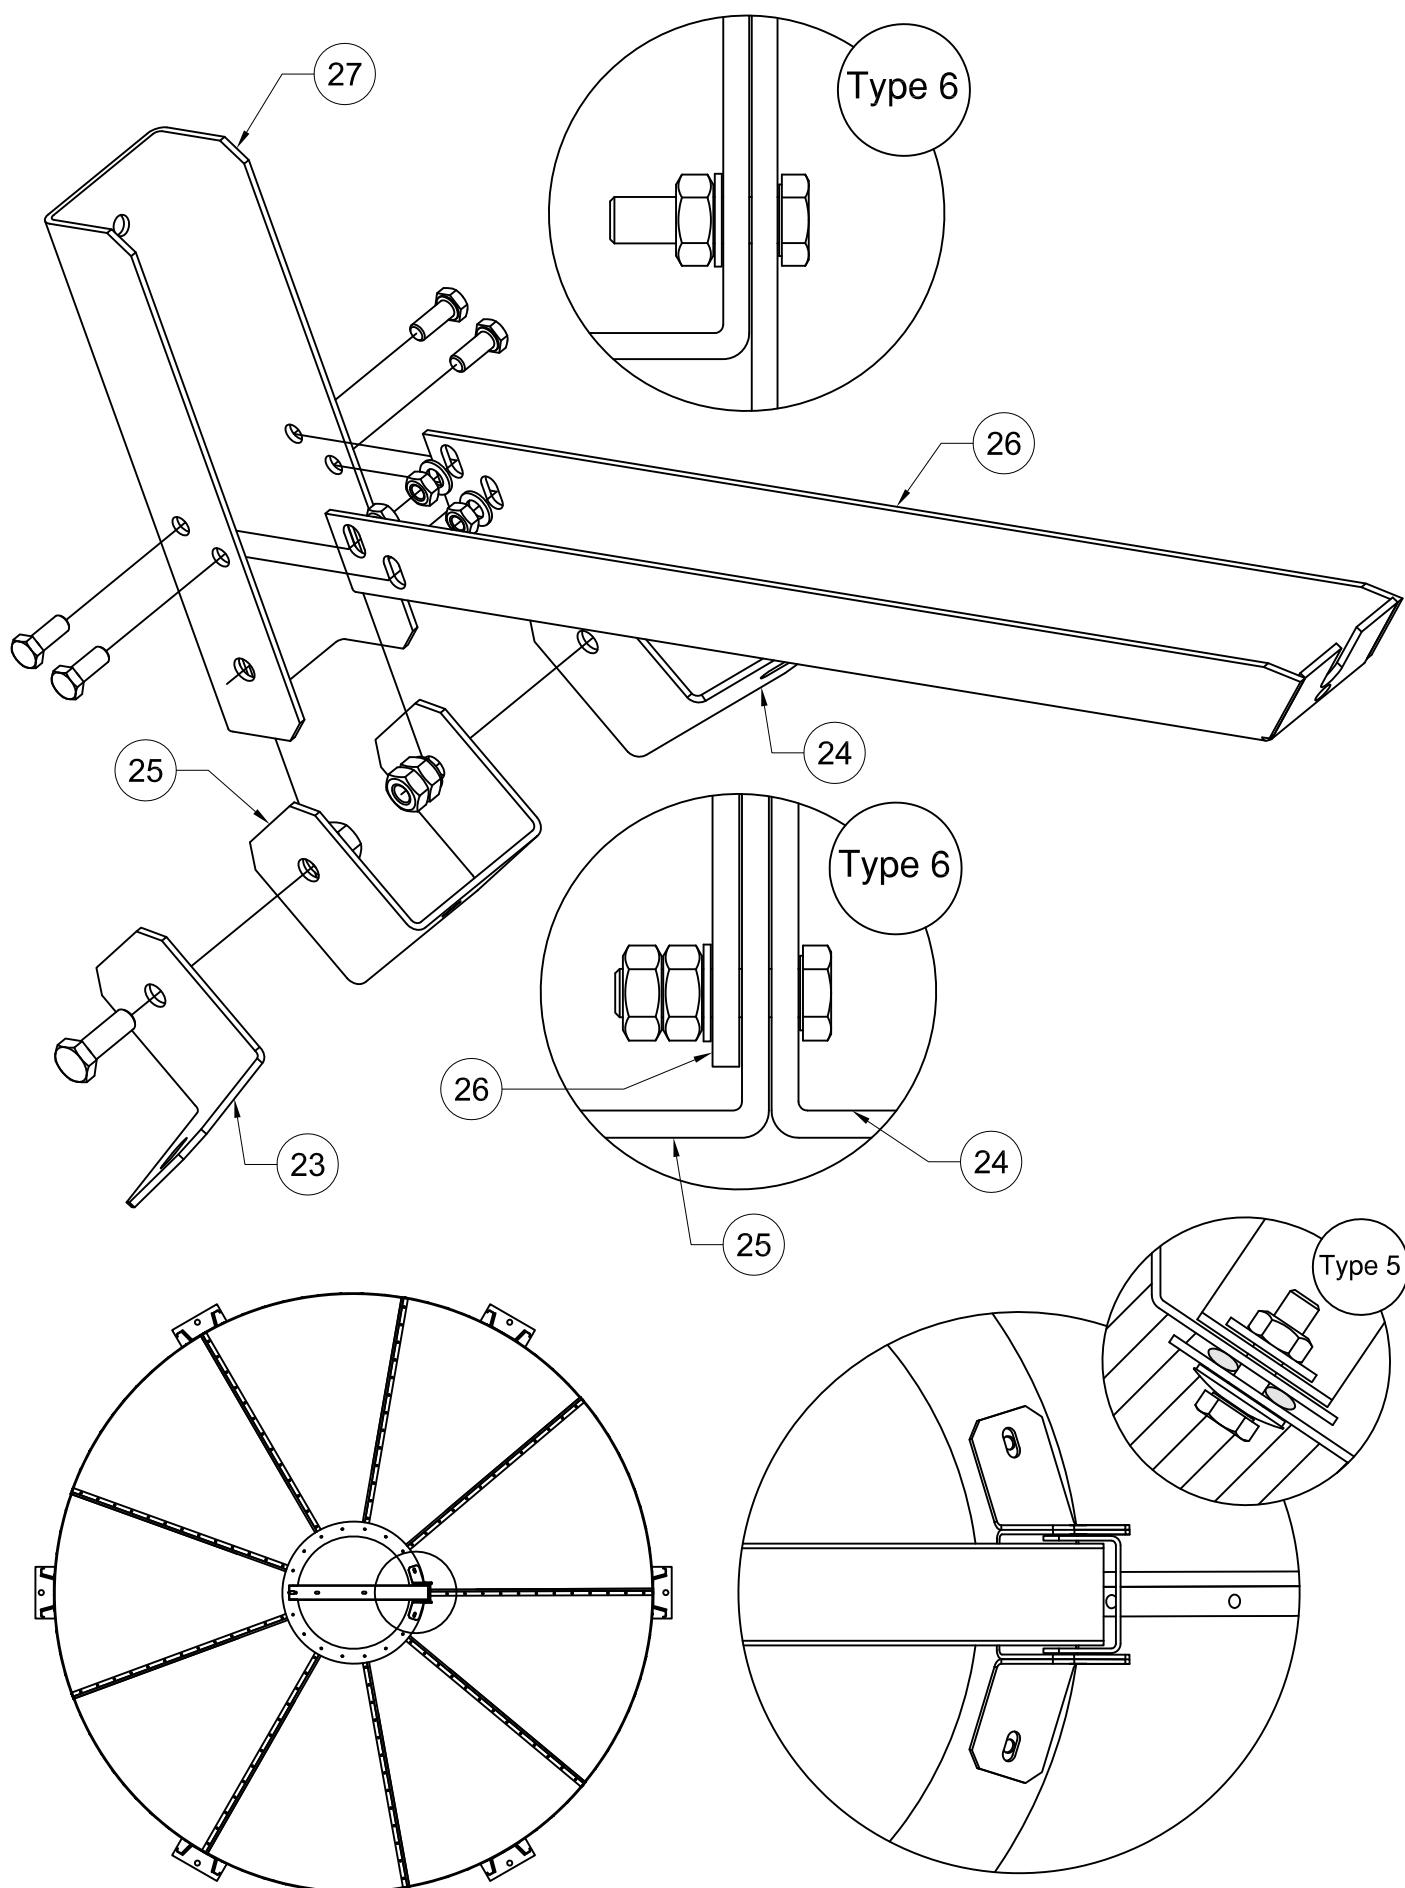


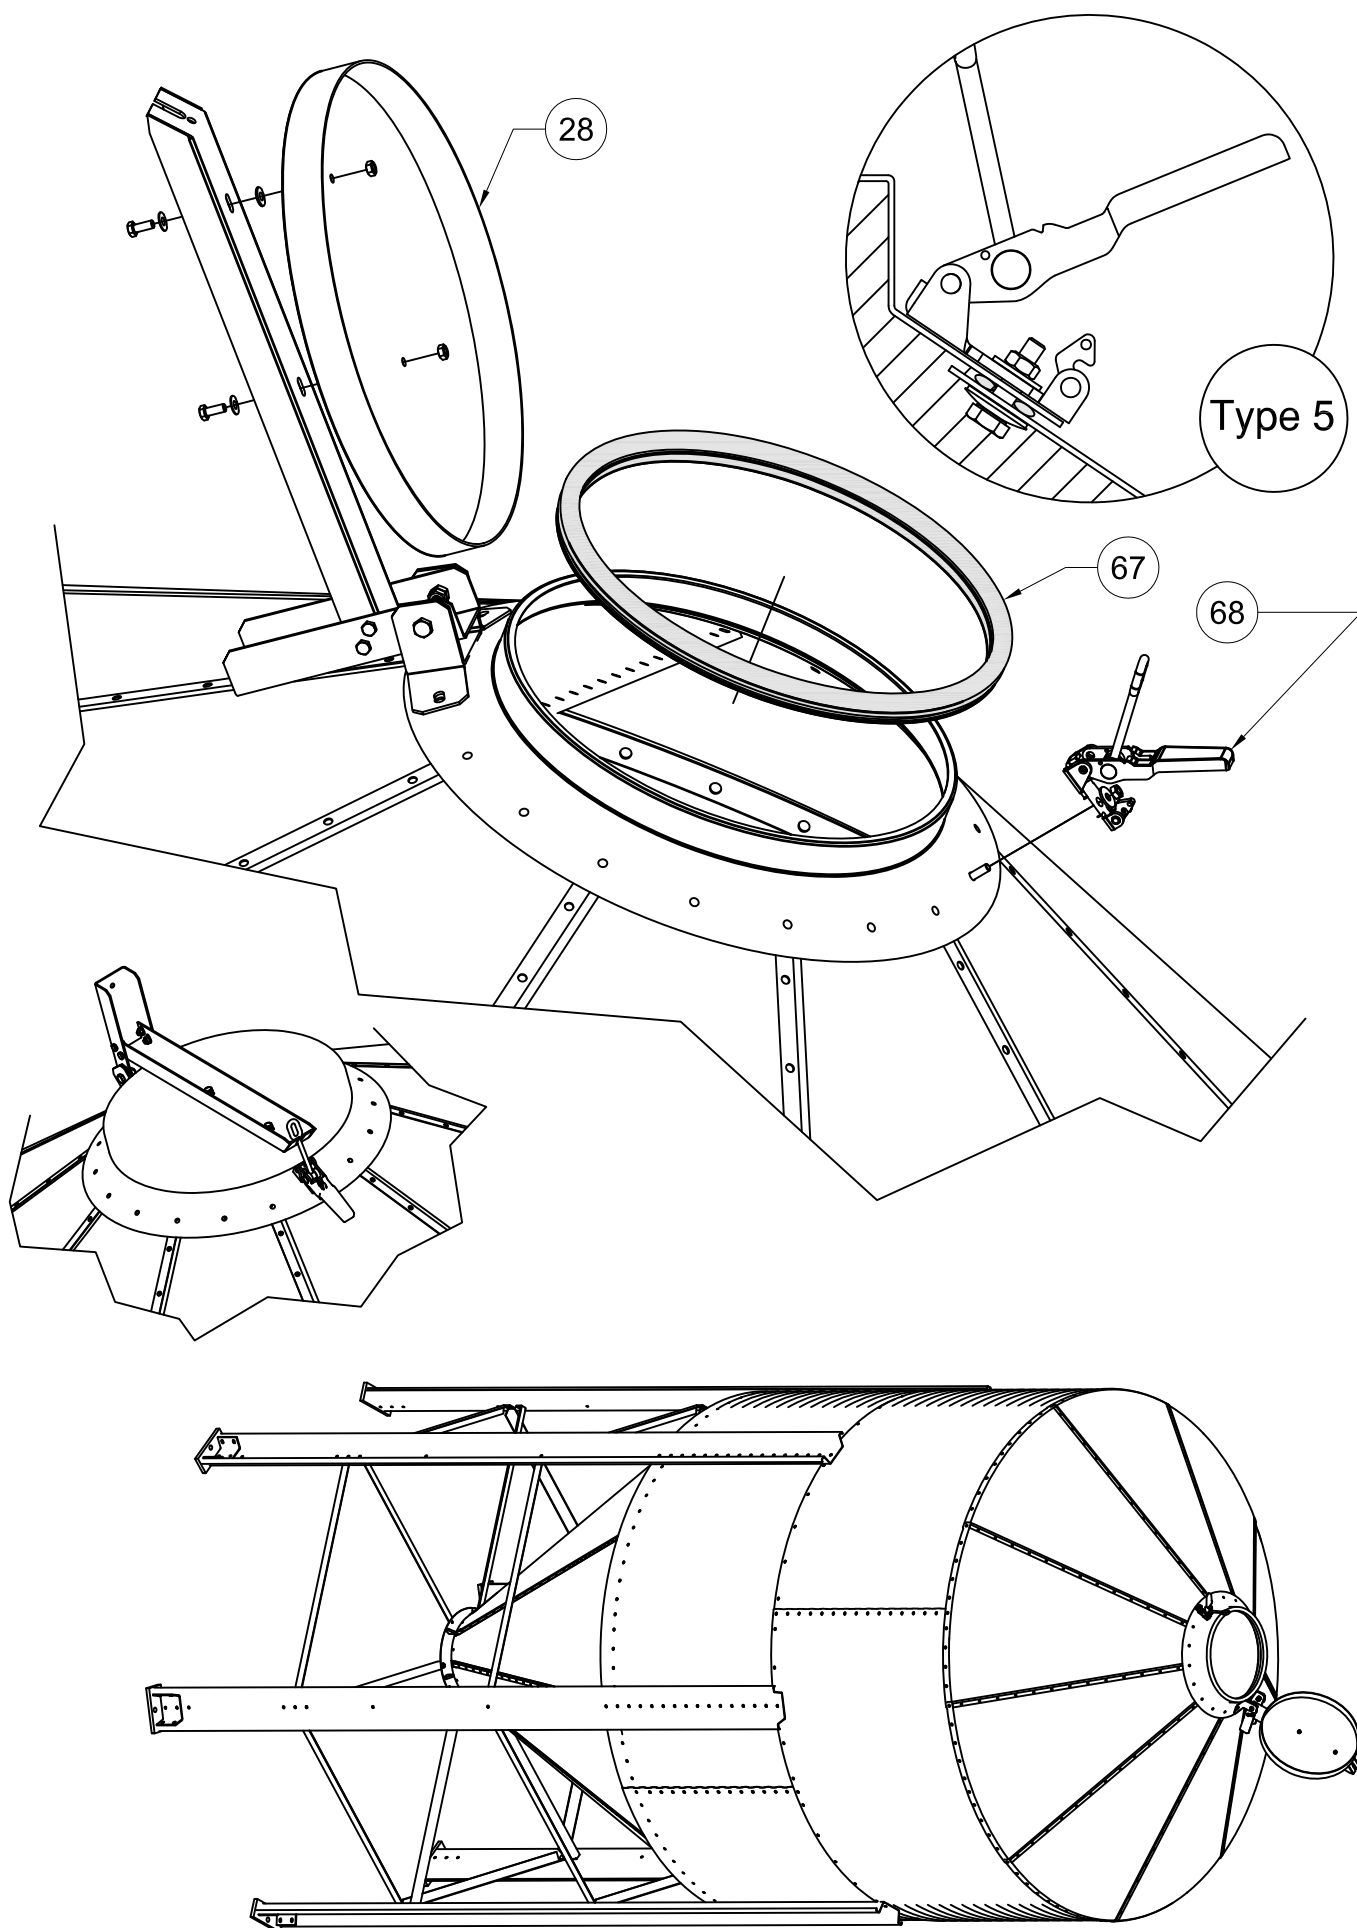

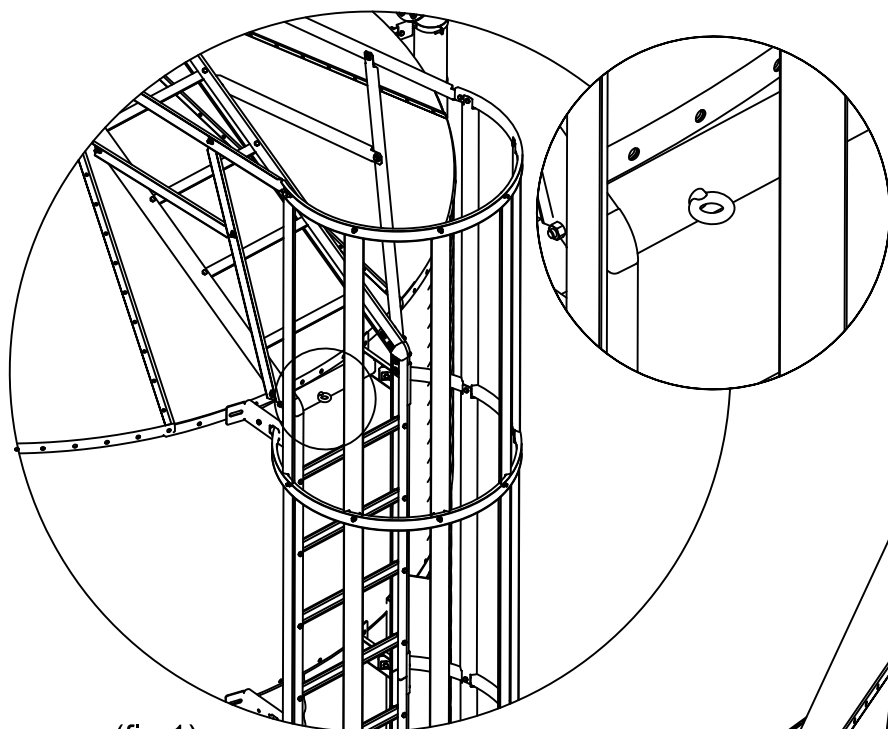

(fig 1)


Assembly of the aperture cable will depend on whether or not your silo includes a ladder. If the silo has a ladder use one of the eye-bolt grommets as shown in figure number one (1) and the other as in figure number two (2). In case your silo does not include a ladder, the two eye bolt grommets will appear as in figure number two (2).

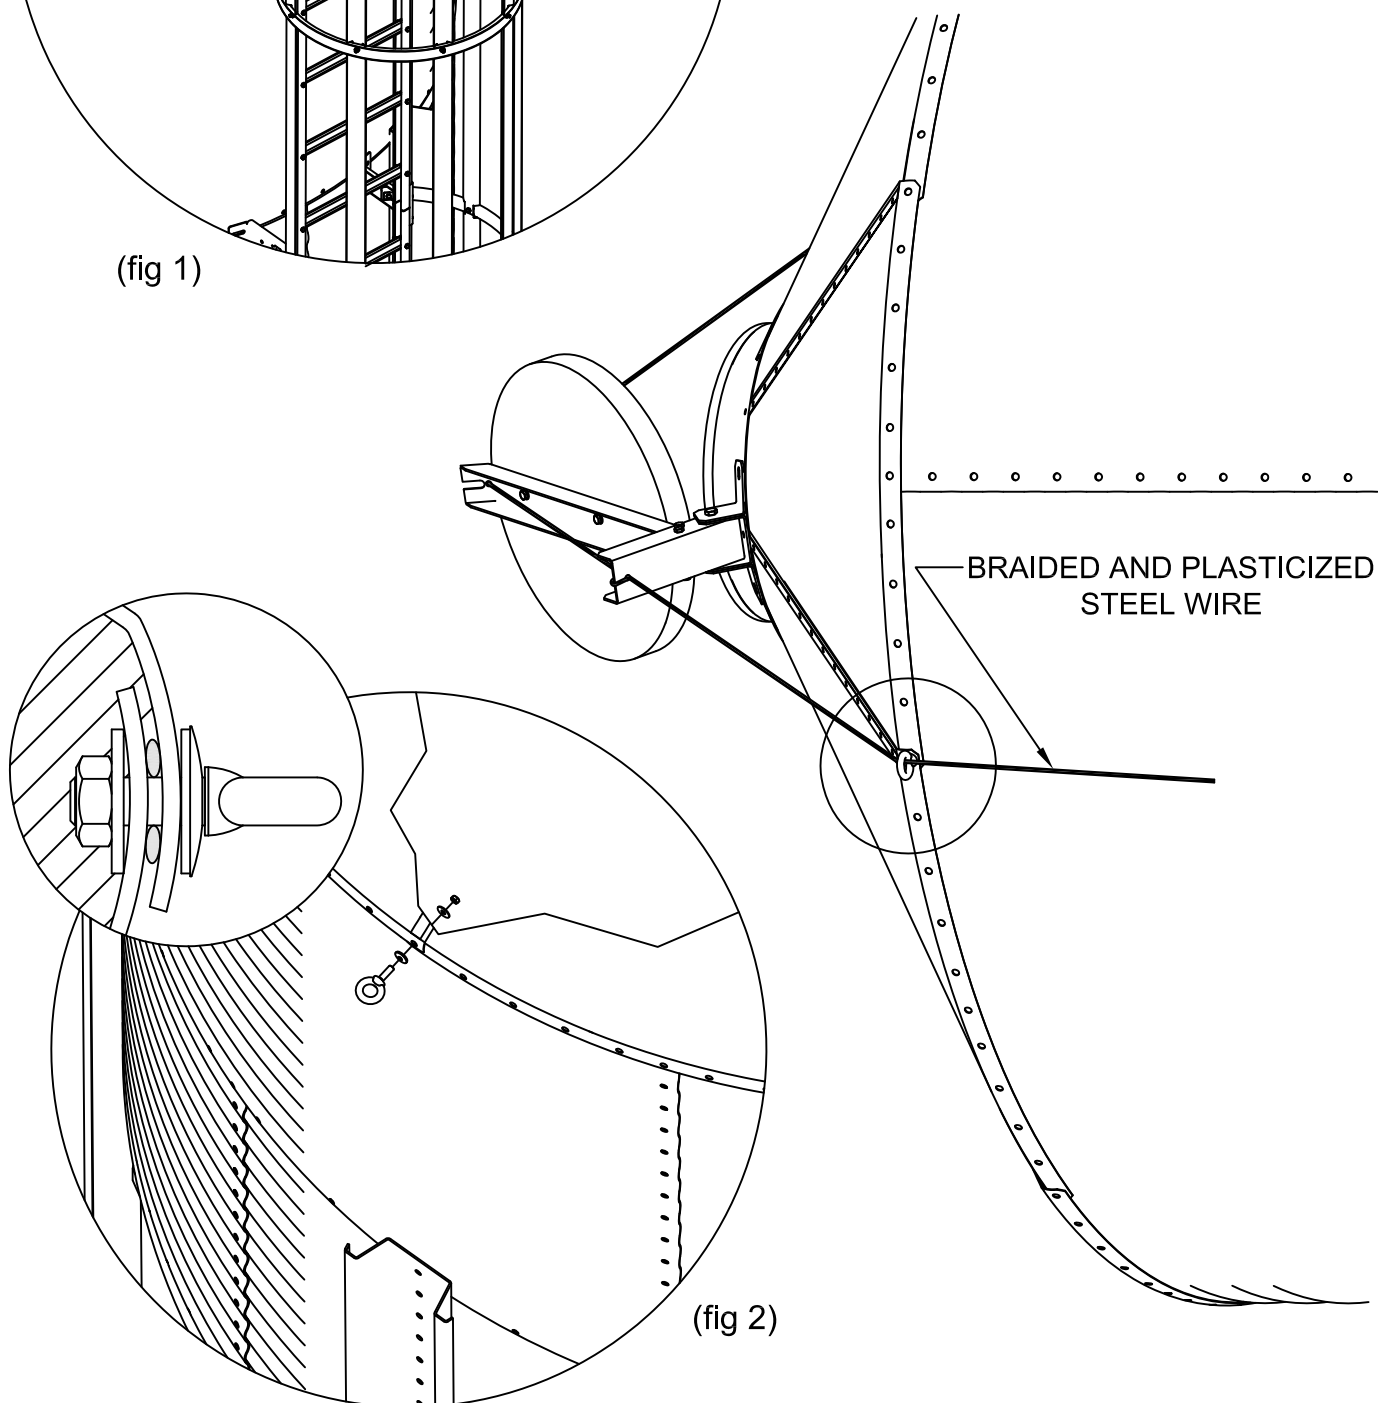

(fig 2)


Join type 8

 Hexagonal head screw M8x60 +
hexagonal nut M8



Join type 9

Hexagonal head screw M8x60 +
metal washer +
hexagonal nut M8

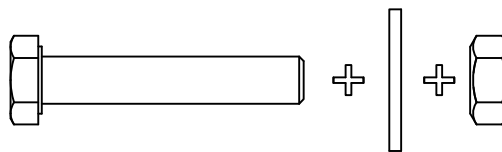



All bolts are to be tightened from the nut side only. Do not allow bolt heads to spin to avoid damages in rubber joints.


Drift punches can be used to align holes.


Before inserting the screws should be checked that in this position, both the type of joint as the direction in which you enter the screw is correct. Make sure all bolts are consistent with the pattern on the next page.


IMPORTANT: Tighten bolts with a torque wrench between 13Nm y 26Nm.





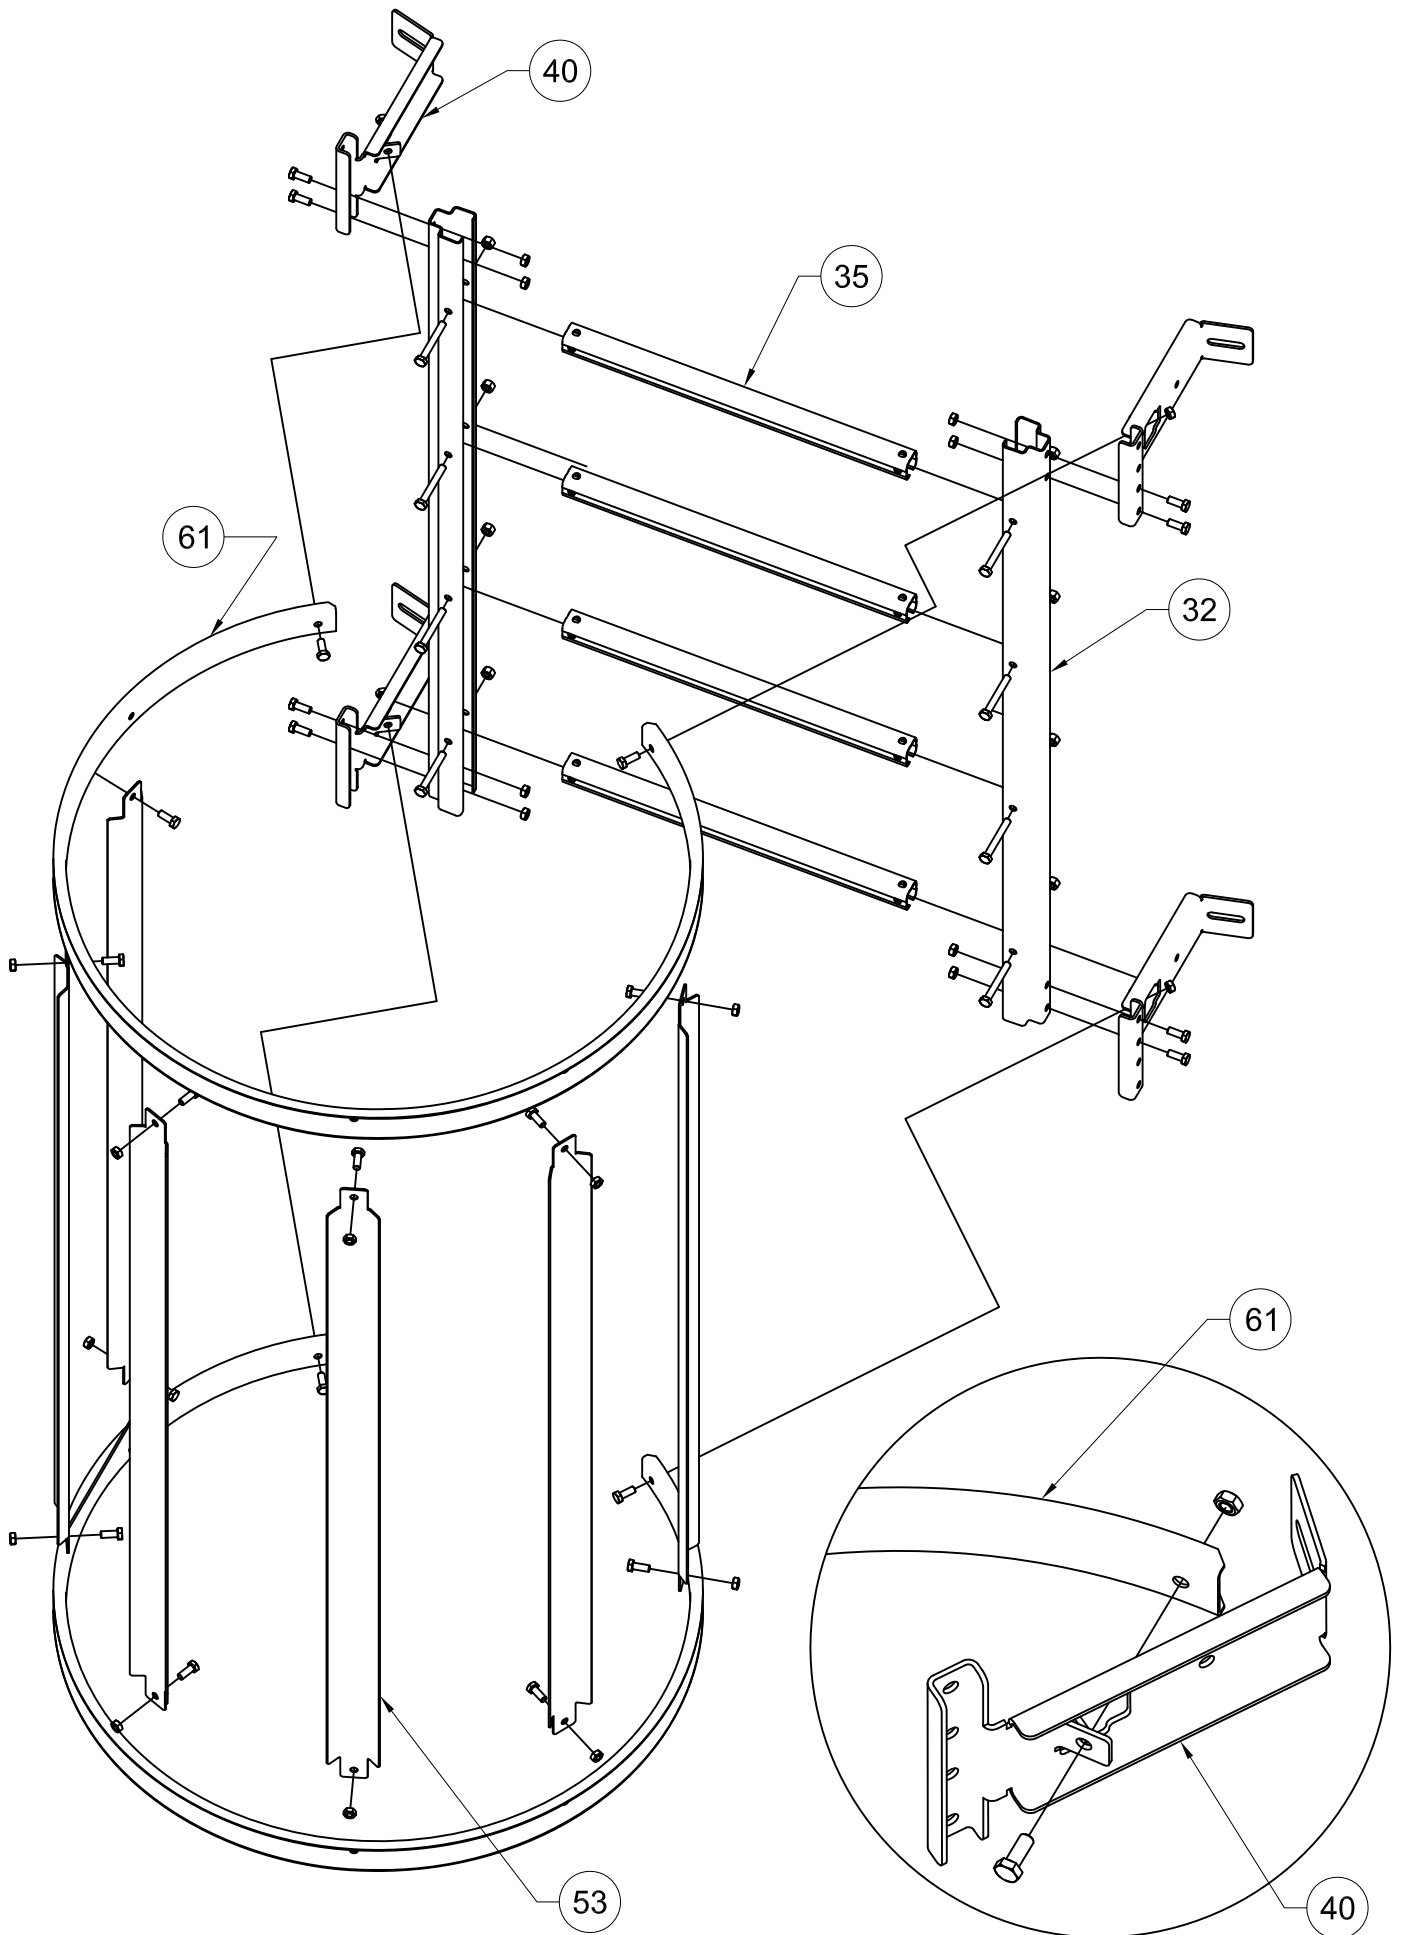


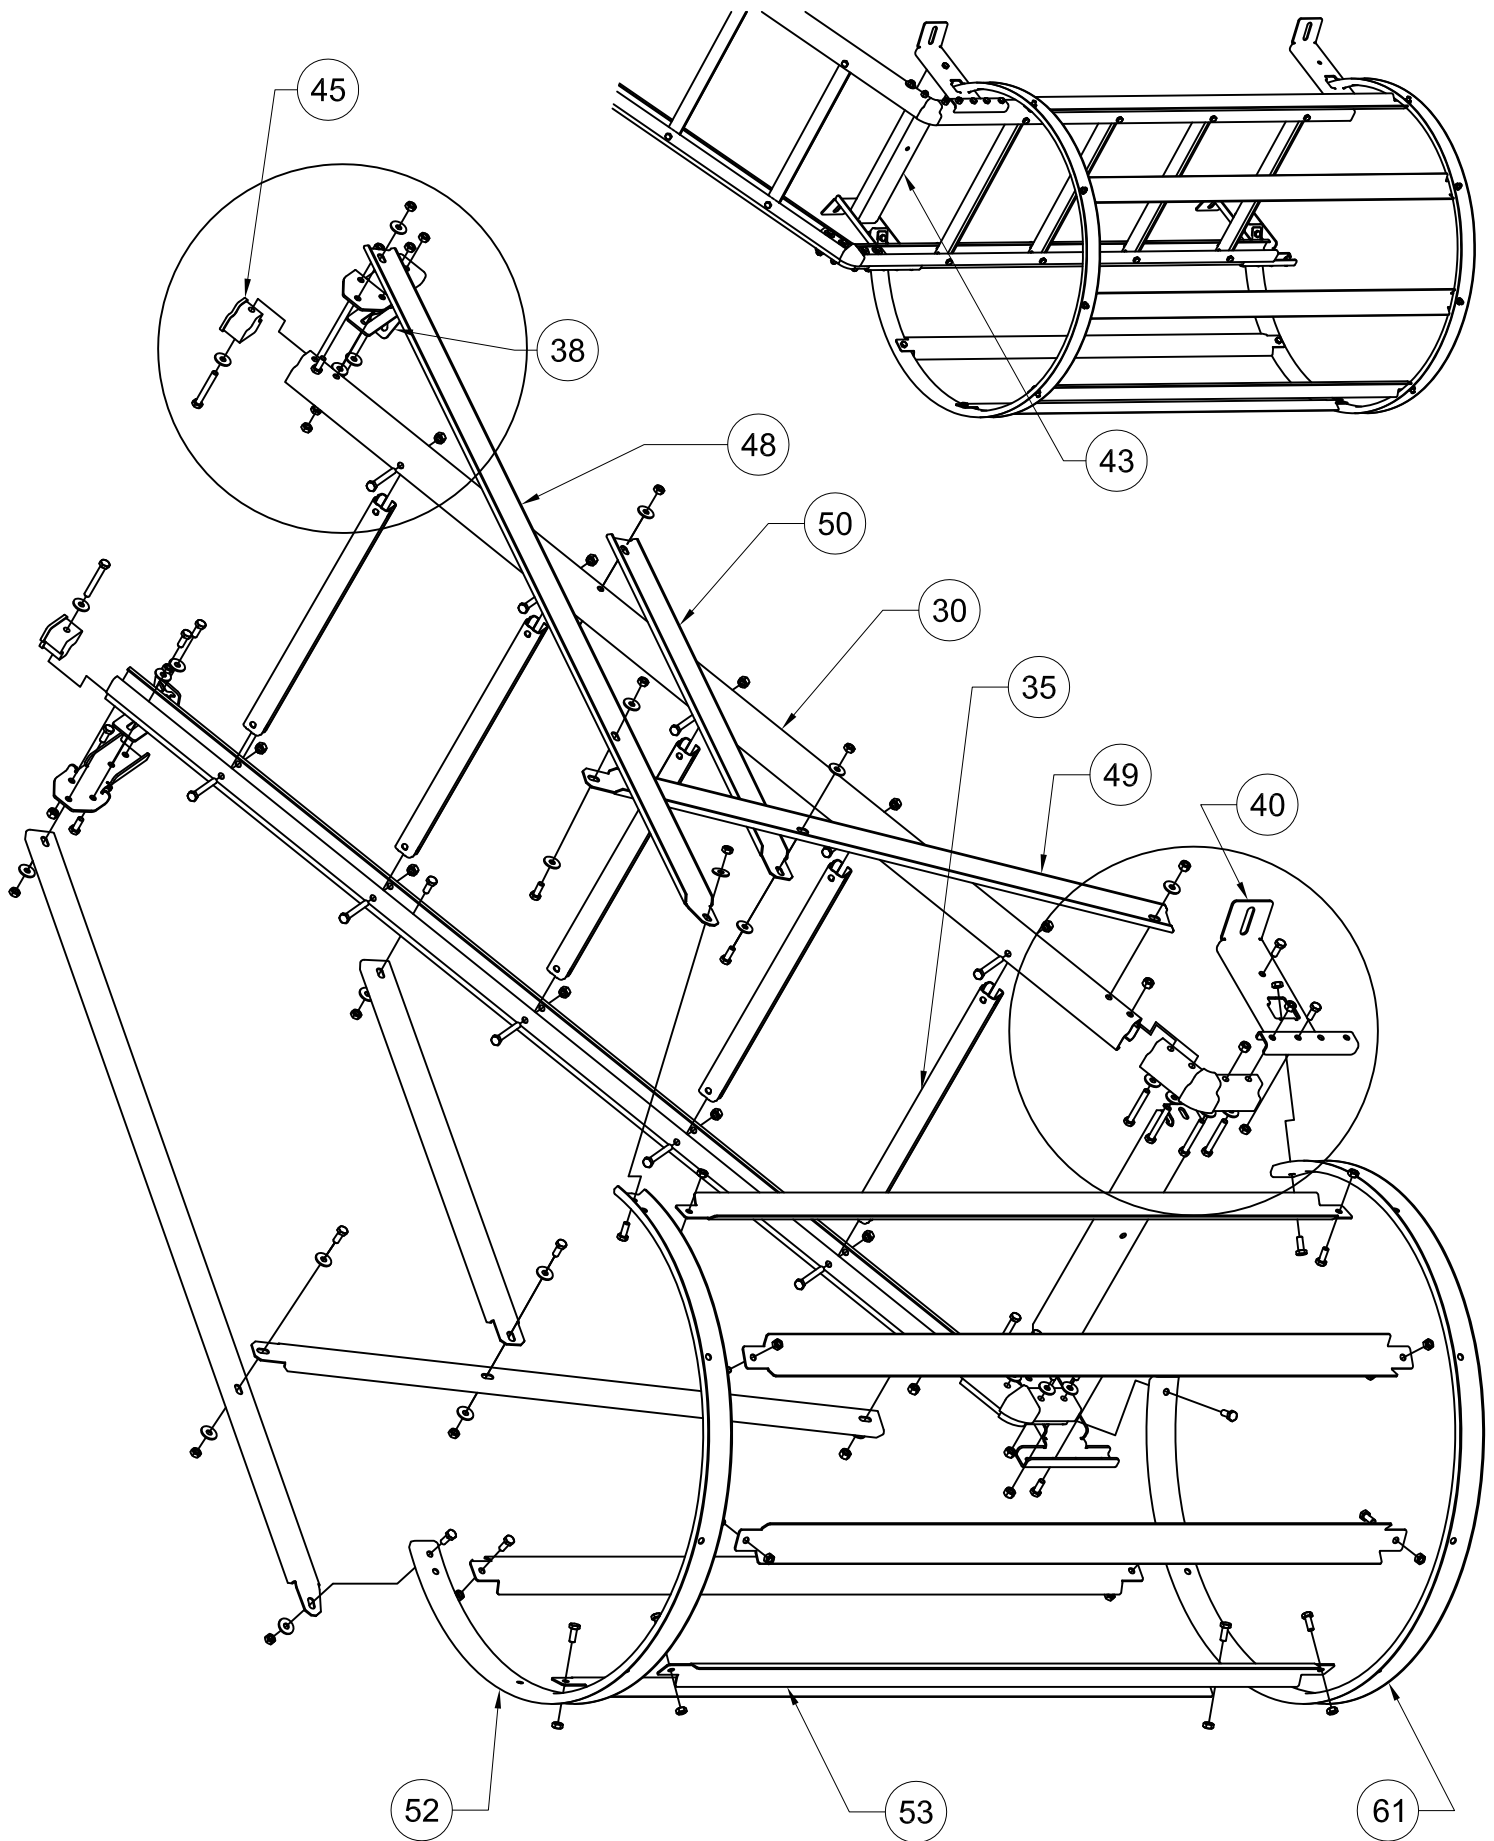


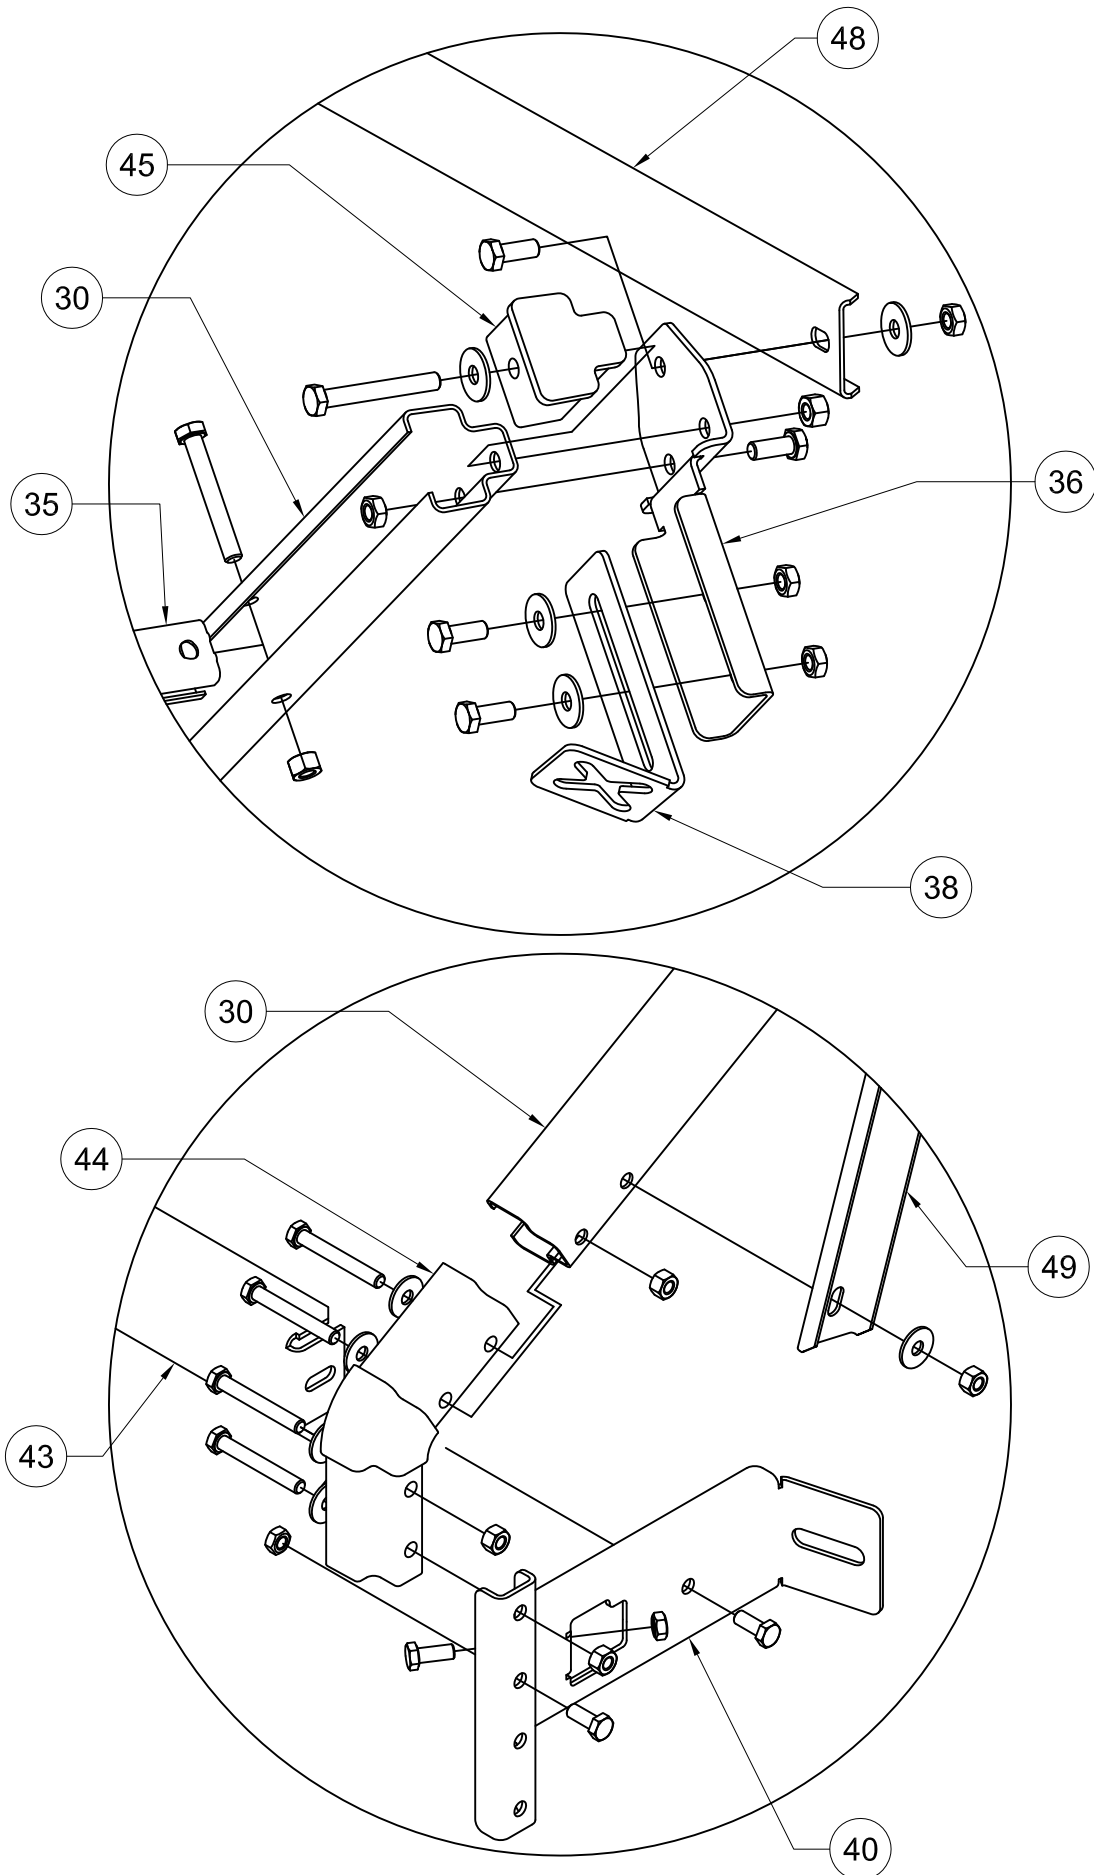


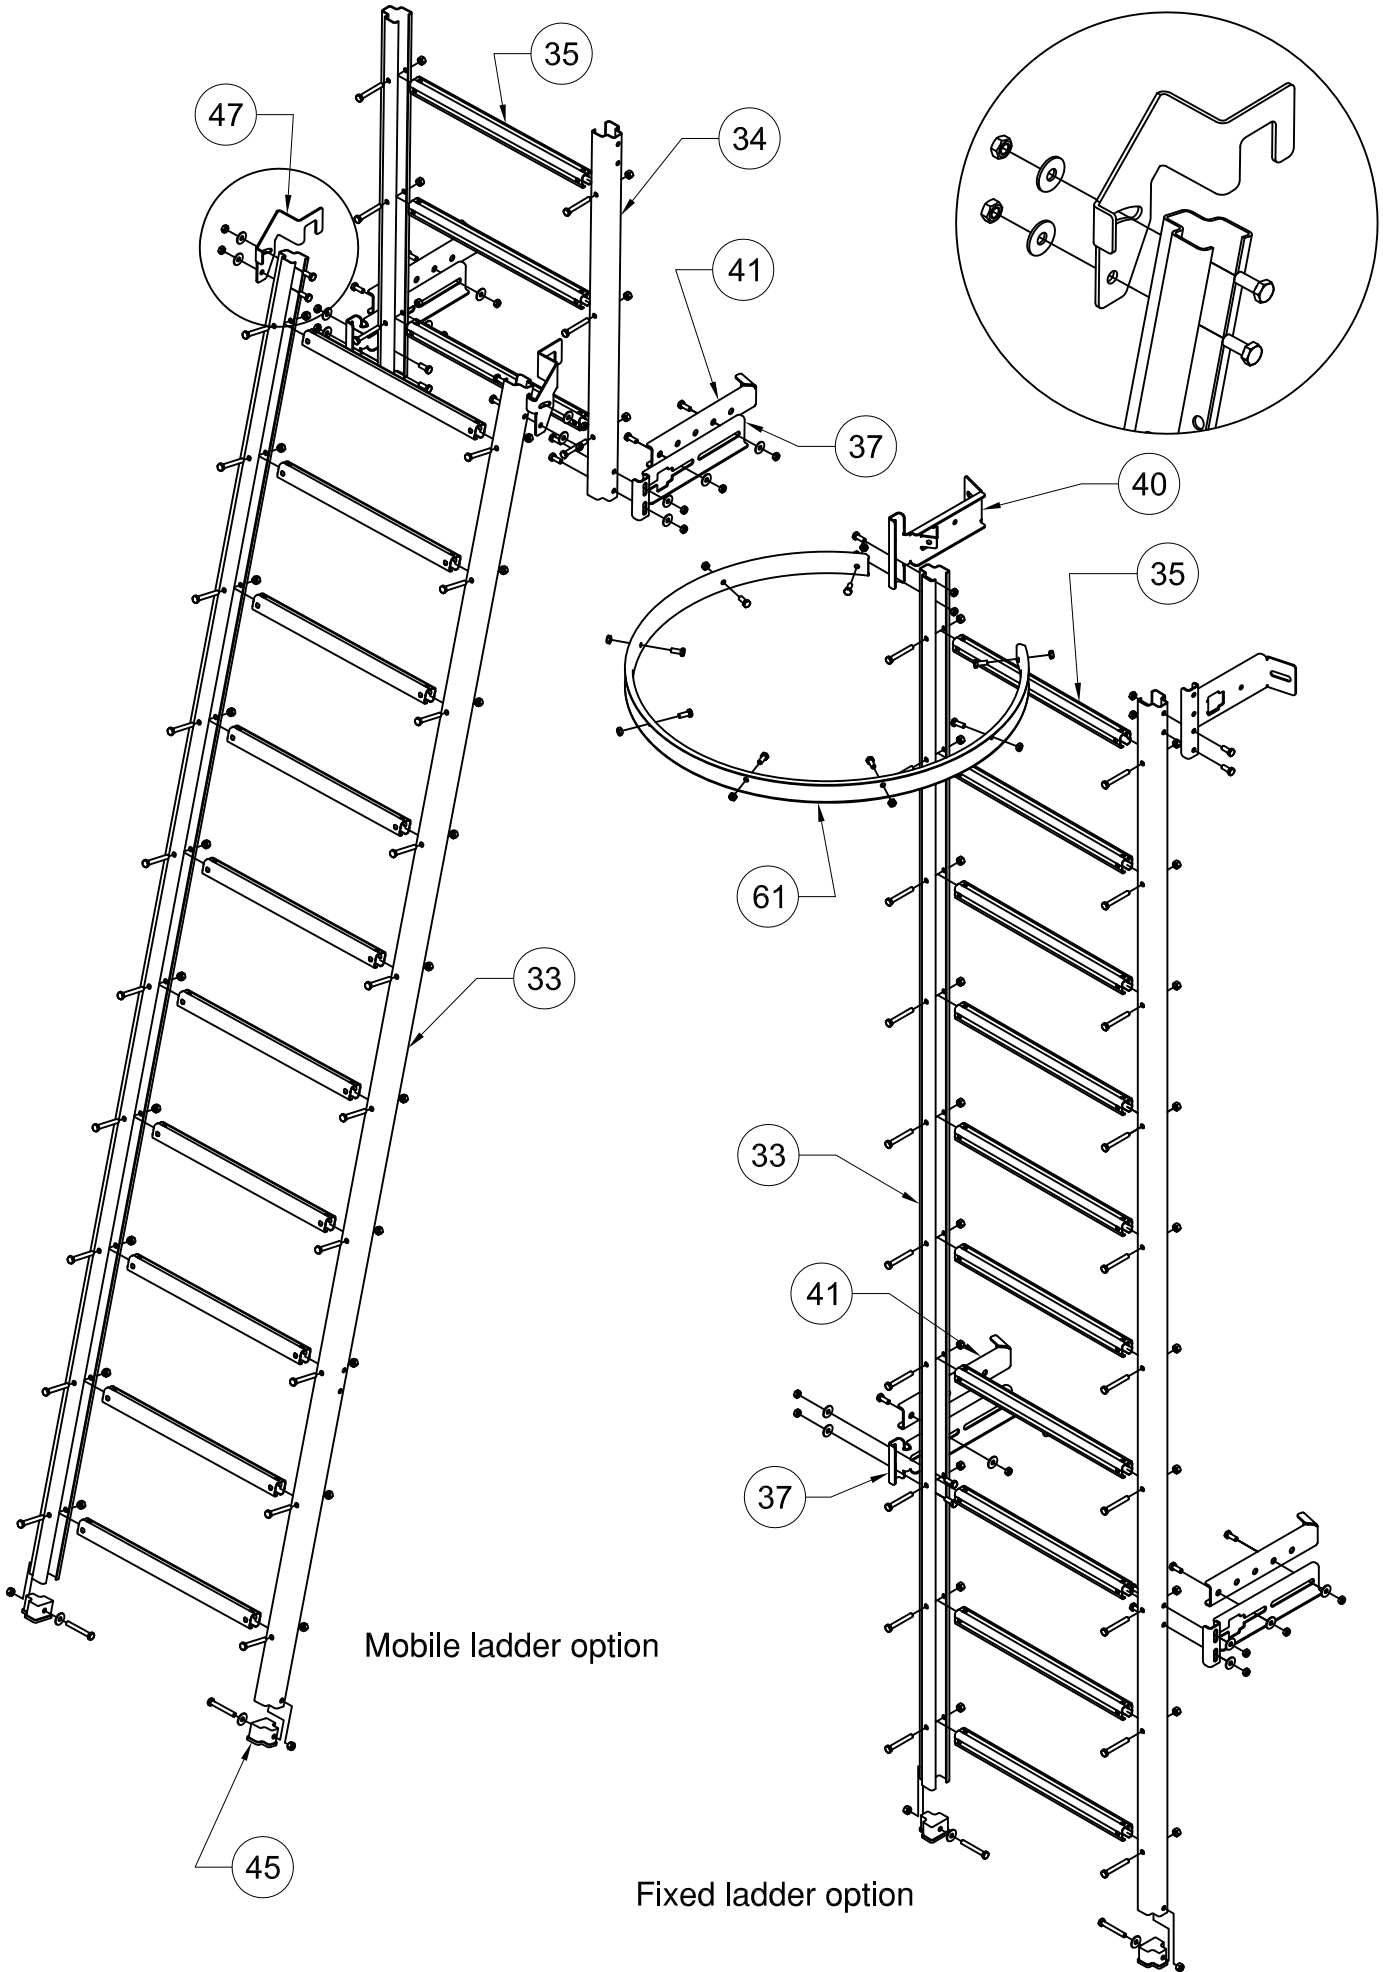


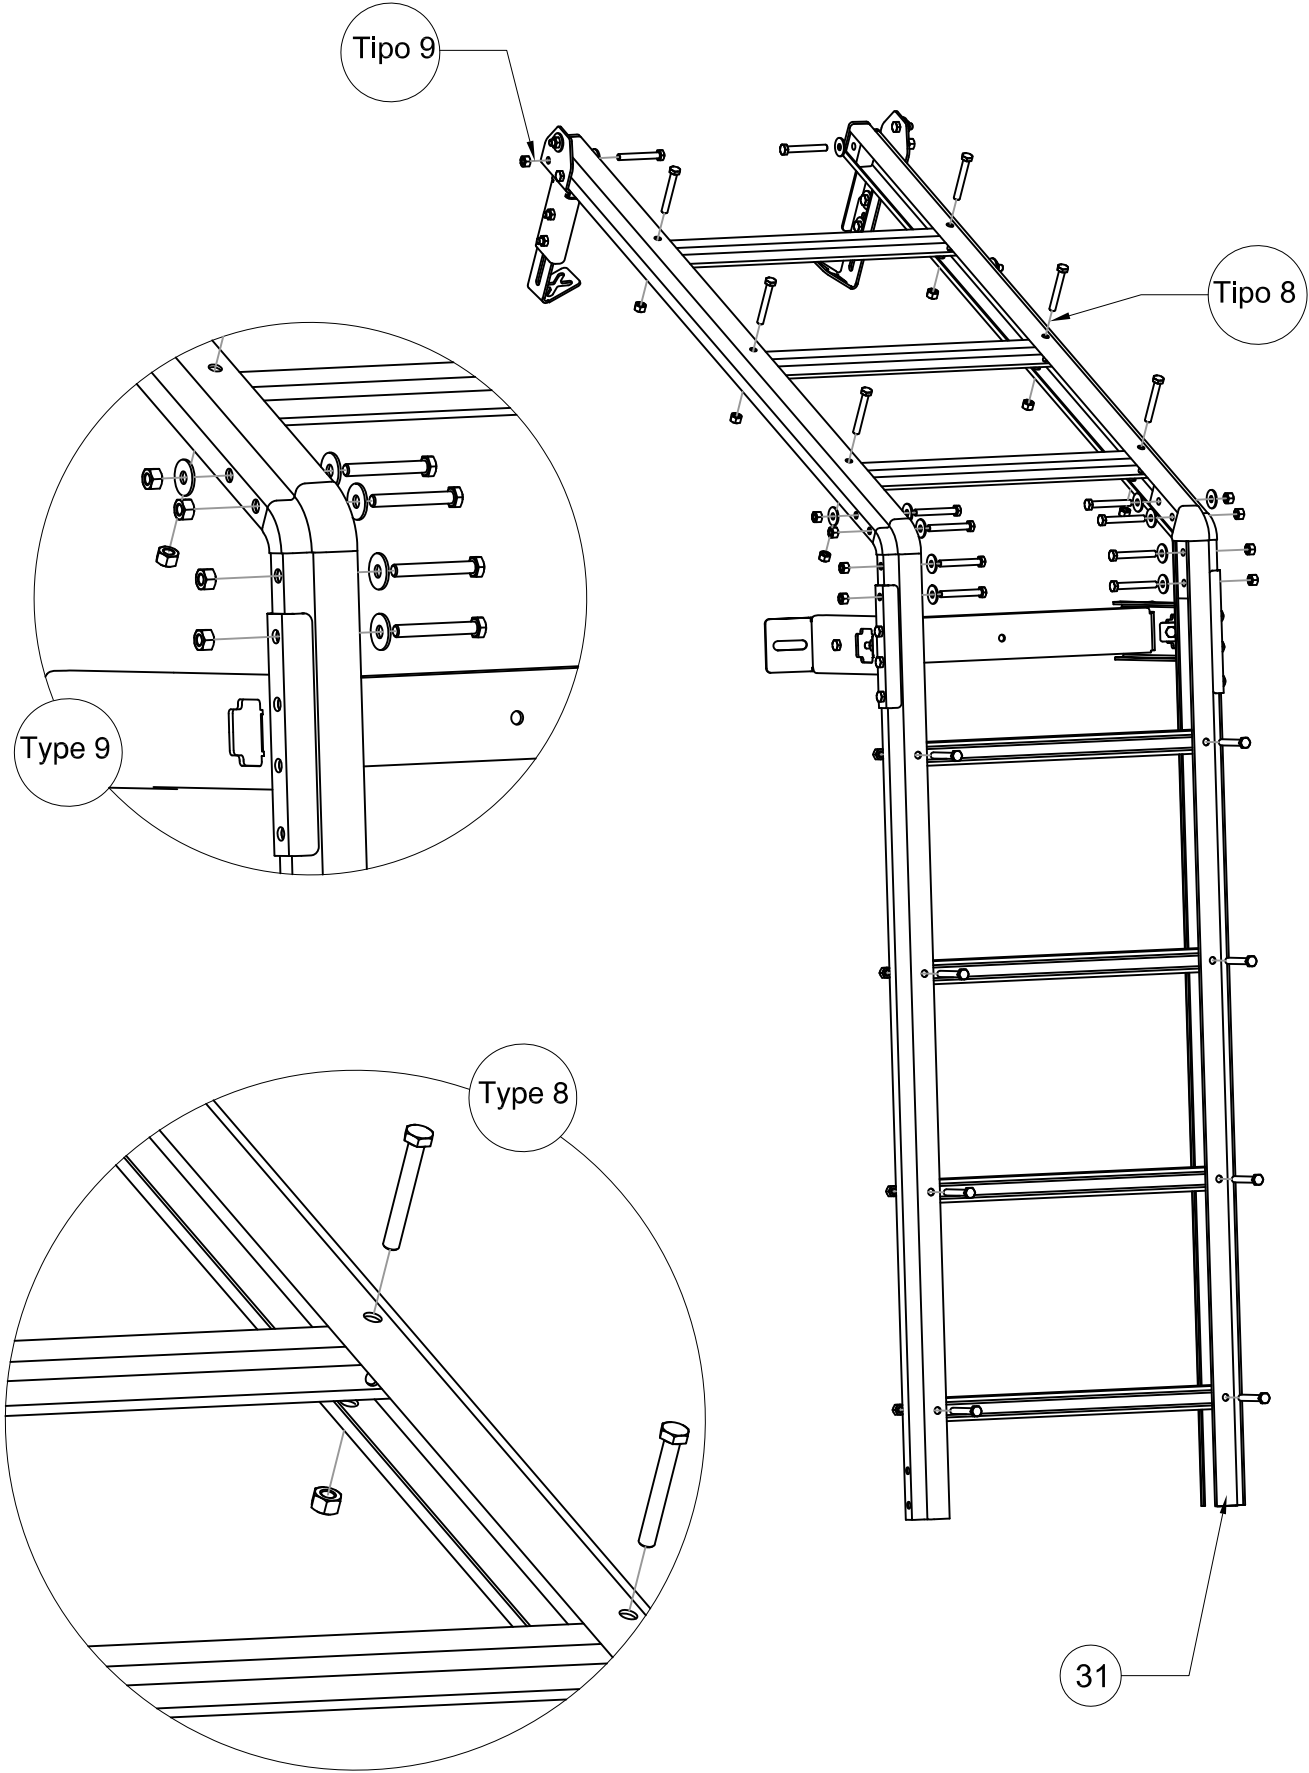

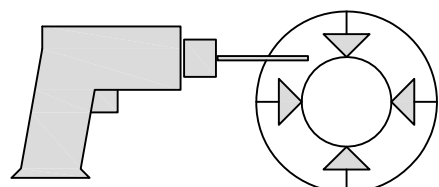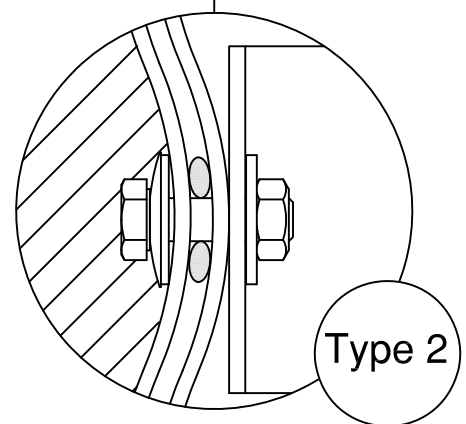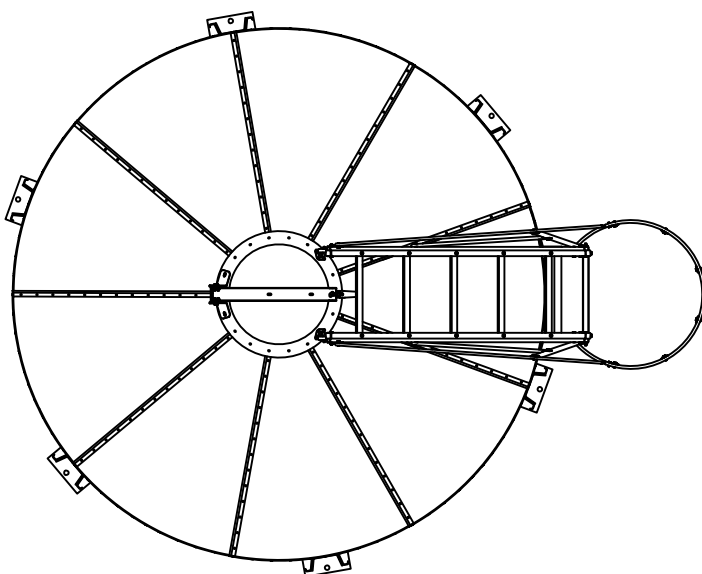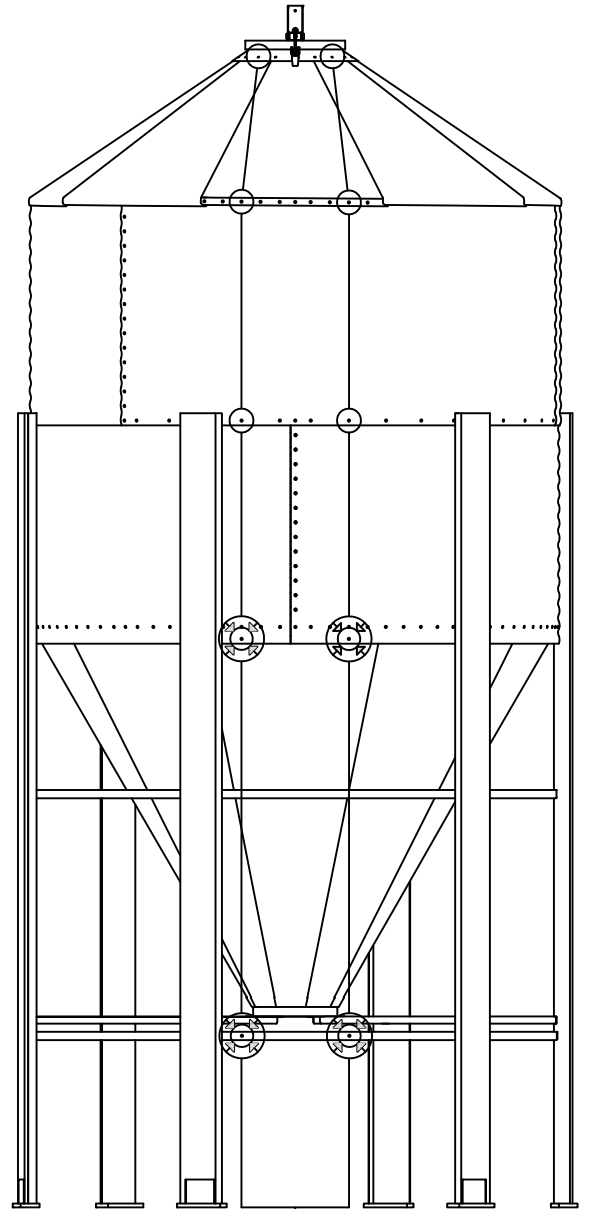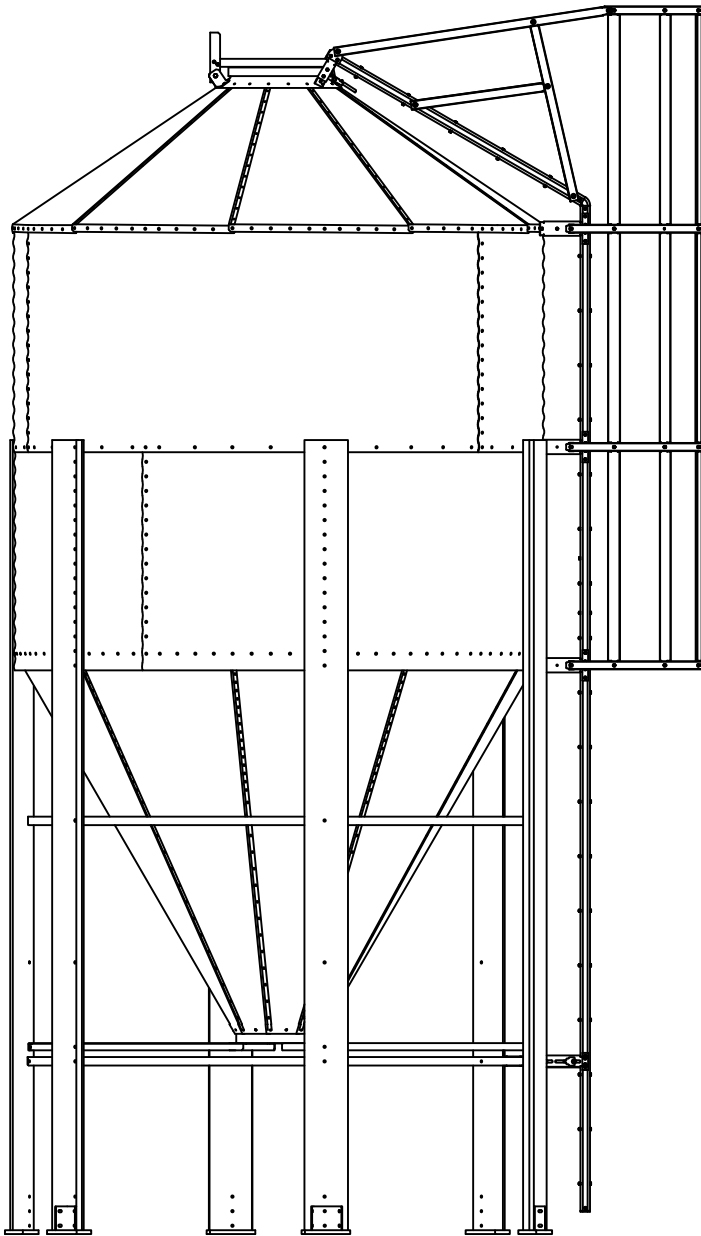

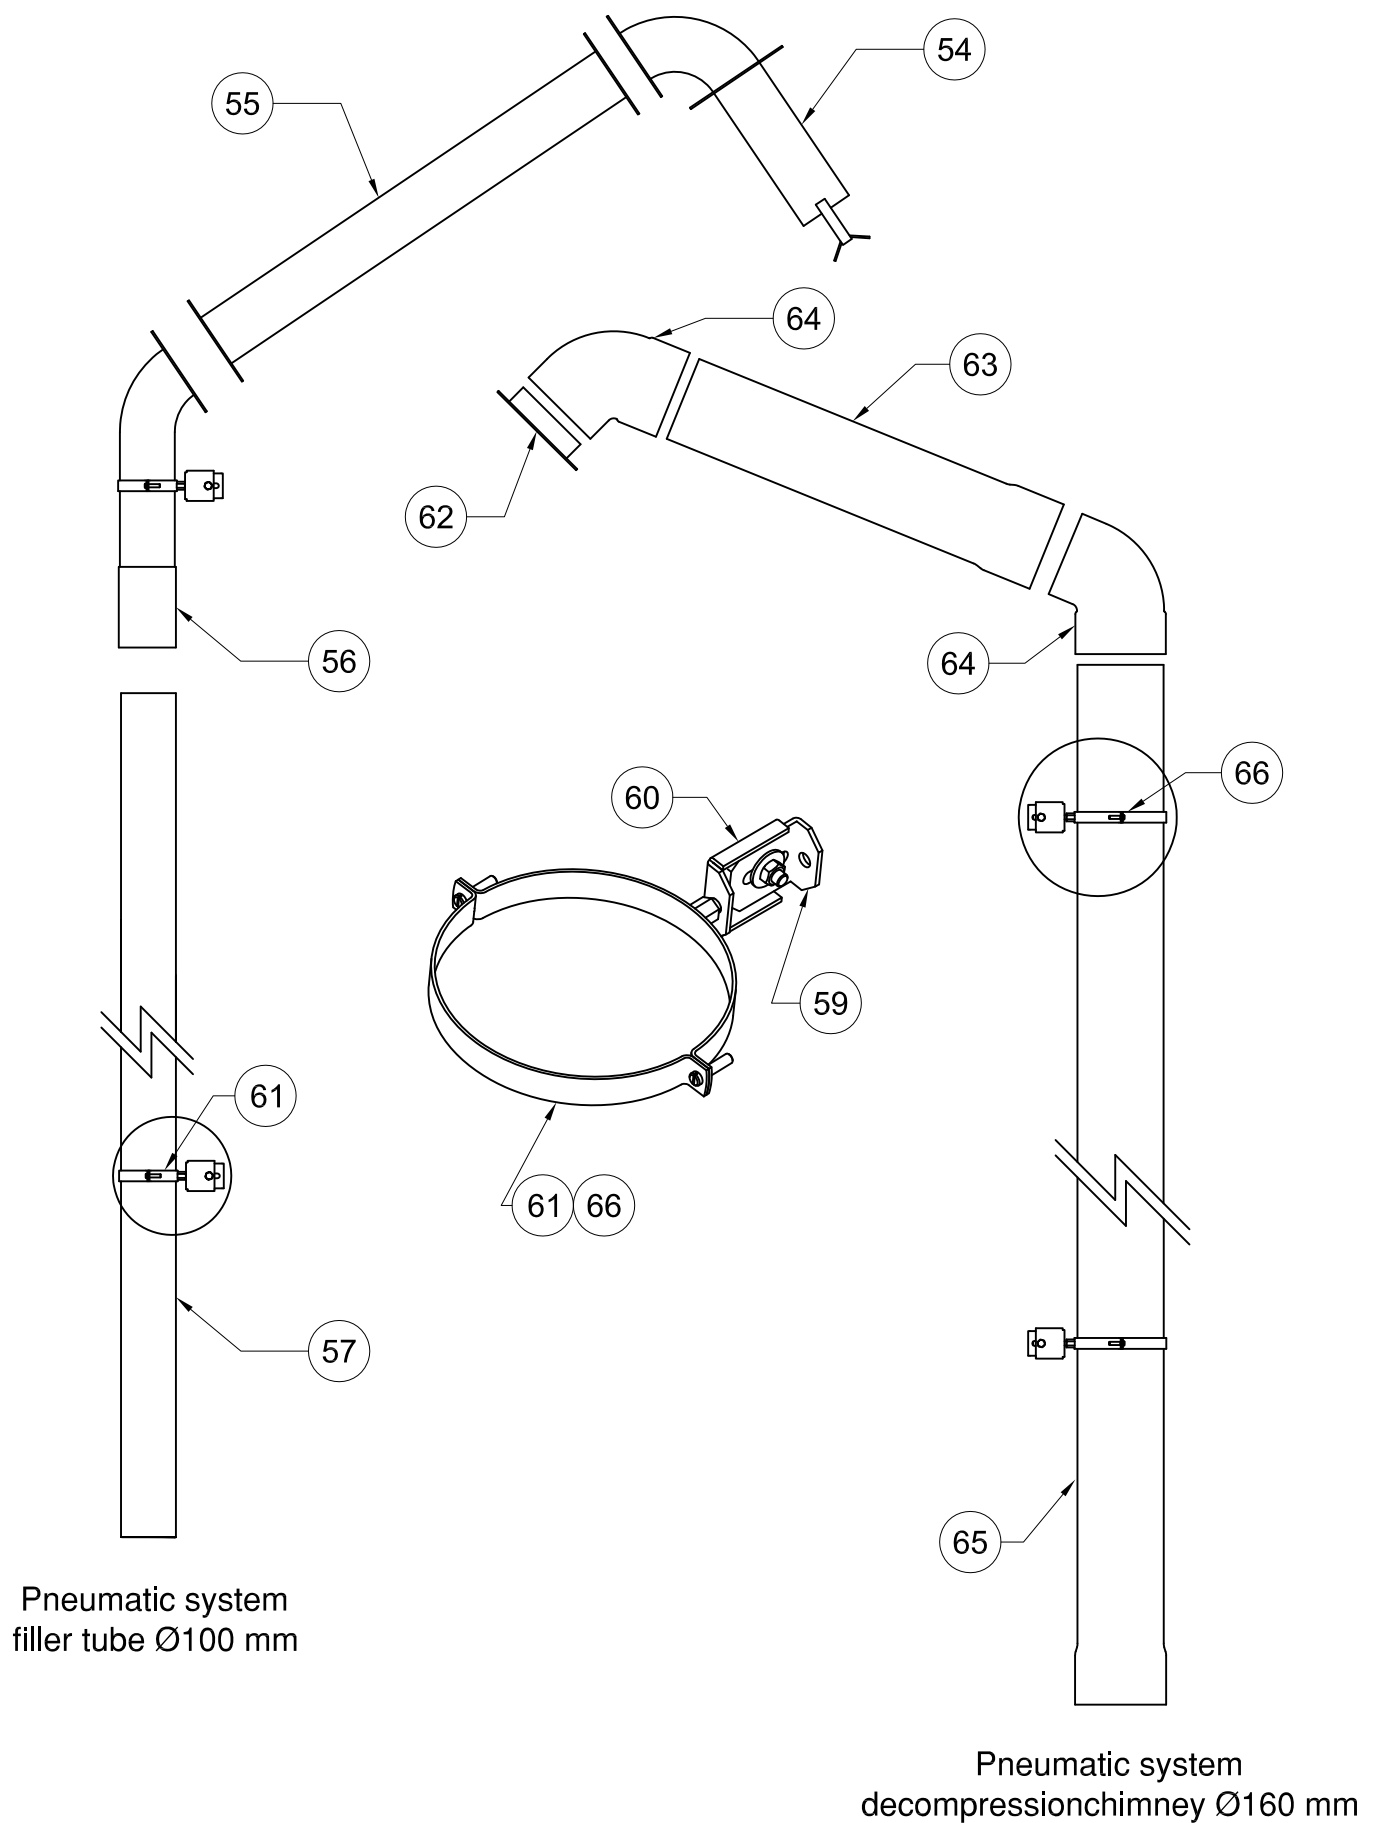

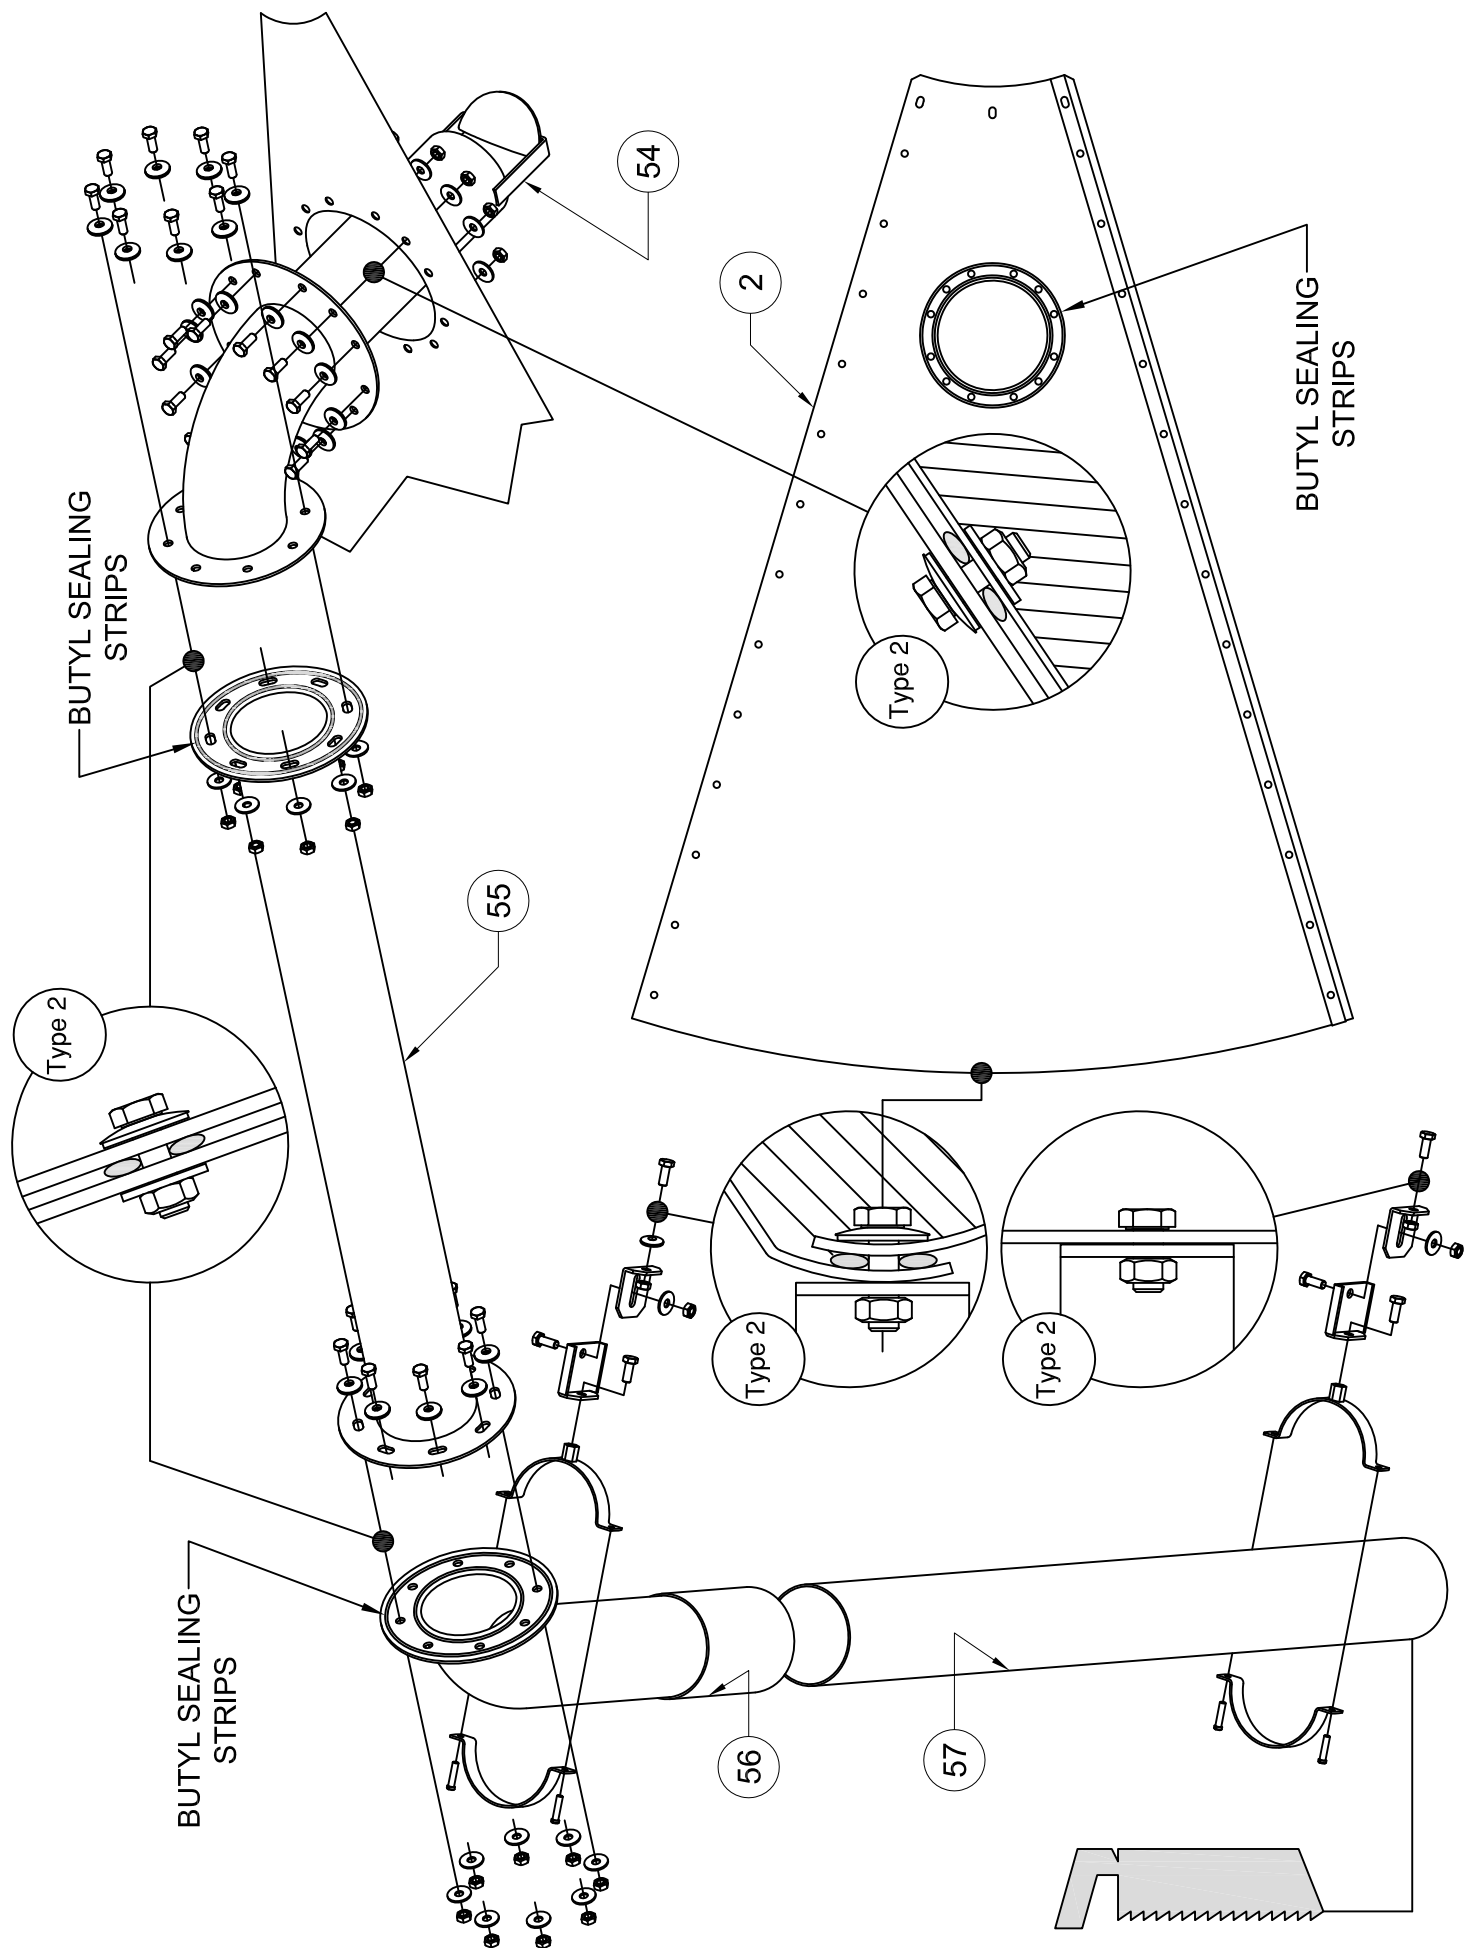


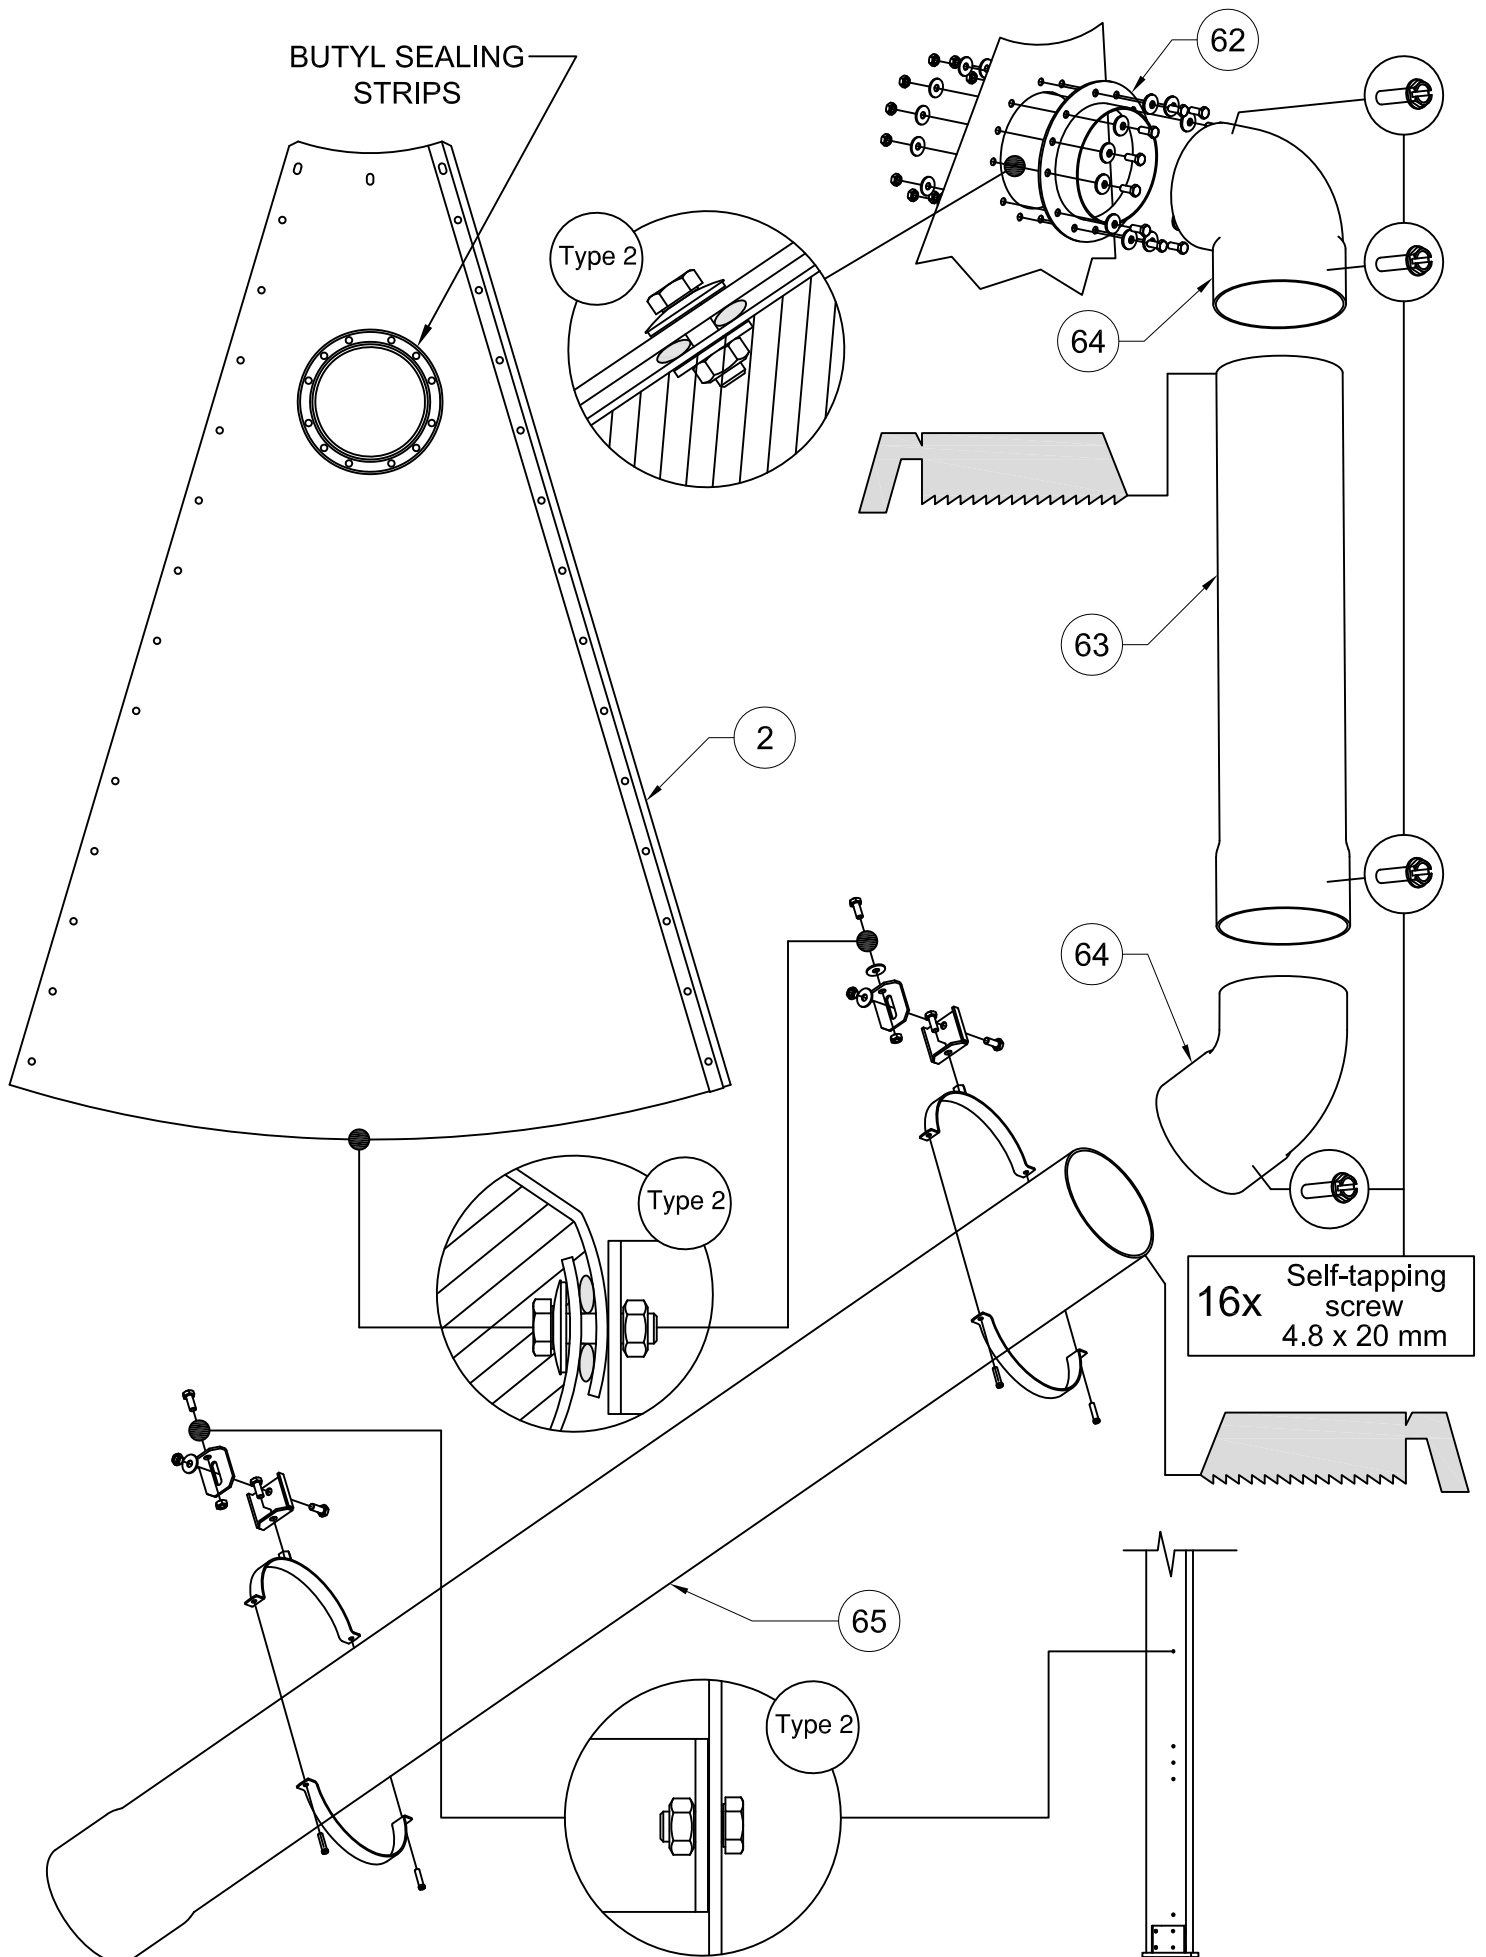






Max filling pressure


1.2 bar



Be sure don't work
over pressure

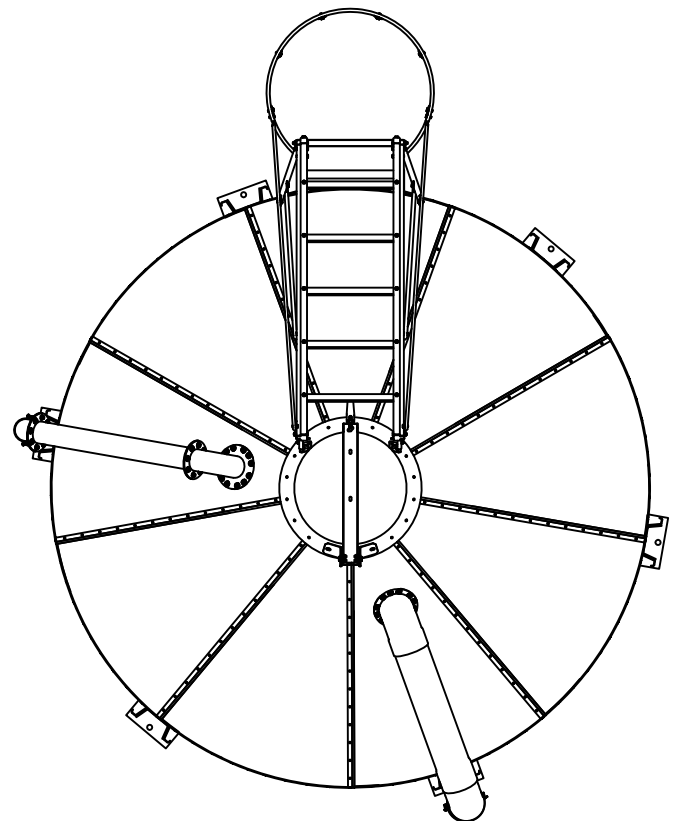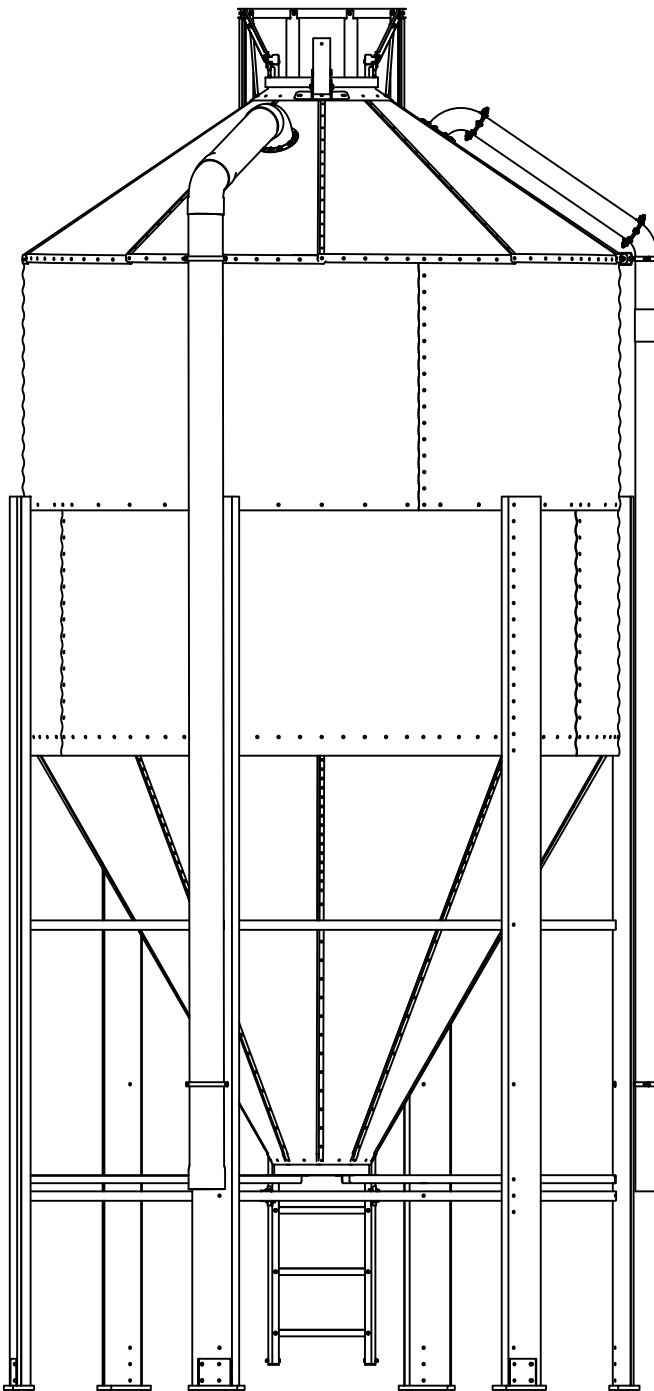

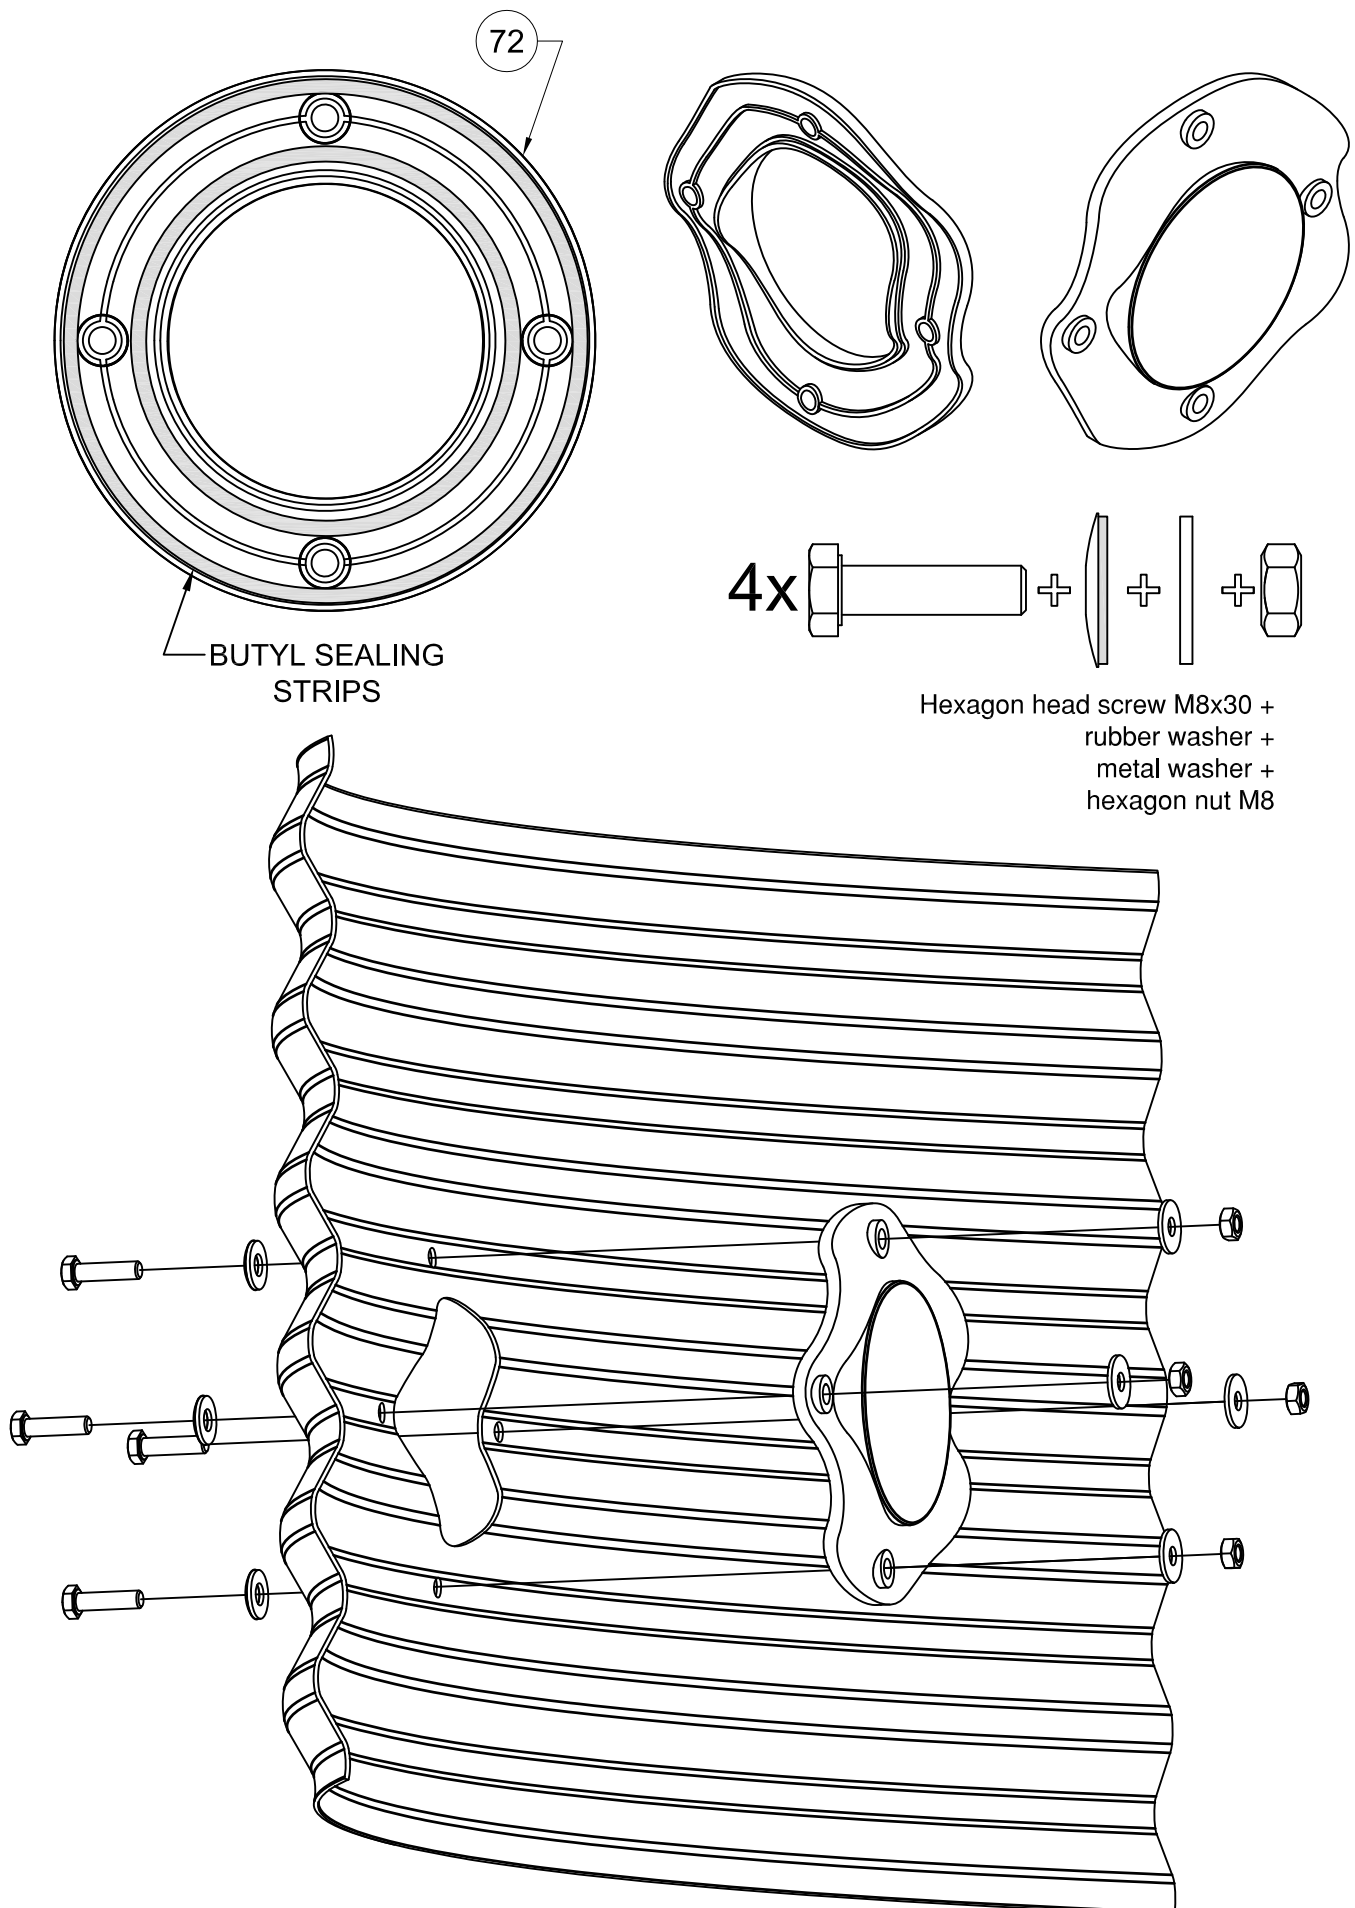

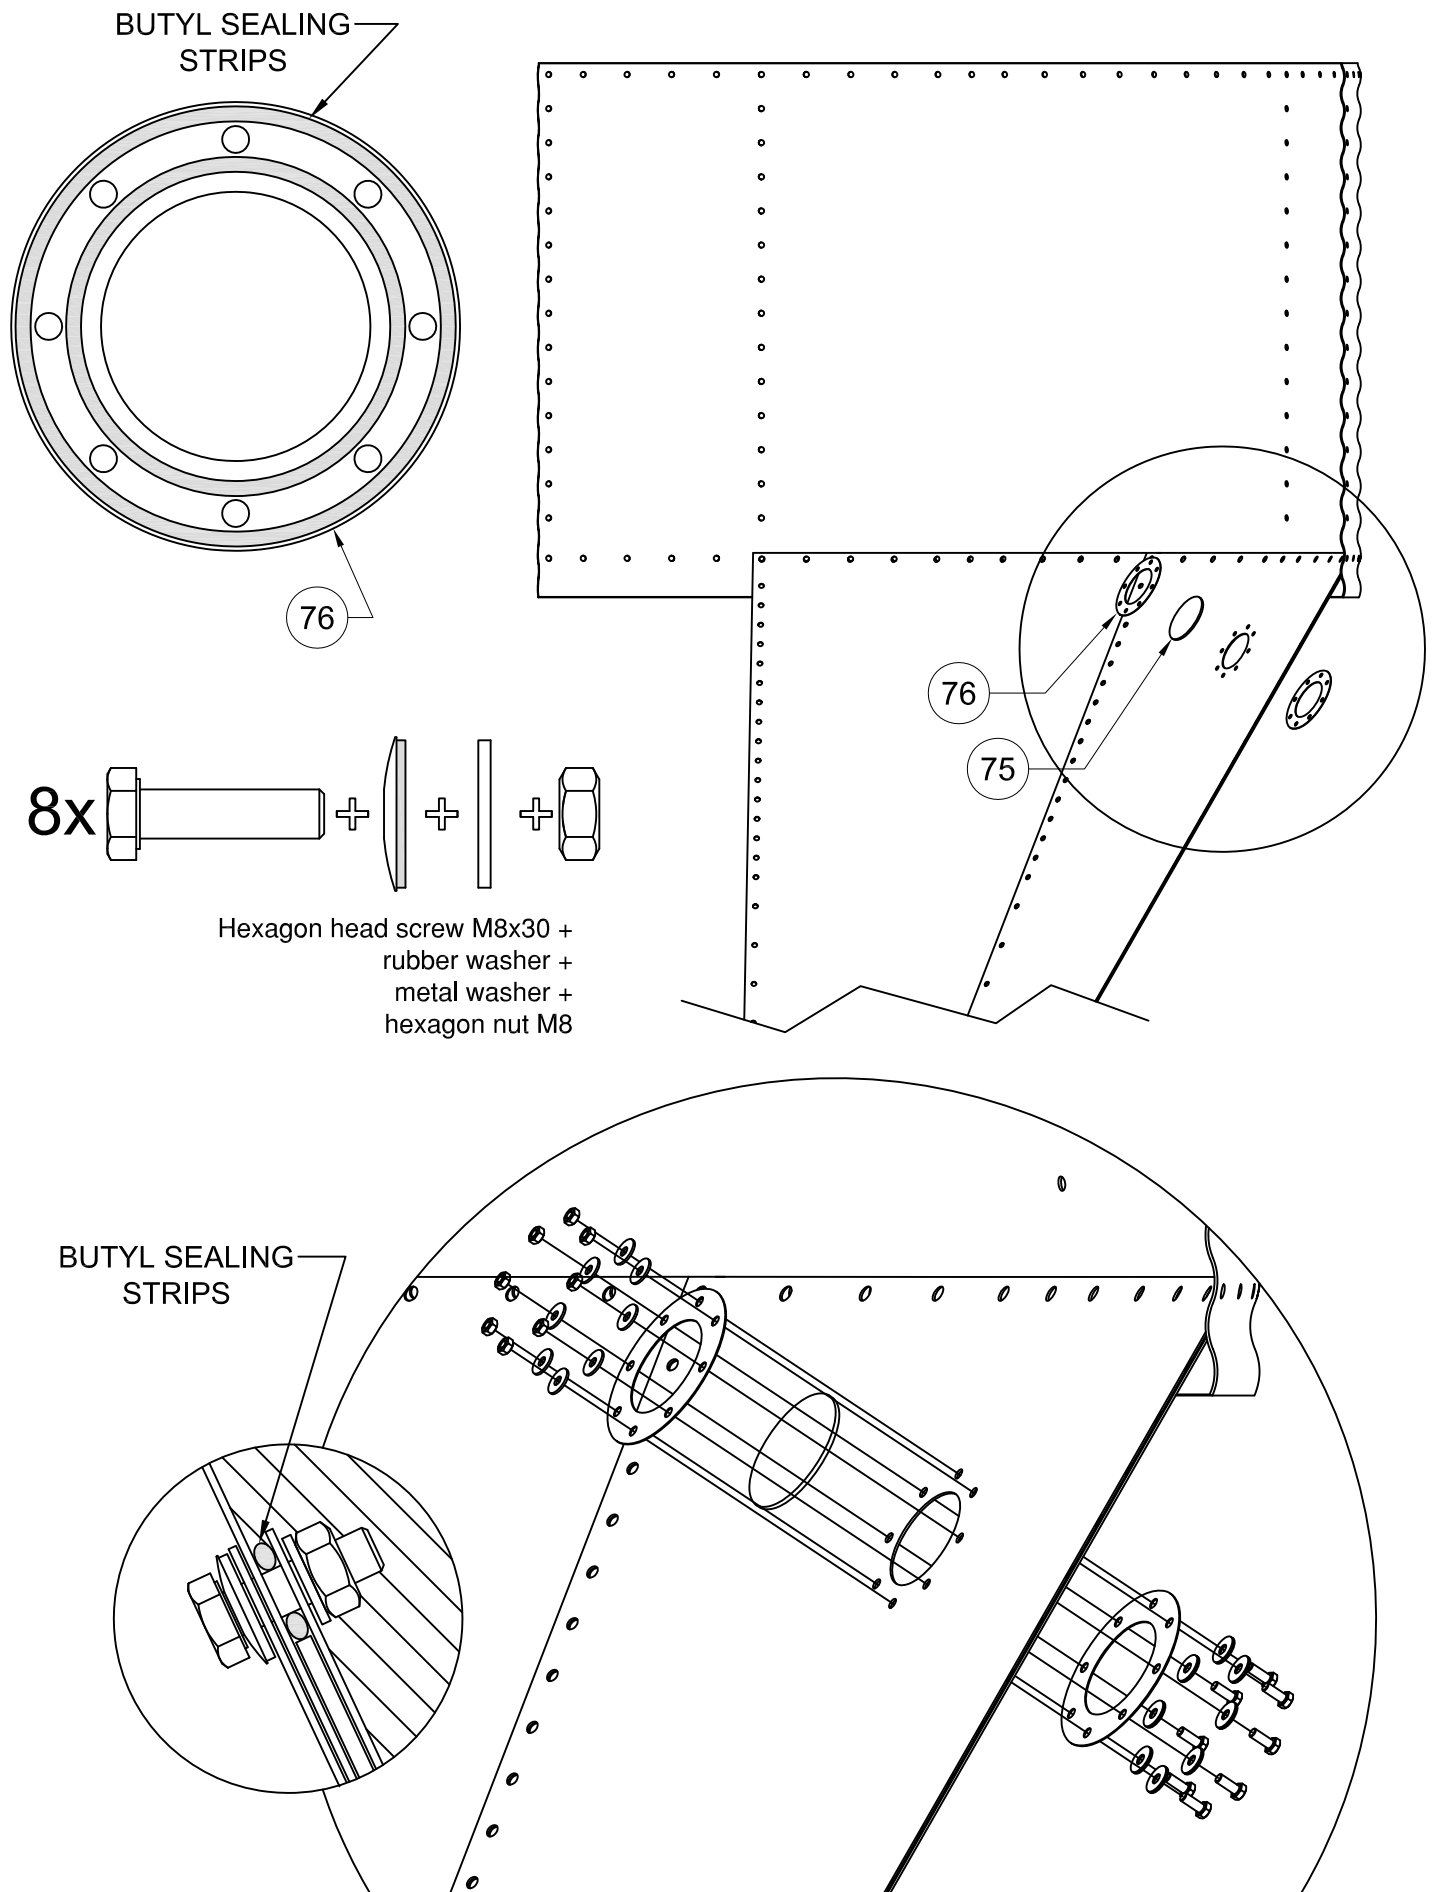

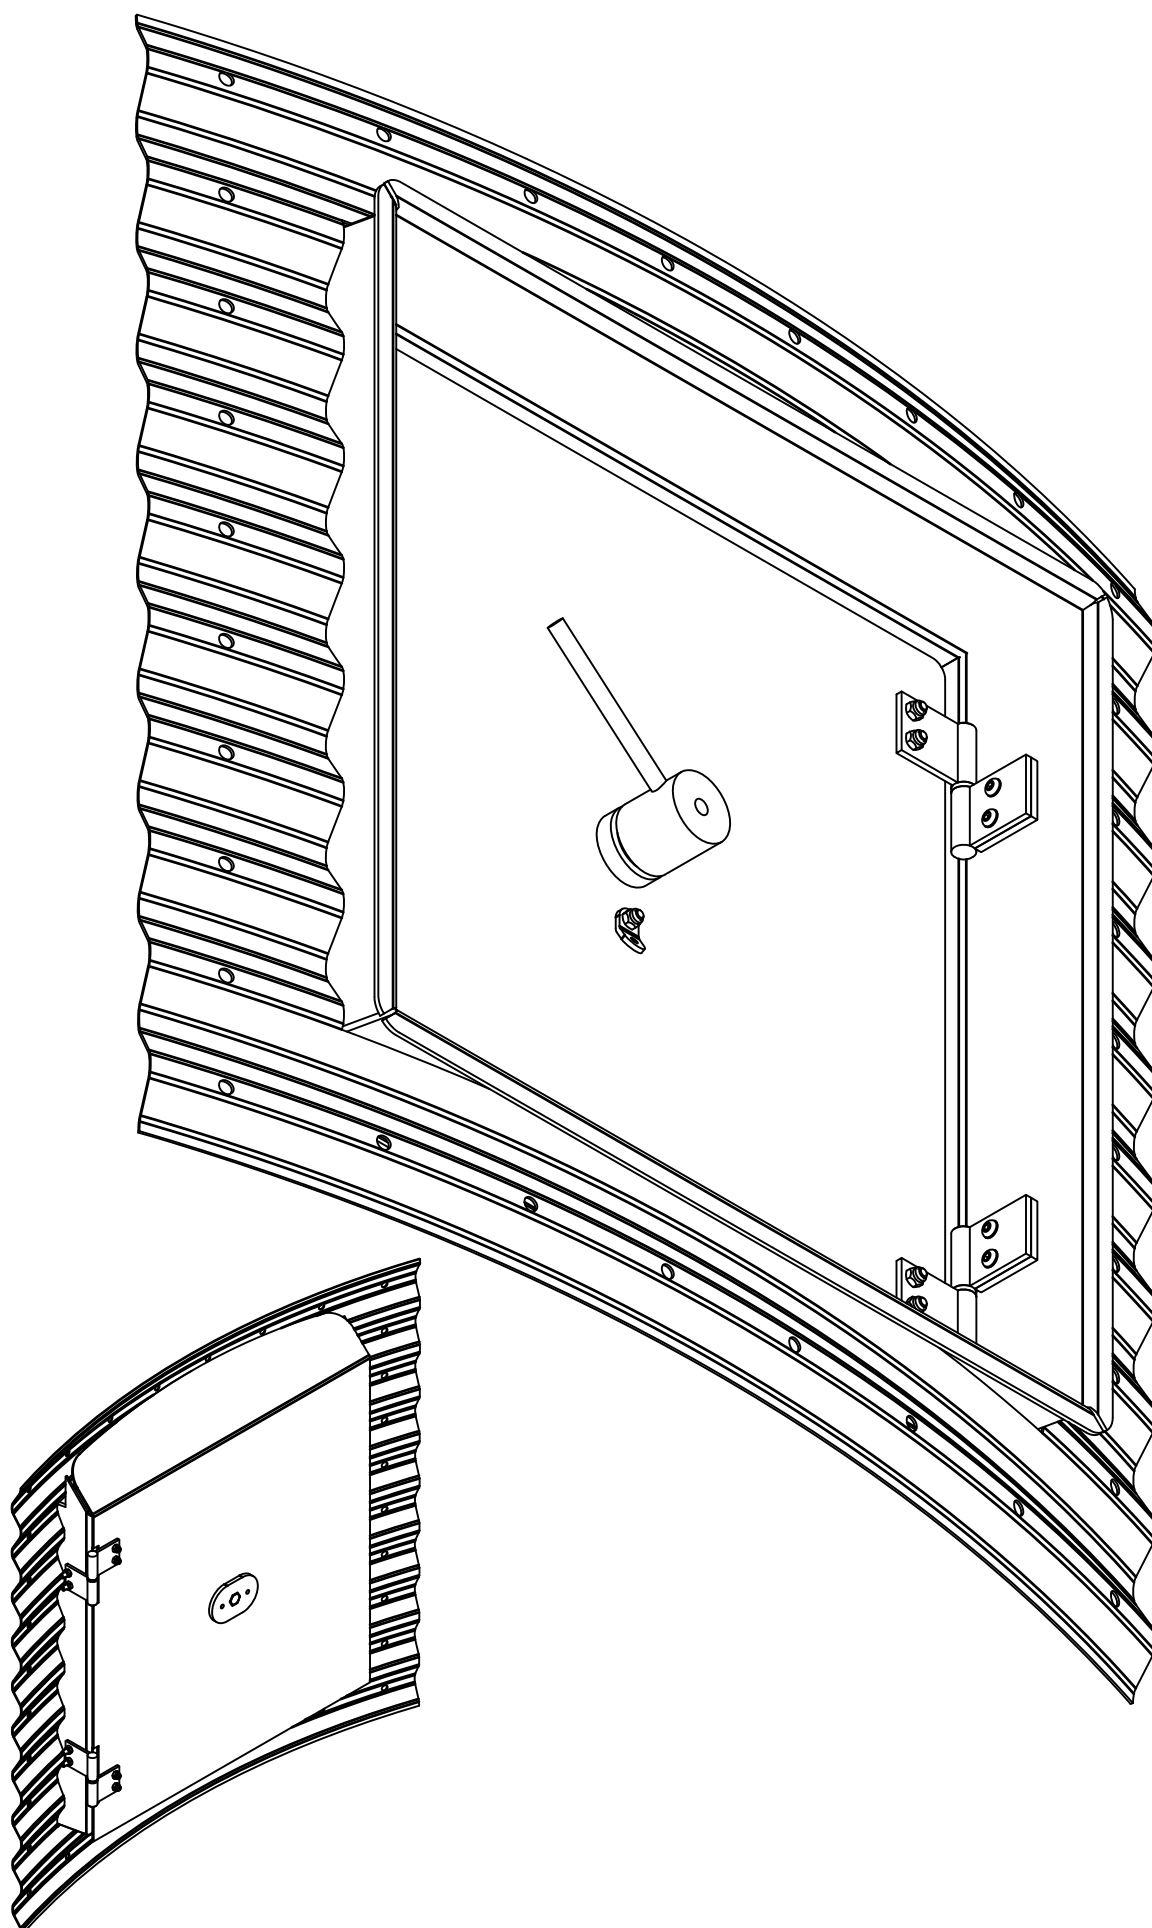


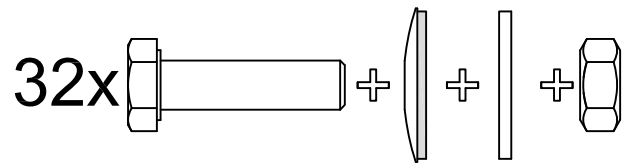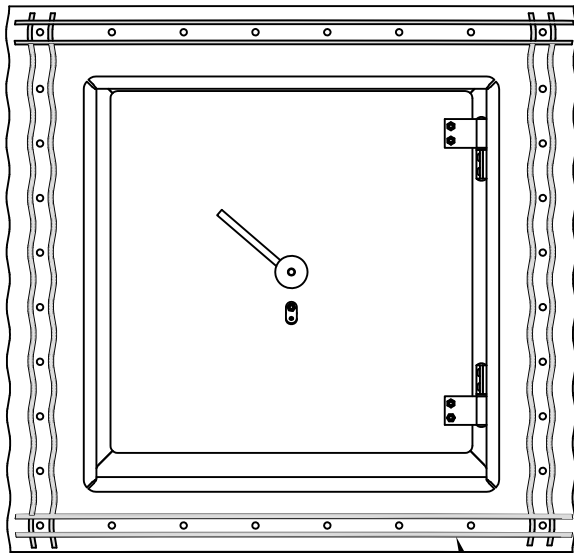

Hexagon head screw M8x30 +
rubber washer +
metal washer +
hexagon nut M8

BUTYL SEALING
STRIPS

600x600

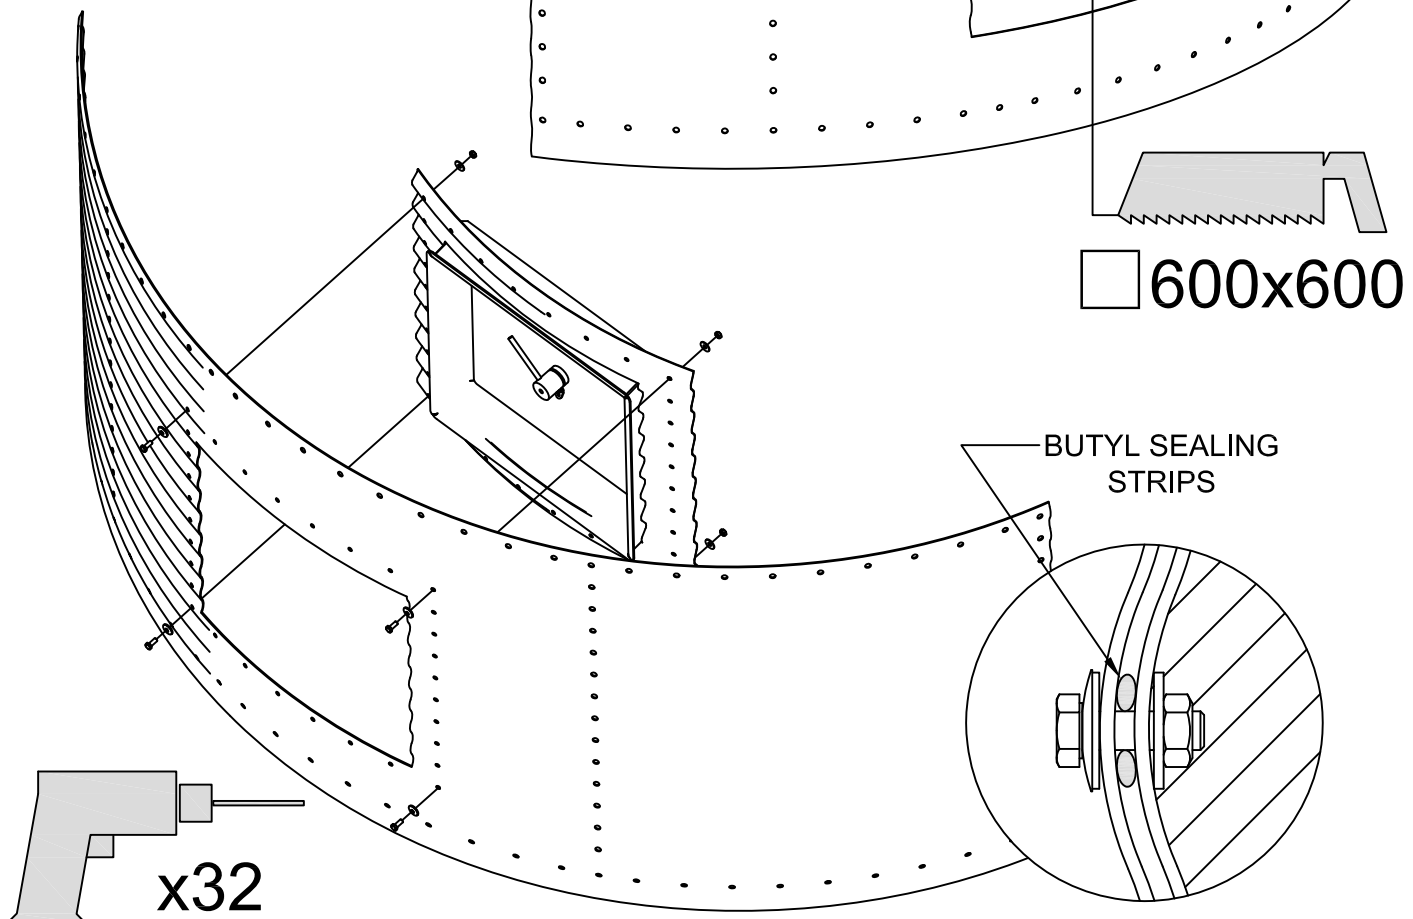


BUTYL SEALING
STRIPS

x32


Join type 1

Plasticized head screw M8x25 +
rubber washer +
metal washer +
hexagonal nut M8

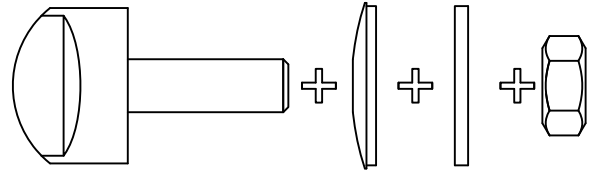


Join type 2

Plasticized head screw M8x25 +
rubber washer +
metal washer +
hexagonal nut M8

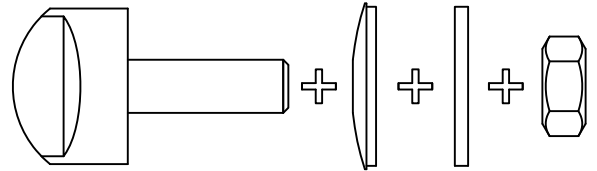


Join type 3

Plasticized head screw M10x25 +
rubber washer +
metal washer +
hexagonal nut M10

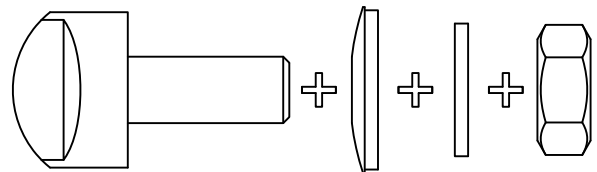


Join type 4

Hexagonal head screw M10x25 +
hexagonal nut M10

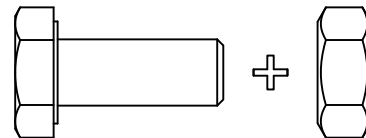


Join type 5

Plasticized head screw M8x25 +
rubber washer +
hexagonal nut M8

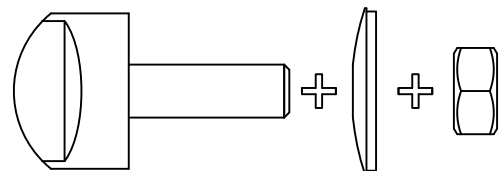

Join type 6

Hexagonal head screw M10x25 +
metal washer +
metal washer +
hexagonal nut M10

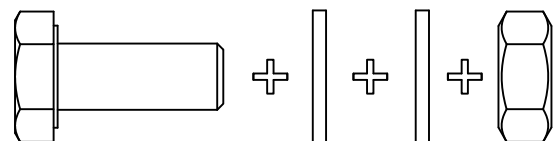


All bolts are to be tightened from the nut side only. Do not allow bolt heads to spin to avoid damages in rubber joints.

Drift punches can be used to align holes.

Before inserting the screws should be checked that in this position, both the type of joint as the direction in which you enter the screw is correct. Make sure all bolts are consistent with the pattern on the next page.

IMPORTANT: Tighten bolts with a torque wrench between 13Nm y 26Nm.

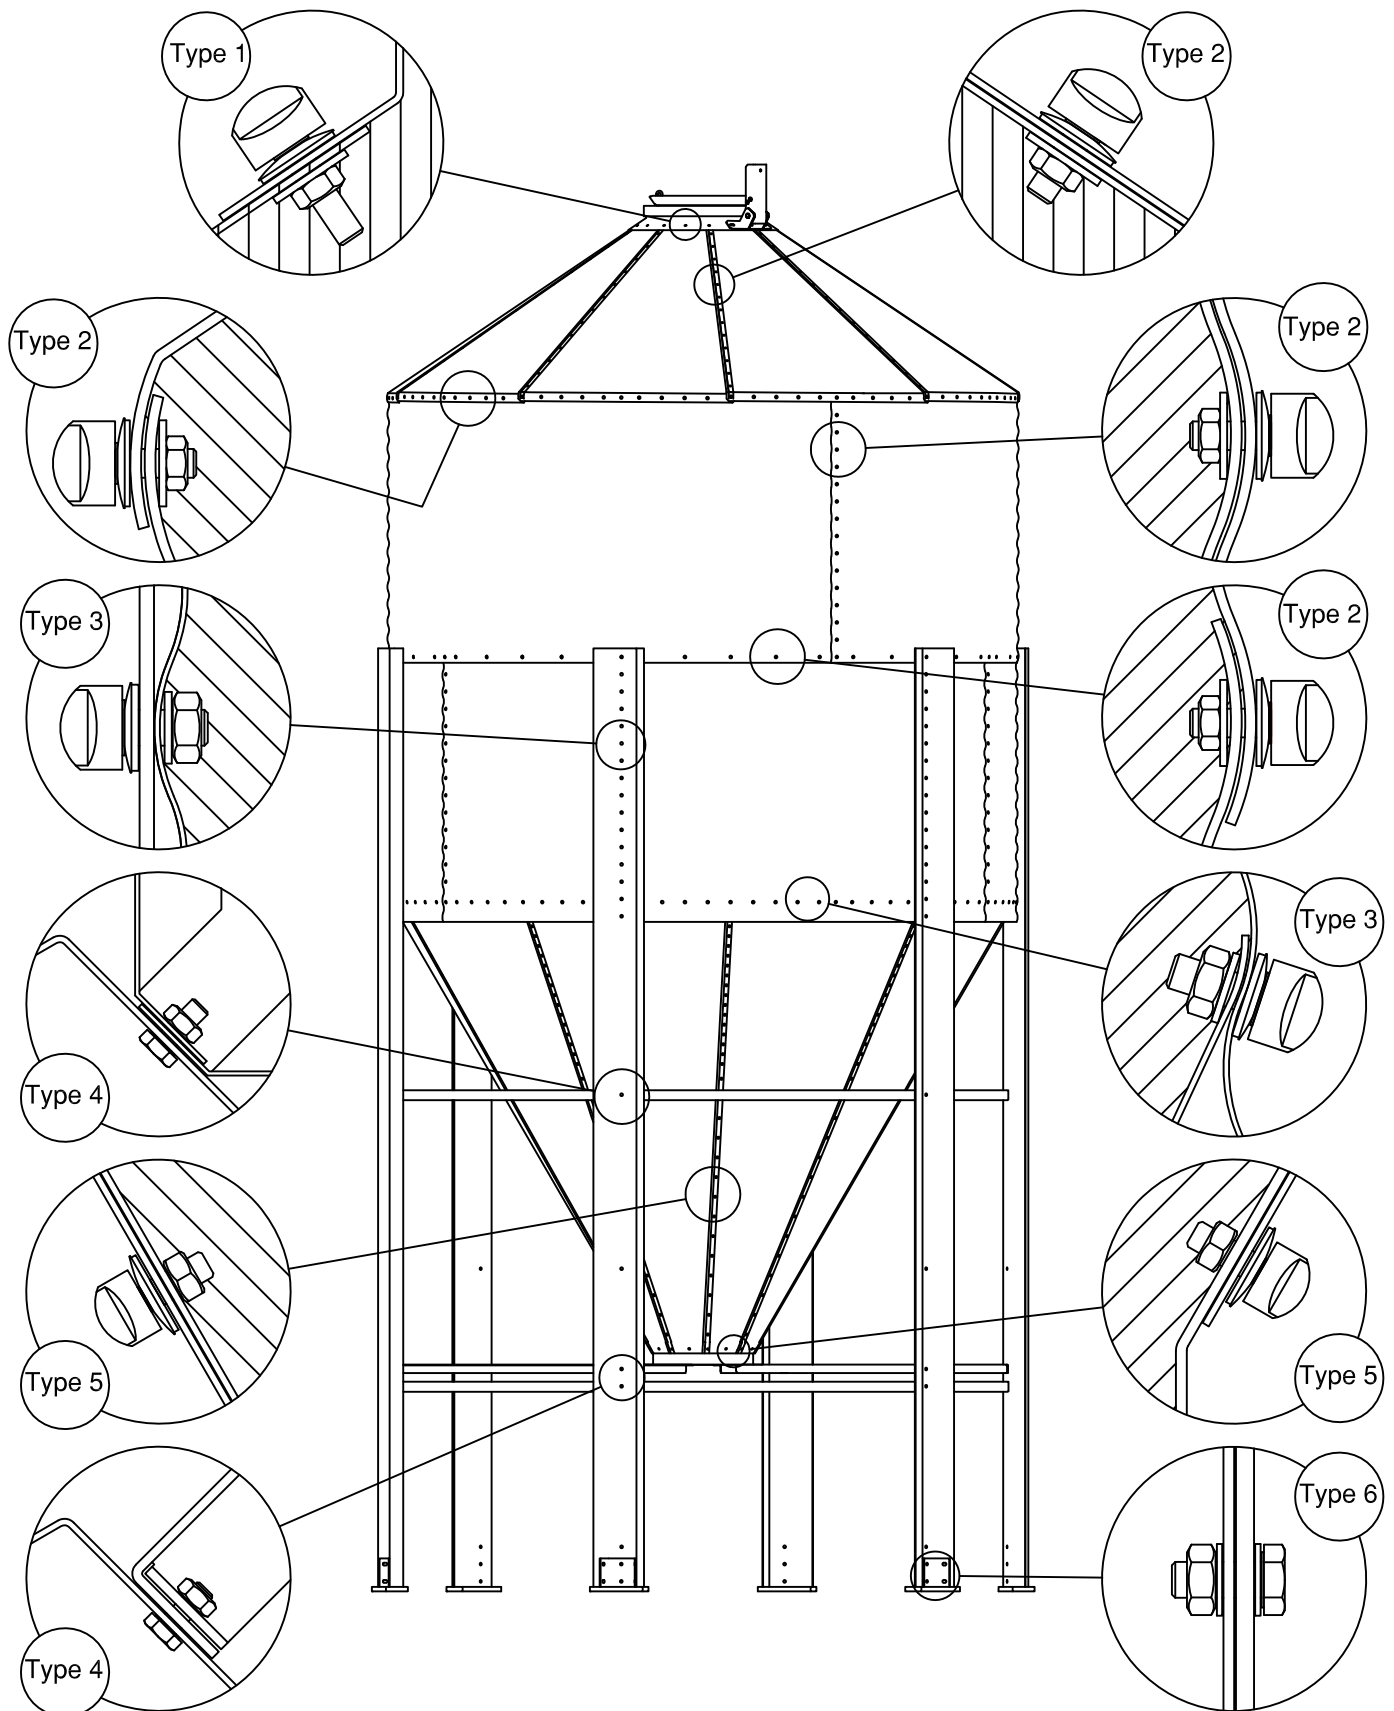

Types of joint shown by their different positions.
Bolts, nuts and washers specifications.